



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Outdoor Glider Chair (Model 84B-961V00LN) Instruction Manual

Outsunny 84B-961V00LN

Outsunny Outdoor Glider Chair Instruction Manual

Model: 84B-961V00LN

IMPORTANT SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 330 pounds.
- Ensure proper assembly according to the provided instructions to maintain stability.
- Regularly inspect the chair for any signs of wear or damage, especially when used outdoors, to prevent accidents.
- Keep children and pets away from the assembly area.
- Use on a flat, stable surface to prevent tipping.

PRODUCT OVERVIEW

The Outsunny Outdoor Glider Chair (Model 84B-961V00LN) is designed for comfortable outdoor relaxation. It features a smooth gliding mechanism, a durable steel frame, and breathable mesh fabric. This chair is suitable for various outdoor settings such as patios, gardens, and porches.



Image: The Outsunny Outdoor Glider Chair in Light Mixed Brown, showcasing its design and color.

Key Features:

- Smooth gliding motion for relaxation.
- High, tilted backrest and form-fitting seat for comfort.
- Breathable mesh fabric that dries fast and keeps you cool.
- Strong, powder-coated steel frame for durability and weather resistance.
- Supportive armrests and protective foot pads.

PACKAGE CONTENTS

Please ensure all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Chair Frame Components (various steel tubes and bars)
- Mesh Seat and Backrest Fabric
- Armrests
- Hardware Pack (bolts, washers, nuts, Allen wrench)
- Instruction Manual

SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Name	Outdoor Glider Chair
Model Number	84B-961V00LN
Color	Light Mixed Brown
Material	Alloy Steel, Mesh
Overall Dimensions (D x W x H)	30.5"D x 25.75"W x 38.25"H
Seat Height	16.25 Inches
Seat Depth	19 inches
Seat Length	21.75 Inches
Arm Height	23.5 Inches
Chair Backrest Width	21.75 Inches
Item Weight	23 Pounds
Maximum Weight Capacity	330 Pounds
Indoor/Outdoor Usage	Outdoor
Frame Material Type	Alloy Steel (Powder Coated)
Seat Material	Mesh
Required Assembly	Yes

SMOOTH GLIDING SYSTEM

Rocker arms are connected to the frame tightly to ensure smooth rocking back and forth



Image: Detailed dimensions of the Outsunny Outdoor Glider Chair, including height, width, and depth measurements.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these general steps carefully. It is recommended to have a second person assist with assembly for easier handling and stability.

- 1. Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify that all parts listed in the package contents are present.
- 2. Identify Hardware:** Separate and identify all bolts, washers, and nuts. Note that bolts may vary in length; ensure you use the correct length for each step as indicated in the detailed diagram (if provided in your physical manual).
- 3. Assemble Base Frame:** Begin by connecting the main frame components of the glider base. Do not fully tighten bolts until all parts are loosely assembled.
- 4. Attach Seat and Backrest:** Secure the mesh seat and backrest fabric to the frame. Ensure the fabric is taut and properly aligned.
- 5. Install Armrests:** Attach the armrests to the main chair frame.
- 6. Connect Gliding Mechanism:** Carefully connect the chair section to the gliding base. This step is crucial for smooth operation. Refer to the diagrams for correct orientation of the rocker arms.

7. **Final Tightening:** Once all components are assembled, gradually tighten all bolts. Ensure the chair is stable and level. Do not overtighten.
8. **Test Stability:** Before use, gently test the chair's stability and gliding motion.

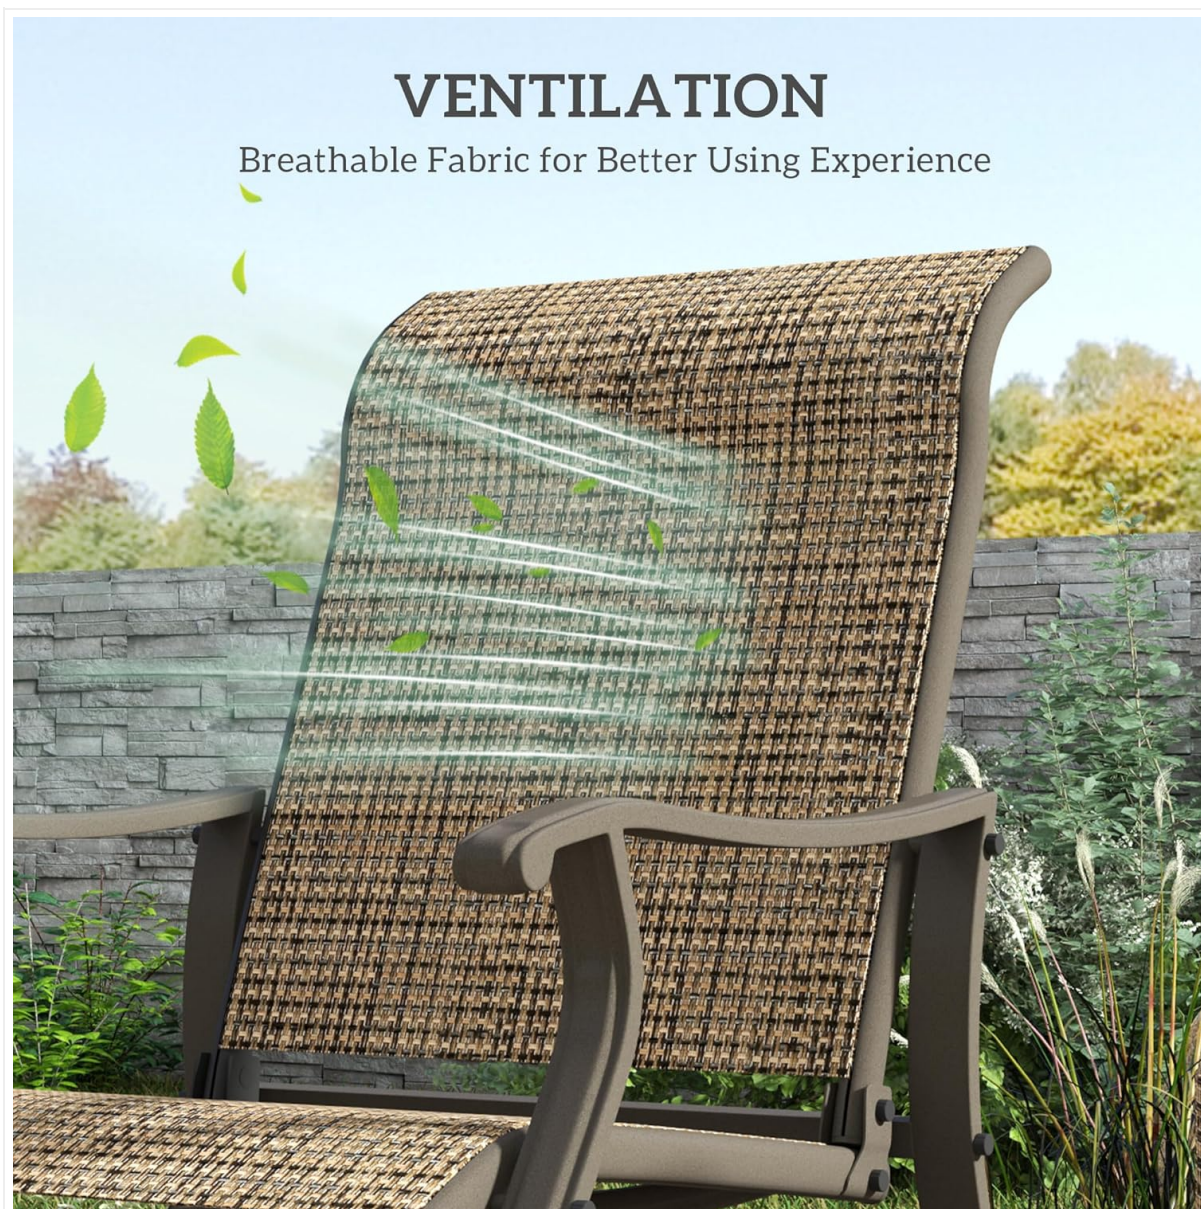


Image: A close-up view illustrating the smooth gliding system of the chair, highlighting the mechanism that allows for gentle back-and-forth motion.



ERGONOMICALLY DESIGNED



Supportive Armrest



Slightly Inclined Backrest
& Curved Seat

Image: Detail showing the powder-coated steel frame, emphasizing the sturdy construction designed for reliable daily use and weather resistance.

Your browser does not support the video tag.

Video: An official product video from Aosom Direct demonstrating the Outsunny Outdoor Glider Chair (Model 84B-961V00LN) in use, highlighting its features and smooth gliding motion.

OPERATING INSTRUCTIONS

To use your Outsunny Outdoor Glider Chair, simply sit down and gently push off with your feet to initiate the gliding motion. The chair is designed for a smooth, back-and-forth movement. Ensure the chair is placed on a level surface to prevent uneven gliding or instability.



Image: An illustration of the chair's ergonomic design, featuring supportive armrests and a slightly inclined backrest and curved seat for optimal comfort.

MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that could damage the finish or fabric.
- **Inspection:** Periodically check all bolts and connections to ensure they are tight. Retighten if necessary.
- **Storage:** During prolonged periods of non-use or severe weather, it is recommended to store the chair indoors or cover it with a protective outdoor furniture cover to extend its lifespan.
- **Fabric Care:** The breathable mesh fabric is designed to dry quickly. For deeper cleaning, follow specific fabric care instructions if provided with your product.



Image: The Outsunny Glider Chair featuring its Texteline fabric, designed for breathability and quick drying, ideal for outdoor use.

TROUBLESHOOTING

- **Chair feels 'wonky' or uneven:** Ensure the chair is placed on a completely flat and level surface. Check all assembly bolts to confirm they are securely tightened and that no parts are misaligned.
- **Squeaking during gliding:** This can often be resolved by applying a small amount of silicone-based lubricant to the moving parts of the gliding mechanism. Avoid oil-based lubricants as they can attract dirt.
- **Difficulty with assembly:** Review the assembly diagrams carefully. Pay close attention to bolt lengths and part orientation. If issues persist, contact customer support.
- **Missing or damaged parts:** Do not attempt to force assembly with incorrect or missing parts. Contact customer support immediately for replacements.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Outsunny customer service or the retailer from whom you purchased the product. Keep your purchase receipt and model number (84B-961V00LN) handy for faster service.