

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bewinner](#) /

> [Bewinner MP3 Player with Bluetooth 5.0 \(Model: Bewinnerqherk34itu-11\) User Manual](#)

## Bewinner Bewinnerqherk34itu-11

# Bewinner MP3 Player with Bluetooth 5.0

MODEL: BEWINNERQHERK34ITU-11 USER MANUAL

## 1. SAFETY INFORMATION

---

Please read and understand all safety instructions before using this device. Keep this manual for future reference.

- **Battery Safety:** Do not expose the device to extreme temperatures, direct sunlight, or fire. Do not disassemble or puncture the battery.
- **Water Exposure:** This device is not waterproof. Avoid contact with water or other liquids.
- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.
- **Disposal:** Dispose of the device and its battery responsibly according to local regulations.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Bewinner MP3 Player (Black)
- USB Charging Cable
- Wired Earphones
- User Manual
- Storage Pouch



Image: Bewinner MP3 Player with its accessories, including earphones, USB cable, and pouch.

### 3. PRODUCT OVERVIEW

---

Familiarize yourself with the device's components and controls.



Image: Front view of the Bewinner MP3 Player.

### 3.1 Front Panel Controls



Image: Close-up of the MP3 Player's front controls.

- **Screen:** Displays menus, playback information, and settings.
- **Directional Pad (Up/Down/Left/Right):** Navigation within menus.
- **Play/Pause Button (Center):** Starts/pauses playback, confirms selections.
- **Volume Up (+):** Increases volume.
- **Volume Down (-):** Decreases volume.
- **Previous Track/Rewind:** Skips to previous track, rewinds during playback.
- **Next Track/Fast Forward:** Skips to next track, fast forwards during playback.
- **M Button (Menu):** Accesses menu options, returns to previous screen.

- **Return Button (Back):** Goes back to the previous menu or screen.

### 3.2 Side and Rear Ports



Image: Rear view of the MP3 Player, showing ports and switches.

- **TF-CARD Slot:** For inserting a Micro SD card to expand storage.
- **ON/OFF Switch:** Powers the device on or off.
- **USB Port:** For charging and data transfer.
- **Headphone Jack (3.5mm):** For connecting wired earphones or headphones.

## 4. SETUP

---

### 4.1 Charging the Device

1. Connect the small end of the USB charging cable to the USB port on the MP3 player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The device will indicate charging status on the screen. A full charge typically takes 2-3 hours.

### 4.2 Powering On/Off

- **To Power On:** Slide the ON/OFF switch to the "ON" position.
- **To Power Off:** Slide the ON/OFF switch to the "OFF" position.

### 4.3 Inserting an SD Card

The device supports Micro SD cards for expanded storage (card not included).

1. Locate the TF-CARD slot on the side of the player.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.


## 5. OPERATING INSTRUCTIONS

---

### 5.1 Transferring Files (Music, Videos, E-books)

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. You can then drag and drop files directly into the appropriate folders (e.g., "Music," "Video," "E-book") on the player or SD card.

### 5.2 Music Playback

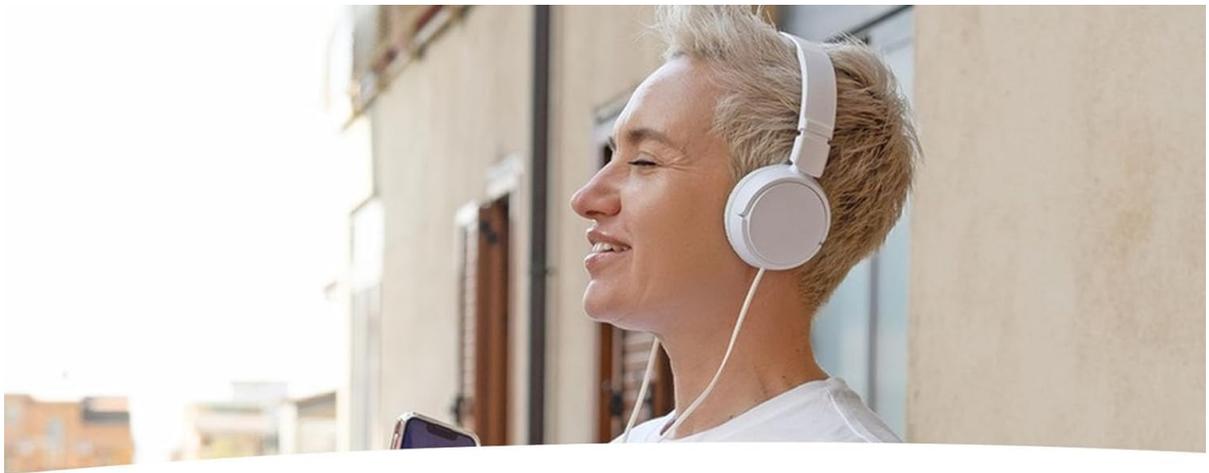

### Powerful sound decoder chip

Ensure HiFi sound quality, support MP3, WMA, OGG, APEFLAC, WAV, etc.  
Stable connection, Stronger anti interference ability, faster data transmission



Image: Illustrates the MP3 player's HiFi sound quality.

The player supports MP3, WMA, OGG, APE, FLAC, and WAV formats.

1. From the main menu, select "Music."
2. Navigate through your folders and select the desired song or album.
3. Press the Play/Pause button to start playback.
4. Use the Previous/Next buttons to skip tracks.
5. Use the Volume Up/Down buttons to adjust the volume.

## 5.3 Bluetooth Connectivity

The device features Bluetooth 5.0 for wireless audio streaming to compatible headphones or speakers.

1. From the main menu, select "Bluetooth."
2. Ensure your Bluetooth headphones or speaker are in pairing mode.
3. The MP3 player will scan for available devices. Select your device from the list.
4. Once paired, audio will be routed wirelessly.

## 5.4 FM Radio



Image: Illustrative graphic for FM Radio Player feature.


Wired earphones must be connected to act as an antenna for FM radio functionality.

1. Connect wired earphones to the 3.5mm jack.
2. From the main menu, select "FM Radio."
3. Use the directional buttons to scan for stations or manually tune.

## 5.5 Voice Recorder

1. From the main menu, select "Recorder."
2. Select "Start Recording" to begin.
3. Press the Play/Pause button to stop and save the recording.
4. Recordings are saved in the "Recordings" folder.

## 5.6 E-Book Reader

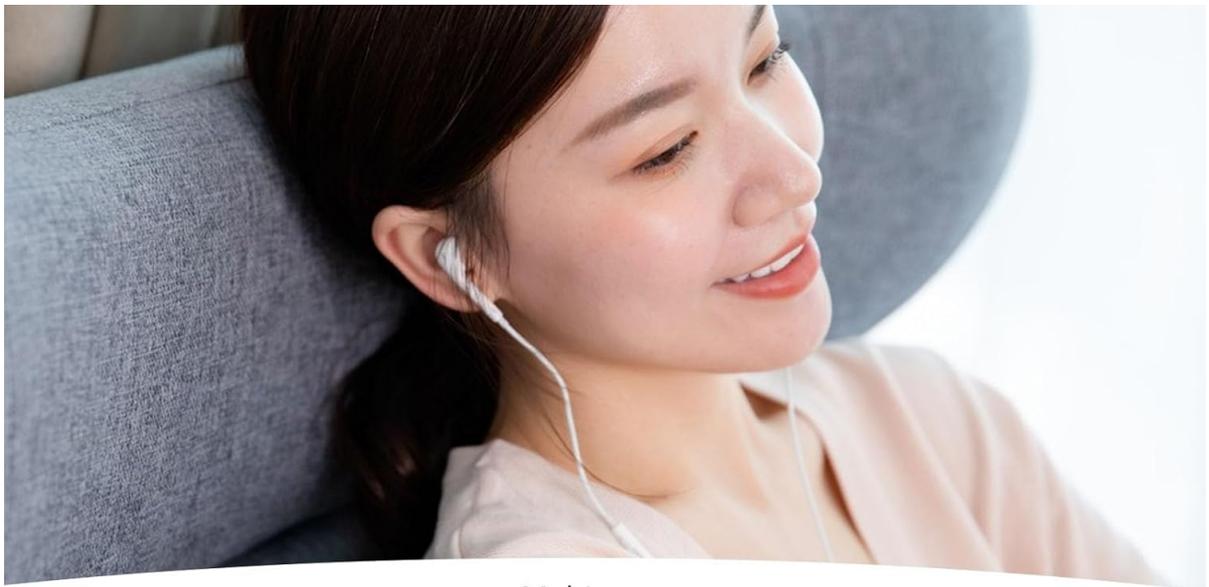

### Multi purpose

Features music, voice recording, FM radio (need to plug in wired headphones), video (need conversion tool to convert video), e book reader, etc.



Image: Illustrates the MP3 player's multi-purpose functionality, including e-book reading.

The device supports text files for e-book reading.

1. Transfer compatible text files to the "E-book" folder on the device.
2. From the main menu, select "E-book."
3. Select the desired file to open and read.

## 5.7 Video Playback

The device supports video playback, but files may require conversion to a compatible format using a conversion tool on a computer before transfer.

1. Ensure video files are in a compatible format and transferred to the "Video" folder.
2. From the main menu, select "Video."
3. Select the desired video file to play.

## 6. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## 7. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again. Check the ON/OFF switch is in the "ON" position.
No sound during playback.	Check volume level. Ensure earphones are properly connected or Bluetooth device is paired and connected. Test with different earphones.
Cannot transfer files to the device.	Ensure the USB cable is securely connected to both the device and the computer. Try a different USB port or cable. The device should appear as a removable disk.
FM Radio not working.	Ensure wired earphones are connected, as they serve as the antenna. Try rescanning for stations.
Device freezes or becomes unresponsive.	Slide the ON/OFF switch to "OFF" and then back to "ON" to restart the device.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	Bewinnerqherk34itu-11
Bluetooth Version	5.0
Supported Audio Formats	MP3, WMA, OGG, APE, FLAC, WAV
Storage	Supports Micro SD Card (up to specified capacity, not included)
Functions	Music Playback, Recording, FM Radio, Video Playback, E-book Reader
Connectivity	USB, 3.5mm Headphone Jack, Bluetooth
Color	Black
Item Weight	2.86 ounces
Package Dimensions	6.69 x 3.15 x 0.79 inches

## 9. WARRANTY AND SUPPORT

Bewinner products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your purchase or contact Bewinner customer support.

If you encounter any issues not covered in this manual, please visit the official Bewinner website or contact their customer service for assistance.

