



Manuals.plus /

› ONITOON /

› ONITOON G60 Wireless Keyboard and Mouse Combo User Manual

## ONITOON G60

# ONITOON G60 Wireless Keyboard and Mouse Combo User Manual

Model: G60

## INTRODUCTION

This manual provides instructions for the ONITOON G60 2.4GHz Wireless Keyboard and Mouse Combo. This combo is designed for use with computers, PCs, laptops, and desktops, offering a full-sized keyboard with retro round keycaps and a quiet-click mouse. Please read this manual thoroughly before use to ensure proper operation and longevity of your device.

## PACKAGE CONTENTS

- Wireless Keyboard
- Wireless Mouse
- USB Receiver (located in the mouse battery compartment)
- 2 AAA Batteries (for keyboard)
- 1 AA Battery (for mouse)
- User Manual (this document)

## SETUP INSTRUCTIONS

### 1. Battery Installation

#### For the Keyboard:

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover.

### **For the Mouse:**

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery cover.
3. Remove the USB receiver from its storage slot.
4. Insert one AA battery, ensuring correct polarity (+/-).
5. Close the battery cover.



Image: Illustration of battery compartments for the keyboard (2 AAA batteries) and mouse (1 AA battery), along with the USB receiver storage location within the mouse.

## **2. Connecting the USB Receiver**

1. Ensure the USB receiver has been removed from the mouse battery compartment.
2. Plug the USB receiver into an available USB port on your computer, PC, laptop, or desktop.
3. The system will automatically detect and install the necessary drivers. This is a plug-and-play device, so no manual driver installation is typically required.
4. Once the drivers are installed, the keyboard and mouse are ready for use.



Image: A laptop with the 2.4GHz USB receiver inserted into a USB port, demonstrating the wireless connection setup for the keyboard and mouse.

## OPERATING INSTRUCTIONS

### Basic Usage

- **Keyboard:** The full-sized keyboard features standard QWERTY layout with a numeric keypad.
- **Mouse:** The mouse offers quiet clicks for reduced noise during operation.

### Multimedia Hotkeys (FN Key Combinations)

The keyboard includes multimedia hotkeys that can be accessed by pressing the **FN** key in combination with the corresponding function key (F1-F12).

Key Combination	Function
FN + F1	Music Playback
FN + F2	Previous Song
FN + F3	Next Song
FN + F4	Volume Down
FN + F5	Volume Up
FN + F6	Mute
FN + F7	Home Page
FN + F8	Search
FN + F9	Favorites Folder
FN + F10	Mailbox
FN + F11	Lock Screen
FN + F12	My Computer
FN + ESC	Open Calculator



Image: Detailed view of the keyboard's function keys (F1-F12) and their corresponding multimedia shortcuts when used with the FN key.

## Ergonomic Design and Tilt Legs

The keyboard features foldable tilt legs on the back. These legs allow you to adjust the typing angle for a more comfortable and ergonomic experience. Extend the legs to achieve an optimal tilt.

# Reduce Typing Pressure

Adjust Typing Angle with tilt legs for optimal comfort



Image: A close-up of the keyboard's underside, highlighting the foldable tilt legs and their function in adjusting the typing angle for ergonomic comfort.

## Power Saving Mode

To conserve battery life, both the keyboard and mouse will automatically enter a sleep mode after 30 minutes of inactivity. To wake the devices, simply press any key on the keyboard or move/click the mouse.

## MAINTENANCE

### Cleaning the Keyboard

The retro round keycaps are detachable for easy cleaning. To clean:

1. Gently pull the keycaps upwards to remove them.
2. Clean the keycaps with a soft, damp cloth. For the keyboard base, use a soft brush or compressed air to remove dust and debris.
3. Ensure all parts are completely dry before reattaching the keycaps.

4. Align the keycaps with their respective switches and press down gently until they click into place.



Image: A close-up view of the keyboard with some keycaps removed, demonstrating the detachable design for cleaning purposes.

## Cleaning the Mouse

Wipe the mouse surface with a soft, slightly damp cloth. Avoid using harsh chemicals or abrasive materials.

## TROUBLESHOOTING

---

### • No Response from Keyboard/Mouse:

- Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Ensure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Move the keyboard and mouse closer to the USB receiver to rule out interference or range issues.
- Restart your computer.

### • Keys Not Registering or Delayed Response:

- This could indicate low battery. Replace the batteries in both the keyboard and mouse.
- Ensure there are no obstructions between the devices and the USB receiver.
- Avoid using the devices on metallic surfaces, which can interfere with wireless signals.

### • Mouse Cursor Jumps or Moves Erratically:

- Clean the optical sensor on the underside of the mouse.
- Ensure you are using the mouse on a suitable surface (e.g., a mouse pad). Avoid highly reflective or transparent surfaces.
- Check battery level and replace if low.

### • Connectivity Issues:

- If the connection is lost, unplug the USB receiver, wait a few seconds, and plug it back in.
- Ensure no other 2.4GHz wireless devices are causing interference nearby.

If you continue to experience issues after following these steps, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	ONITOOON
Model Number	G60
Connectivity Technology	2.4GHz Wireless
Compatible Devices	Laptop, PCs, Personal Computer
Keyboard Batteries	2 AAA batteries (included)
Mouse Batteries	1 AA battery (included)
Special Features	Retro Round Keycaps, Ergonomic Design, Plug and Play, Quiet Mouse, Bunny Theme
Keyboard Dimensions	Approximately 17.36 x 5.55 inches (44.09 x 14.1 cm)
Mouse Dimensions	Approximately 4.13 x 2.63 x 1.49 inches (10.49 x 6.68 x 3.78 cm)
Item Weight	1.7 pounds (0.77 kg)



Image: Diagram illustrating the dimensions of the ONITOOON G60 keyboard and mouse, along with battery requirements (2 AAA for keyboard, 1 AA for mouse).

## WARRANTY AND SUPPORT

For any connectivity or functionality issues, please contact ONITOOON customer service. We aim to reply within 24 hours to assist you.

Refer to your purchase documentation or the ONITOOON official website for specific warranty details.

**Contact Information:** Please refer to the seller information on your purchase platform or the ONITOOON brand store for direct contact methods.

