

[Manuals.plus](#) /

> [Dreo](#) /

> Dreo Fan for Bedroom, Table Air Circulator for Whole Room, 11 Inch, 40ft Strong Airflow, 120° adjustable tilt, 28db Low Noise, Quiet, 3 Speeds, 2025 New Desk Fan for Office, Kitchen, Home Black

Dreo DR-HAF007 Black

Dreo Table Air Circulator User Manual

Model: DR-HAF007 Black | Brand: Dreo

1. INTRODUCTION AND OVERVIEW

The Dreo DR-HAF007 Black Table Air Circulator is designed to provide powerful and quiet air circulation for your home, office, or bedroom. Featuring advanced airflow dynamics and TurboSilent Technology, it ensures efficient cooling and comfort.



Image: Front view of the Dreco Table Air Circulator Fan.

Key Features:

- **Whole Room Circulation:** Achieves full-room air circulation in as little as 3 minutes with 800 CFM powerful airflow.
- **Ultra-Long Airflow:** Delivers strong turbine wind up to 40ft, ensuring widespread air distribution.
- **Whisper-Quiet Operation:** Operates at a low noise level of 28dB, providing a peaceful environment for work or rest.
- **Adjustable Tilt:** Manual tilt range from -30° to 90°, allowing for 120° vertical airflow adjustment.
- **3 Speed Settings:** Easily adjust the fan speed with a simple twist of the knob, from a gentle breeze to a strong gust.
- **Compact & Portable:** At 11 inches high and 3.5 pounds, it's easy to move and place anywhere.

Product Overview Video:

Video: A brief overview of the Dreco Table Fan's features and design.

2. SETUP

Your Dreo Air Circulator Fan comes fully assembled and ready for use. Simply place it on a flat, stable surface near a power outlet.

Optional Wall Mounting:

The fan can also be mounted on a wall for enhanced air circulation from above. Follow these steps for wall mounting:

1. Find a brick or concrete wall and mark the position where the fan will be mounted.
2. Ensure there is an 85.5mm / 3.37" distance between the two holes.
3. Screw the plastic anchors onto the wall with a drill. Leave 1/5" of the screws exposed.
4. Hang the fan onto the exposed screws.

More Features



Image: The fan's adjustable tilt feature, useful for directing airflow.

3. OPERATING INSTRUCTIONS

The Dreo Air Circulator Fan is designed for intuitive operation with a single control knob.

Power and Speed Control:

Locate the control knob at the back of the fan. Rotate the knob to select your desired speed setting:

- **'O' (Off):** Turns the fan off.
- **'I' (Low Speed):** For a gentle breeze and quiet operation.
- **'II' (Medium Speed):** For moderate airflow and general circulation.
- **'III' (High Speed):** For powerful airflow and rapid room circulation.

Adjusting Airflow Direction:

Manually tilt the fan head to direct airflow vertically. The fan offers a 120° vertical range, from -30° (downward) to 90° (upward), allowing you to customize the air direction as needed.

Air Circulation Benefits:

- **Summer:** Use with air conditioner to provide better cooling.
- **Winter:** Use with heater to circulate warm air faster.
- **Spring & Fall:** Make the indoors as fresh and pleasant as the outdoors.

Product in Use Video:

Video: Demonstrating the Dreo Table Fan's features and quiet operation.

4. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Dreo Air Circulator Fan. Always unplug the appliance before cleaning or leaving it unused for a long period of time.

Cleaning the Front Grille and Blades:

1. Place the fan upside down on a flat surface.
2. Remove the four screws on the back using a screwdriver.
3. Turn the fan right side up and remove the front grille.
4. Use a wrench to loosen the nut on the blade assembly by rotating it as shown, then remove the assembly from the shaft.
5. Rinse the blades and the front grille under running water or with a clean, damp cloth. Ensure all parts are completely dry before reassembling your fan.
6. Align the front grille with the right point on the casing.
7. Carefully turn the fan upside down again, and install the four screws back in place.



Image: Cleaning the detachable front grille of the fan.

5. TROUBLESHOOTING

If you encounter any issues with your fan, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
My air circulator won't turn on!	Cord not connected, voltage mismatch, or blown fuse.	Make sure the cord is connected to a powered outlet and the voltage corresponds with the indicated voltage. Check and replace fuse if blown (5 Amp, 125 Volt fuse).
My air circulator is shaky and wobbling!	Not placed on a flat, level surface.	Place the air circulator on a flat, level surface.
My air circulator is making vibration and noise!	Something inserted into air inlet/outlet, or normal noise when adjusting fan head.	Be sure not to insert anything into the air inlet and outlet. It is normal that the fan makes a little noise when manually adjusting the fan head.

If your problem is not listed or still persists, please contact our Customer Support.

6. SPECIFICATIONS

- **Brand:** Dreco
- **Model Name:** DR-HAF007 Black
- **Color:** Black
- **Electric Fan Design:** Table Fan
- **Power Source:** AC
- **Product Dimensions:** 10.94"D x 7.17"W x 11.1"H
- **Noise Level:** 28 dB
- **Number of Blades:** 3
- **Air Flow Capacity:** 800 Cubic Feet Per Minute
- **Item Weight:** 3.5 Pounds
- **Number of Power Levels:** 3
- **UPC:** 810142850889

7. WARRANTY AND SUPPORT

Default 12-Month Warranty:

This appliance is covered by DREO warranty for 12 months from the date of its original purchase.

Extend Your Warranty:

You can extend your warranty by registering your new appliance on our website <https://dreo.com/warranty>

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Defects caused by external influences.
- Damage caused by non-observance of the User Manual, e.g., connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

DREO Support Center:

Phone: (888) 290-1688 (Mon-Fri, 9:00 am - 5:00 pm PST/PDT)

Email: support@dreo.com

Website: www.dreo.com