

Riflevault AKG5-132D

Riflevault 15-20 Digital Gun Safe User Manual

Model: AKG5-132D

1. INTRODUCTION

Thank you for choosing the Riflevault 15-20 Digital Gun Safe. This large, unassembled gun safe is designed to securely store rifles, pistols, and other valuables. It features a digital keypad, multiple unlocking methods, adjustable interior storage, and a dual alarm system for enhanced security. Please read this manual carefully before assembly and operation to ensure proper use and safety.



Figure 1: Riflevault 15-20 Digital Gun Safe

2. INCLUDED COMPONENTS

Before beginning assembly, please verify that all components listed below are present in your package:

- 1 x Large Unassembled Gun Safe (various panels)
- 2 x Emergency Keys
- 4 x Expansion Screws (for wall mounting)
- 3 x Gun Racks (adjustable)
- 1 x Magnetic Light
- 1 x User Manual (this document)
- Necessary assembly hardware (screws, screwdriver)



Figure 2: Accessories and Wall Mounting Hardware

3. SETUP AND ASSEMBLY

The Riflevault gun safe is designed for unassembled delivery to facilitate easier transport. Assembly is required. All parts are clearly labeled, and necessary accessories are included. An electric drill is recommended to expedite the installation process.

3.1 Assembly Steps

1. **Left Side Plate Installation:** Attach the left side panel to the back plate.
2. **Right Side Plate Installation:** Attach the right side panel to the back plate.
3. **Door Installation:** Secure the door frame to the assembled side and back plates.
4. **Top Plate Installation:** Place and secure the top plate.
5. **Fix the Bottom Plate:** Secure the bottom plate to the structure.
6. **Middle Vertical Plate Installation:** Install the middle vertical divider.
7. **Small Dividers Installation:** Insert the smaller shelf dividers as needed.
8. **Compartment Dividers Installation:** Arrange the remaining compartment dividers.

For a visual guide, please refer to the official assembly video:

Video 1: Assembly Guide for Riflevault Gun Safe. This video provides step-by-step instructions for assembling the gun safe components.



Figure 3: How to Assemble the Gun Safe

3.2 Wall Mounting

For added security, the safe can be wall-mounted using the provided expansion screws. Ensure you locate wall studs for secure installation.

- **Step 1:** Mark the drilling points on the wall using the safe's pre-drilled holes as a template.
- **Step 2:** Drill pilot holes at the marked points.
- **Step 3:** Secure the safe to the wall using the expansion screws.

4. OPERATING INSTRUCTIONS

4.1 Unlocking Methods

The Riflevault Digital Gun Safe offers three convenient ways to access your contents:

1. **Password + Knob (Daily Use):** Enter your programmed digital password on the backlit keypad, then turn the knob to open the safe.
2. **Key + Knob (Emergency Override):** In case you forget your password or the battery runs out, insert the emergency key into the hidden keyhole, turn it, and then turn the knob. *Always keep emergency keys in a secure location outside the safe.*
3. **USB Type-C Cable + Password + Knob (Battery Depleted):** If the battery is completely depleted, connect a USB Type-C cable to an external power source and the safe's port. Then, enter your password and turn the knob.



Figure 4: Three Ways to Access the Safe

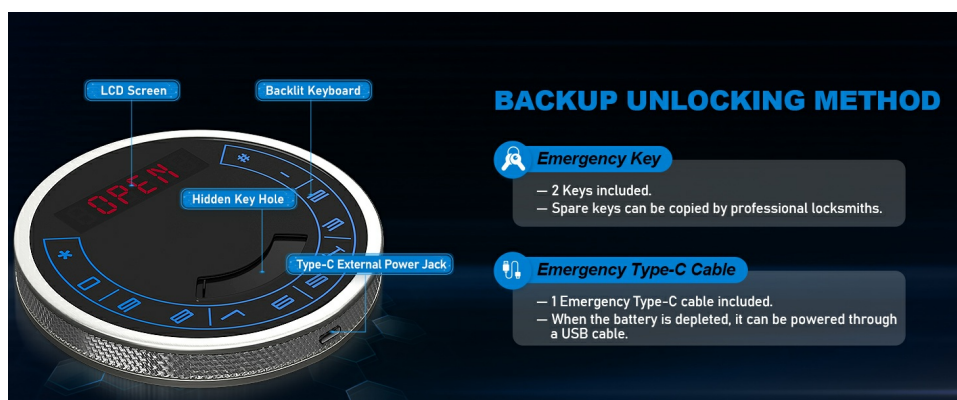


Figure 5: Backup Unlocking Methods

4.2 Backlit Keypad & LED Light

The safe is equipped with a backlit keypad for easy visibility and operation in low-light conditions. When the safe is opened with the correct password, the internal LED light will automatically illuminate, allowing you to quickly locate items inside. An additional magnetic LED light is also provided for convenience.

4.3 Dual Alarm and Mute Function

The safe features a dual alarm system for enhanced security:

- **Incorrect Password Alarm:** If 5 consecutive incorrect passwords are entered, a 70-decibel alarm will sound for 30 seconds. The alarm can be stopped by entering the correct password.
- **Vibration Alarm:** The alarm will also activate if the safe detects violent vibrations or attempts at forced entry.
- **Mute Function:** For silent operation, you can activate the mute function to disable audible feedback from the keypad and alarm.



Figure 6: Dual Alarm System and Mute Function

5. FEATURES AND STORAGE

5.1 Large Capacity and Adjustable Interior

The safe's external dimensions are 17.72"D x 22.83"W x 51.96"H, providing ample space to accommodate up to 10 rifles measuring up to 50 inches tall, with or without scopes. The interior is designed for versatile organization:

- **Adjustable Gun Racks:** Three adjustable gun racks allow you to customize their height and position to fit various firearm types.
- **Removable Shelves:** Three removable and adjustable shelves on the left side offer flexibility to customize storage space height for accessories, ammunition, or other valuables.
- **Top Shelf with Slots:** The top shelf includes special slots for effortless storage of long guns without needing to remove the shelf.
- **Door Organizer:** The interior of the door features pistol pouches, magazine clip holders, and a storage bag for small items.

LARGE CAPACITY STORAGE SPACE



Figure 7: Large Capacity Storage Space

PRODUCT DETAILS



Figure 8: Product Details and Interior Layout



Figure 9: Removable and Adjustable Shelves

5.2 Anti-Prying Design

The safe is constructed with robust materials and design features to deter unauthorized access:

- **Thick Steel Door:** Features a 60mm thick pry-resistant steel door.
- **Solid Locking Bolts:** Equipped with 20mm diameter solid steel bolts for secure locking.
- **External Hinge Design:** Allows the door to open a full 180 degrees, providing easier access to contents.



Figure 10: Anti-Prying Design

6. MAINTENANCE

To ensure the longevity and optimal performance of your Rifflevault gun safe, follow these maintenance guidelines:

- Regularly clean the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- Check the battery level of the digital keypad periodically and replace batteries as needed to prevent lockout.

- Keep the emergency keys in a safe, accessible location separate from the safe itself.
- Ensure the locking bolts and hinges operate smoothly. Lubricate if necessary with a light, non-corrosive lubricant.
- Avoid placing heavy objects on top of the safe that could obstruct the door mechanism.

7. TROUBLESHOOTING

If you encounter any issues with your safe, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keypad not responding	Dead batteries	Replace batteries or use USB Type-C external power.
Safe won't open with password	Incorrect password entered; keypad malfunction	Ensure correct password. Use emergency key or USB Type-C power.
Alarm sounds unexpectedly	Incorrect password attempts; strong vibration detected	Enter correct password to stop alarm. Check for external impacts.
Door is stiff or difficult to close/open	Obstruction; misaligned components; lack of lubrication	Check for obstructions. Ensure safe is level. Lubricate hinges and bolts.

If the issue persists, please contact Riflevault customer service for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Riflevault
Model Name	AKG5-132D
Product Dimensions (D x W x H)	17.72" x 22.83" x 51.96"
Lock Type	Electronic, Key
Color	Black
Material	Alloy Steel
Special Features	Adjustable Gun Rack, Adjustable Shelf, Heavy Duty, Lockable, Backlit Keypad, Dual Alarm, Mute Function
Mounting Type	Wall Mount
Item Weight	85.98 Pounds

9. WARRANTY AND SUPPORT

The Riflevault 15-20 Digital Gun Safe comes with a **1 Year Manufacturer Warranty**.

For any questions regarding assembly, operation, or troubleshooting, please do not hesitate to contact Riflevault

customer service. We offer 24/7 customer support and are committed to assisting you promptly.

Contact Information: Please refer to the product packaging or the official Rifevault website for the most up-to-date customer service contact details.