

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOMERY](#) /

› [KOMERY G7A 4K Digital Camera User Manual](#)

## KOMERY G7A Digital Camera

# KOMERY G7A 4K Digital Camera User Manual

Model: G7A Digital Camera

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your KOMERY G7A 4K Digital Camera. This compact camera is designed for photography and video recording, offering 4K video capabilities and 64MP still images. It features an autofocus system, 18X digital zoom, and a 2.8-inch IPS HD screen, making it suitable for various users, including beginners.

## 2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- KOMERY G7A Digital Camera
- 32GB SD Card
- USB-C Cable
- Storage Bag
- Rechargeable Batteries (x2)

# WellTone

7cm  
2.75inch

2.5cm  
1inch



11cm  
4.33inch



Image: Camera dimensions and included accessories.

### 3. PRODUCT OVERVIEW

The KOMERY G7A features a user-friendly design with essential controls for capturing photos and videos.



Image: Front and rear view of the KOMERY G7A Digital Camera.

### Key Components:

- **Lens:** Main optical component for image capture.
- **Flash:** Provides illumination in low-light conditions.
- **2.8-inch IPS HD Screen:** For viewing live feed, playback, and menu navigation.
- **Shutter Button:** Activates autofocus and captures photos/starts video recording.
- **W/T Button:** Controls digital zoom (Wide/Telephoto).
- **Menu Button:** Accesses camera settings and options.
- **OK Button:** Confirms selections.
- **Directional Buttons:** Navigate menus and adjust settings.
- **USB-C Port:** For charging and data transfer.
- **Battery Compartment:** Houses the rechargeable battery.
- **SD Card Slot:** For inserting the memory card.

## 4.1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert one of the provided rechargeable batteries, ensuring the correct orientation according to the polarity indicators.
3. Close the battery compartment cover securely. Ensure the battery is held firmly to prevent connection issues.

## 4.2. SD Card Installation

1. Locate the SD card slot, typically on the side or bottom of the camera.
2. Insert the included 32GB SD card into the slot until it clicks into place. Ensure the card is inserted in the correct direction.
3. It is recommended to format the SD card through the camera's menu before first use to ensure compatibility and optimal performance.

## 4.3. Charging the Battery

1. Connect the camera to a power source (e.g., computer USB port, USB wall adapter) using the provided USB-C cable.
2. The charging indicator light will illuminate.
3. Charging is complete when the indicator light changes or turns off. A full charge provides approximately 240 minutes of continuous video recording or 30,000 photos.

# 5. OPERATING INSTRUCTIONS

## 5.1. Power On/Off

Press and hold the power button to turn the camera on or off.

## 5.2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.8-inch IPS HD screen.
3. Half-press the shutter button to activate autofocus. The camera will focus on the subject.
4. Fully press the shutter button to capture the 64MP image.

# Take pictures more clearly

4K Ultra HD Video Recording



64 million camera pixels



Super Clear  
display



Image: Examples of clear photo and video capture with the camera.

## 5.3. Autofocus Function

The camera features an autofocus mode to ensure clear and sharp images. Half-pressing the shutter button initiates the autofocus process. Compare the clarity:

# Autofocus Camera

Half-press the shutter button for autofocus



Image: Demonstration of autofocus effectiveness.

## 5.4. Recording Videos

1. Switch to video mode via the camera's menu.
2. Press the shutter button to start recording 4K video.
3. Press the shutter button again to stop recording.

## 5.5. Digital Zoom

While in photo or video mode, press the **W** button to zoom out (wide) or the **T** button to zoom in (telephoto) up to 18X digitally.

## 5.6. Flash and Fill Light

The camera includes both a pop-up flash and a fill light for improved illumination in dark environments. These can be activated or deactivated through the camera settings to suit lighting conditions.

# 20 Filter Effects

A wide variety of filter styles



Image: Demonstration of flash functionality and various filter effects.

## 5.7. Self-Timer and Time-Lapse

Utilize the self-timer function for delayed shots, with options for 3, 5, 10, or 20 seconds. This is useful for group photos or time-lapse sequences.

# Time-lapse camera

Capture your every wonderful moment



Image: Self-timer and time-lapse photography examples.

## 5.8. Creative Filters

The camera offers 20 creative filters to enhance your photos directly. Access these options through the camera's menu.

## 5.9. Webcam Function

Connect the camera to a computer using the USB-C cable to switch to webcam mode. This allows the camera to be used for video calls, live streaming, or online teaching.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camera in the provided storage bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove the battery if the camera will not be used for an extended period.

- **Protective Case:** The camera comes with a high-quality protective silicone leather case to guard against minor impacts.

## 7. TROUBLESHOOTING

### 7.1. Camera Does Not Turn On

- Ensure the battery is correctly inserted and fully charged.
- Check for proper battery contact within the compartment.
- If using a new battery, ensure any protective film has been removed.

### 7.2. Blurry Images

- Ensure autofocus is engaged by half-pressing the shutter button before fully pressing it.
- Check for sufficient lighting. Use the flash if necessary.
- Clean the camera lens if it appears smudged.

### 7.3. SD Card Error

- Ensure the SD card is inserted correctly and fully.
- Try formatting the SD card through the camera's menu (this will erase all data).
- If the issue persists, try a different compatible SD card.

### 7.4. Camera Not Recognized as Webcam

- Ensure the USB-C cable is securely connected to both the camera and the computer.
- Verify that the camera is in webcam mode (this usually prompts upon connection).
- Try a different USB port on your computer.

## 8. SPECIFICATIONS

Feature	Specification
Model Name	G7A 4K Digital Cameras
Effective Still Resolution	64 MP
Video Resolution	4K UHD 2160p
Digital Zoom	18x
Autofocus	Yes (Hybrid AF)
Screen Size	2.8 inches (IPS HD LCD)
Photo Sensor Technology	CMOS (1/2.7-inch)
Image Stabilization	Digital
Supported File Format	JPEG (Photos), MP4 (Video)
Memory Storage Capacity	32 GB (SD Card included)

Battery Capacity	750 mAh Lithium Polymer
Battery Average Life	240 minutes (video)
Connectivity Technology	USB-C
Item Weight	4.96 ounces
Dimensions (D x W x H)	4.15" x 2.64" x 0.98"
Special Features	Time-Lapse, Continuous Shooting, Creative Filters, Webcam Function

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official KOMERY website. You may also contact the seller directly for assistance.

