

## JB906

# Generic JB906 USB Gaming Controller User Manual

Model: JB906 | Brand: Generic

## INTRODUCTION

This manual provides detailed instructions for the Generic JB906 USB Gaming Controller. Please read this manual thoroughly before using the device to ensure proper operation and to maximize your gaming experience. Keep this manual for future reference.

## PRODUCT OVERVIEW

The Generic JB906 is a versatile USB gaming controller designed for use with various gaming platforms, including PCs and laptops. It features turbo functionality and vibration feedback for an immersive gaming experience.



**Image 1:** Front view of the Generic JB906 USB Gaming Controller. The controller is white with black textured grips, black analog sticks, and colored action buttons (1, 2, 3, 4) on the right, and a black D-pad on the left. Central buttons include SELECT, START, and MODE. A USB cable extends from the top.

### Key Features:

- Turbo Functionality: Allows for rapid, repeated input of a button press.
- Vibration Feedback: Enhances immersion with tactile responses to in-game actions.
- USB Connectivity: Ensures broad compatibility with PCs and laptops.
- Ergonomic Design: Provides comfortable grip for extended gaming sessions.

## PACKAGE CONTENTS

Please check the package for the following items:

- Generic JB906 USB Gaming Controller (1 unit)
- User Manual (this document)

If any items are missing or damaged, please contact your retailer.

## SETUP

---

1. **Connect the Controller:** Plug the USB cable of the JB906 controller into an available USB port on your PC or laptop.
2. **Driver Installation:** For most modern operating systems (Windows 7/8/10/11), the necessary drivers will install automatically. Wait for the "Device is ready to use" notification. If drivers do not install automatically, visit the manufacturer's support website (if available) for manual driver downloads.
3. **Test Connection:** After installation, you can test the controller by navigating to your operating system's game controller settings (e.g., in Windows, search for "Set up USB game controllers" in the Start menu). Here, you can calibrate the controller and test button inputs and analog stick movements.

## OPERATING INSTRUCTIONS

---

### Basic Controls:

- **Analog Sticks:** Used for precise movement and camera control in games.
- **D-Pad (Directional Pad):** Used for directional input, often for menu navigation or specific game actions.
- **Action Buttons (1, 2, 3, 4):** Primary interaction buttons for in-game actions.
- **Shoulder Buttons (L1, R1, L2, R2):** Located on the top of the controller, used for various in-game functions.
- **SELECT Button:** Often used for menu access or secondary functions.
- **START Button:** Typically used to pause games or confirm selections.
- **MODE Button:** May switch between different controller modes or input types depending on the game or system. Refer to your game's instructions for specific usage.

### Turbo Function:

The turbo function allows a button to be pressed repeatedly as long as it is held down, without needing to rapidly tap it. This can be useful for certain in-game actions.

1. **To Activate Turbo:** Press and hold the **TURBO** button, then press the desired action button (e.g., Button 1). The action button will now have turbo enabled.
2. **To Deactivate Turbo:** Press and hold the **TURBO** button again, then press the same action button. The turbo function for that button will be disabled.

### Vibration Feedback:

The controller's vibration motors will activate automatically in games that support vibration feedback. There is no manual activation required for this feature. The intensity of the vibration is typically controlled by the game itself.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the controller. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on top of the controller.
- **Cable Care:** Do not pull on the USB cable forcefully. Always grasp the plug when disconnecting the controller. Avoid bending or kinking the cable sharply.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller not recognized by PC/Laptop.	<ul style="list-style-type: none"> <li>• Loose USB connection.</li> <li>• Faulty USB port.</li> <li>• Driver issue.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the USB cable is securely plugged in.</li> <li>• Try a different USB port.</li> <li>• Restart your computer.</li> <li>• Check Device Manager for driver status; reinstall if necessary.</li> </ul>
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none"> <li>• Controller not properly calibrated.</li> <li>• Game settings not configured for controller.</li> <li>• Hardware malfunction.</li> </ul>	<ul style="list-style-type: none"> <li>• Calibrate the controller through your operating system's game controller settings.</li> <li>• Verify game settings to ensure controller input is enabled and mapped correctly.</li> <li>• Test the controller on another computer if possible.</li> </ul>
Vibration feedback is not working.	<ul style="list-style-type: none"> <li>• Game does not support vibration.</li> <li>• Vibration setting disabled in game.</li> <li>• Driver issue.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the game you are playing supports vibration feedback.</li> <li>• Check in-game settings to ensure vibration is enabled.</li> <li>• Verify controller drivers are up to date.</li> </ul>

## SPECIFICATIONS

- **Model:** JB906
- **Connectivity:** USB Wired
- **Features:** Turbo Function, Vibration Feedback
- **Compatible Platforms:** PC, Laptop (Windows OS recommended)
- **Item Weight:** 0.25 grams (Note: This weight seems unusually low for a controller, likely a data entry error. Actual weight may vary.)
- **Release Date:** December 31, 2021

## WARRANTY AND SUPPORT

This product is typically covered by a standard manufacturer's warranty. Please refer to your purchase receipt or contact your retailer for specific warranty terms and conditions. For technical support or further assistance, please contact the retailer or the manufacturer's customer service department. For general inquiries, you may also refer to online resources or community forums related to USB gaming controllers.

