

VT3T45UAAE64HRAL3

Foot Massager Machine User Manual

Model: VT3T45UAAE64HRAL3 | Brand: Generic

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Generic Foot Massager Machine. This device is designed to provide a relaxing and therapeutic foot massage experience in the comfort of your home. It features adjustable intensity, multiple massage modes, and a heating function to help alleviate foot fatigue and promote relaxation. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1.1: User enjoying the foot massager in a home setting.

2. SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury, always follow these basic safety precautions:

- Read all instructions before using this appliance.
- Do not use while sleeping or drowsy.
- Do not use on infants, invalids, or on a sleeping or unconscious person.
- Do not use on sensitive skin or on a person with poor blood circulation.
- Never operate the appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Do not use outdoors.

- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the OFF position, then remove the plug from the outlet.
- This appliance is intended for household use only.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

3. PRODUCT OVERVIEW

3.1 Components

The Foot Massager Machine consists of the main unit, foot inserts, and a control panel.



Figure 3.1: Top view of the Foot Massager Machine with control panel.

3.2 Control Panel

The control panel features an HD digital display and several touch-sensitive buttons for easy operation.



Figure 3.2: Detailed view of the control panel and digital display.

Time Button: Adjusts the massage duration (10, 15, 20, 25, 30 minutes).

Air Button: Controls the airbag wrap massage function.

Mode Button: Cycles through different massage modes (6 techniques, 3 overall modes).

Intensity Button: Adjusts massage intensity (3 levels).

Heating Button: Activates or deactivates the heating function.

Power Button: Turns the unit ON/OFF.

3.3 Massage Features

- **360° Full Wrap Massage:** Utilizes airbags on top of the foot (covering 55% of foot area) and ankle airbags to press, circulate, and knead, providing comprehensive comfort and relieving Achilles tendon pain.
- **Simulated Human Massage:** Accurately acts on the soles of your feet with 6 major massage modes.
- **Warm and Hot Compress:** Provides constant temperature heating between 37-40°C (98.6-104°F) for deep

relaxation.



Figure 3.3: Illustration of the 360° Full Wrap Massage technology.

4. SETUP

1. **Unpack:** Carefully remove the foot massager from its packaging. Ensure all components listed in the packing list (Foot Massager, US Adapter, English Instruction Manual) are present.
2. **Placement:** Place the foot massager on a flat, stable surface in a comfortable area, such as a living room or bedroom. Ensure there is enough space around the unit for proper ventilation.
3. **Connect Power:** Insert the power adapter into the power input port on the back or side of the massager. Plug the other end of the adapter into a standard 110-240V electrical outlet.
4. **Prepare for Use:** Ensure the removable foot covers are properly installed inside the foot inserts.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Power On:** Press the **Power** button on the control panel to turn on the unit. The digital display will illuminate.
2. **Insert Feet:** Sit comfortably and place both feet into the foot inserts of the massager.
3. **Select Mode:** Press the **Mode** button to cycle through the available massage modes. The display may indicate the current mode.
4. **Adjust Intensity:** Press the **Intensity** button to select your desired massage strength (3 levels available).
5. **Activate Heating:** Press the **Heating** button to turn on the warming function. The heating temperature ranges from 37-40°C (98.6-104°F). Press again to turn off.
6. **Set Timer:** Press the **Time** button to set the desired massage duration (10, 15, 20, 25, or 30 minutes). The unit will automatically shut off after the selected time.
7. **Airbag Massage:** Press the **Air** button to activate or deactivate the airbag compression massage.
8. **Power Off:** When finished, press the **Power** button to turn off the unit. Remove your feet from the massager.



Figure 5.1: The foot massager can be used in various settings for relaxation.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The foot covers are removable and washable. Gently pull them out for cleaning. Hand wash with mild soap and water, then air dry completely before reinserting.
- Do not immerse the unit in water or any other liquid.

HUMANIZED DESIGN, MORE CONSIDERATE

1 Removable and washable
foot cover



2 Foot pad design prevents
scratching the floor



3 ABS material shell
environmentally
friendly and healthy



Figure 6.1: Key design features for easy maintenance and durability.

6.2 Storage

- Store the massager in a cool, dry place when not in use.

- Avoid placing heavy objects on the unit.
- Keep the power cord neatly coiled and avoid sharp bends.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not properly connected. No power from outlet.	Ensure the power cord is securely plugged into both the unit and the wall outlet. Test the outlet with another device.
Massage intensity feels too weak/strong.	Intensity setting is not optimal.	Press the Intensity button to adjust to one of the 3 available levels.
Heating function is not working.	Heating function is not activated.	Press the Heating button to turn on the heating function. Allow a few minutes for the heat to build up.
Airbag massage is not active.	Airbag function is not activated.	Press the Air button to activate the airbag massage.
Unit stops unexpectedly.	Timer has expired. Overheating protection activated.	The unit automatically shuts off after the set timer duration. Unplug the unit and let it cool down for 30 minutes before restarting.

8. SPECIFICATIONS

Product Name	Foot Massager Machine
Model Number	VT3T45UAAE64HRAL3
Brand	Generic
Material	PP, Metal, ABS
Voltage	110-240V
Power	26W
Timing Options	10, 15, 20, 25, 30 minutes
Heating Temperature	37-40°C (98.6-104°F)
Product Dimensions (L x W x H)	38 x 26 x 40 cm (14.96 x 10.24 x 15.75 inches)
Product Weight	2.5 kg (5.5 lbs) / 7.19 Pounds
Country of Origin	China



Figure 8.1: Product dimensions overview.

9. WARRANTY & SUPPORT

This product is manufactured by Generic. For any questions regarding product operation, maintenance, or troubleshooting that are not covered in this manual, please refer to the seller or retailer from whom you purchased the product for support. Please retain your purchase receipt as proof of purchase for any warranty claims. Specific warranty terms may vary by retailer or region.

