

[Manuals.plus](#) /

› [ELECTRO WOLF](#) /

› ELECTRO WOLF Wireless Retractable Gamepad BSP-D3 User Manual

ELECTRO WOLF BSP-D3

ELECTRO WOLF Wireless Retractable Gamepad BSP-D3 User Manual

Your comprehensive guide to setting up, operating, and maintaining your BSP-D3 Gamepad.

1. INTRODUCTION

Thank you for choosing the ELECTRO WOLF Wireless Retractable Gamepad BSP-D3. This 3D joystick Bluetooth-compatible controller is designed to enhance your mobile gaming experience on PC, iOS, and Android devices. This manual provides detailed instructions to help you get the most out of your new gamepad.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and key features of your BSP-D3 Gamepad.



Figure 2.1: The ELECTRO WOLF Wireless Retractable Gamepad BSP-D3, showcasing its blue and red design with a smartphone inserted.

Key Features:

- **Retractable Design:** Supports mobile phones from 5.0 to 6.9 inches, providing a stable and secure fit.
- **3D Joystick:** High-precision 3D rocker for accurate positioning and smooth movement.
- **Bluetooth Connectivity:** Bluetooth 5.0 for stable connection up to 8 meters with no latency.
- **Macro Programmable Back Buttons:** Two customizable M1/M2 buttons for mapping multiple key combinations, enhancing gameplay efficiency.
- **Universal Compatibility:** Works with Android (6.0+), iOS (13.4+), and PC.
- **Long Battery Life:** 400mAh battery providing 15-18 hours of working time.



Six Fingers Operation

Aiming, shooting, moving and switching angles at the same time

360° High Precision 3D Rocker

You can achieve highly accurate position & smoothly movement

Figure 2.2: Close-up view of the gamepad highlighting the 360° high precision 3D rocker and the concept of six-finger operation for enhanced control.



Figure 2.3: Rear view of the gamepad showing the M1 and M2 macro programmable back buttons, capable of mapping up to 16 button combinations.

TELESCOPIC HOLDER

Support length 5.0-6.9 inch of mobile phones. Stable and not loose

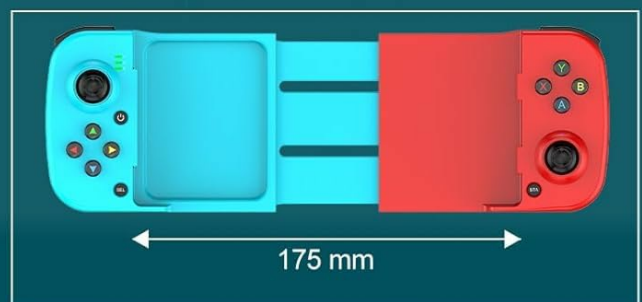
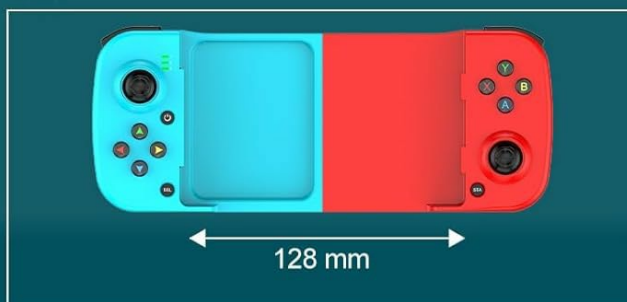


Figure 2.4: Illustration of the gamepad's telescopic holder, demonstrating its ability to extend and securely hold smartphones up to 6.9 inches.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the gamepad. Connect the provided USB-C cable to the gamepad's charging port and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status.

- Charging Time: Approximately 2-3 hours.
- Battery Capacity: 400mAh.



Figure 3.1: Visual representation of the gamepad's battery life and charging specifications, including working time, charging time, and battery capacity.

3.2 Connecting to Your Device (Bluetooth Pairing)

The BSP-D3 gamepad supports direct play for Android, iOS, and PC via Bluetooth. Ensure the controller is off before initiating pairing.

1. **Power Off:** Make sure the controller is off before Bluetooth pairing.
2. **Select Boot Mode:** Hold down the specific button combination for your device type, then press the 'Home' button to boot the controller into pairing mode.
 - **iOS (iPhone/iPad):** Hold **B + Home** (connects as DUALSHOCK-4 Wireless Controller).
 - **Android:** Hold **X + Home** (connects as D3).
 - **PC:** Hold **RB + Home** (connects as Xbox Wireless Controller).
 - **Call of Duty Mobile / Warzone Mobile / Diablo Immortal:** Hold **RB + Home** (connects as Xbox Wireless Controller).
3. **Pairing:** On your device (iPhone, Android, or PC), go to Bluetooth settings and select the detected gamepad (e.g., "D3" or

"Wireless Controller") to connect.

Note: If you find a supported game is not working, try switching the boot mode.

UNIVERSAL COMPATIBILITY

The Gamepad Compatible with iPhone, Android Phone, iPad, Tablet, PC





		 Call of Duty Mobile Warzone Mobile Diablo Immortal	
B+Home	X+Home	RB+Home	RB+Home
 DUALSHOCK 4 Wireless Controller	 D3	 Xbox Wireless Controller	 Xbox Wireless Controller

1) Make sure the controller is off before Bluetooth pairing connection;

2) Hold down the 'B, X or RB' button, then press the 'Home' button to boot the controller;

3) Connect the Bluetooth on your iPhone, Android or PC

Figure 3.2: Diagram illustrating the universal compatibility of the gamepad across iOS, Android, and Windows, along with specific button combinations for different connection modes.

4. OPERATING INSTRUCTIONS

4.1 Game Compatibility

The BSP-D3 controller supports most games that have native controller support on the App Store and Google Play. Popular compatible games include:

- Call of Duty / COD Mobile
- Minecraft
- Roblox
- Sky: Children of the Light

- Black Desert Mobile
- Diablo Immortal
- Hello Neighbor
- Modern Combat 5
- Asphalt 8/9
- Genshin Impact
- Apex Legends Mobile
- And many more.

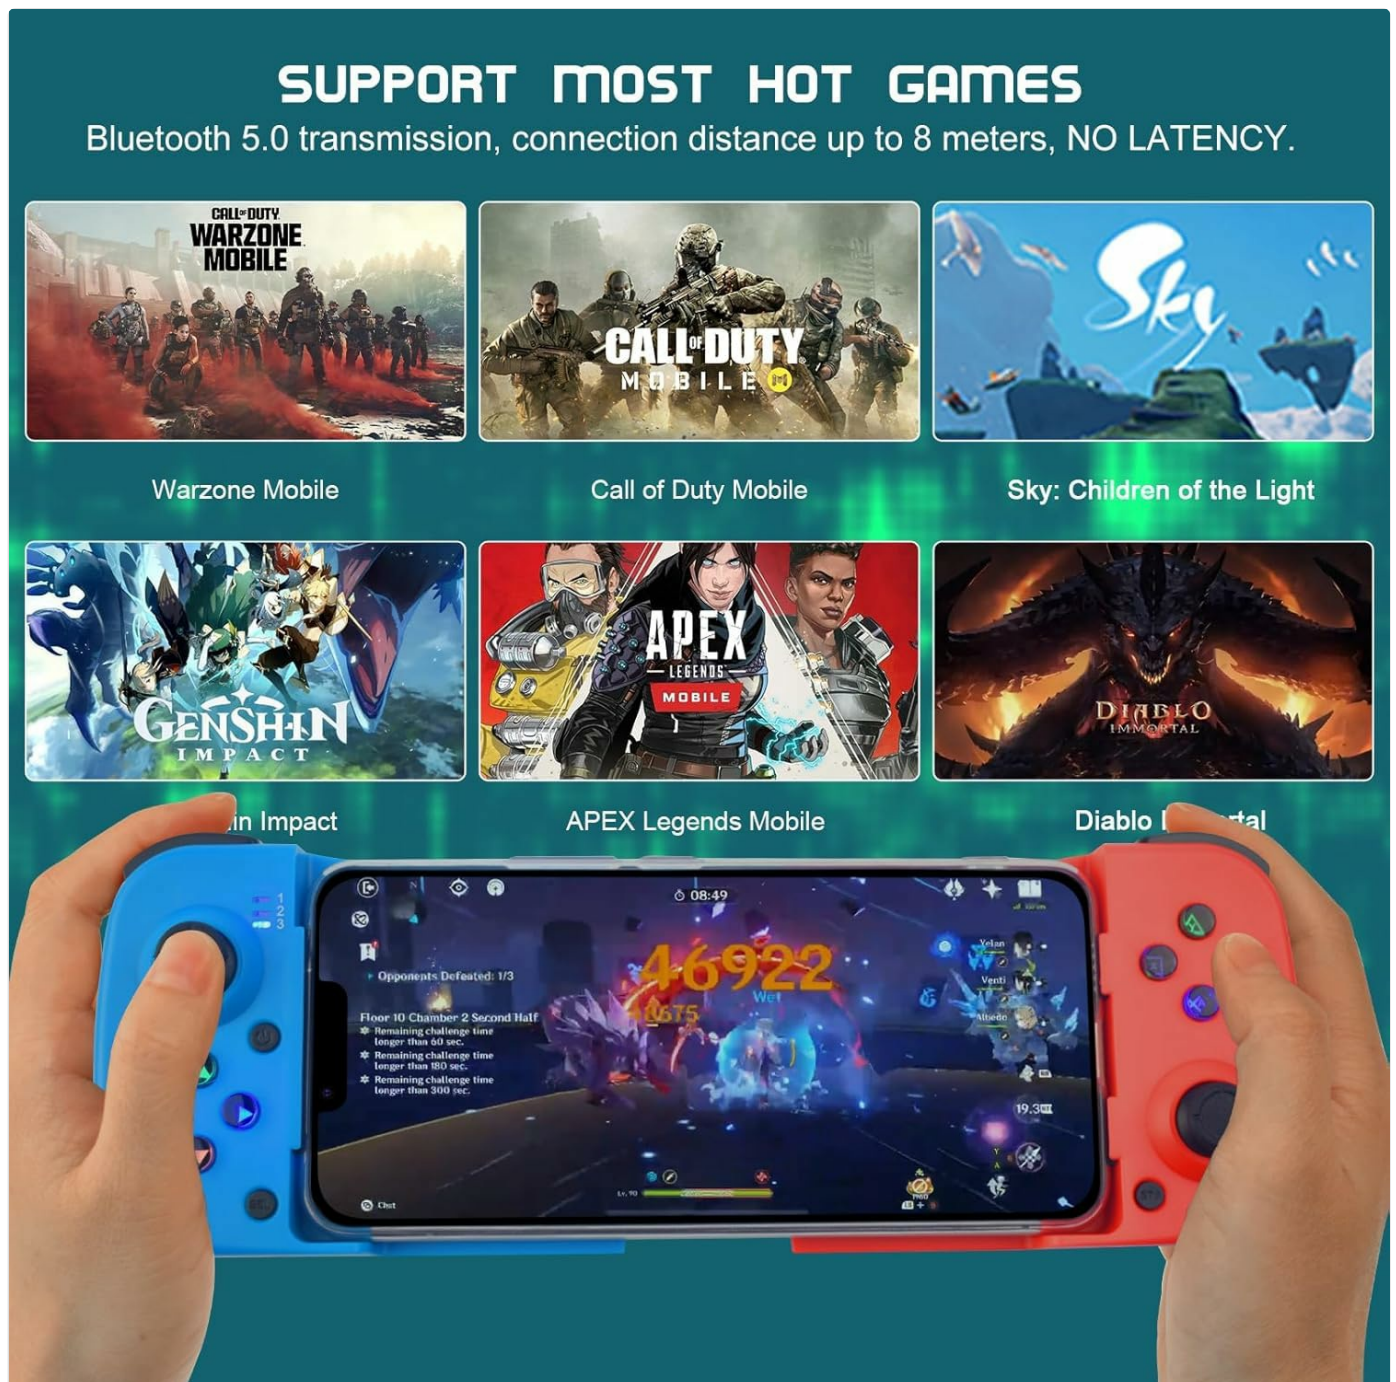


Figure 4.1: Display of the gamepad being used with a smartphone, illustrating its compatibility with a wide range of popular mobile games.

4.2 Using Macro Programmable Back Buttons (M1/M2)

The M1 and M2 buttons on the back of the gamepad can be programmed to perform complex actions with a single press. This allows you to map multiple basic keys (A, B, X, Y, L, ZL, R, ZR, L3, R3, D-pad) to a single macro button.

- Refer to the in-game settings or the gamepad's companion app (if available, not specified in data) for detailed instructions on

programming these buttons.

- This feature is designed to make your operations more efficient and smoother, allowing for "one-click ultimate skills" or rapid execution of combos.

5. MAINTENANCE

To ensure the longevity and optimal performance of your gamepad, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the gamepad. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Do not overcharge the battery. Disconnect the charger once the gamepad is fully charged.
- **Handling:** Avoid dropping the gamepad or subjecting it to strong impacts.

6. TROUBLESHOOTING

If you encounter issues with your BSP-D3 Gamepad, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Gamepad does not turn on.	Battery might be depleted. Connect to a charger and allow it to charge for at least 30 minutes before attempting to power on again.
Cannot connect via Bluetooth.	• Ensure the gamepad is in the correct boot mode for your device (e.g., X+Home for Android, B+Home for iOS). • Make sure Bluetooth is enabled on your device. • Forget the device in your Bluetooth settings and try pairing again. • Ensure the gamepad is fully charged.
Buttons or joystick not responding in game.	• Verify the game supports external controllers. • Check in-game settings for controller configuration. • Try switching the gamepad's boot mode (e.g., from X+Home to RB+Home for certain games like COD Mobile). • Reconnect the gamepad.
Gamepad disconnects frequently.	• Ensure the gamepad is within 8 meters of your device. • Check for interference from other wireless devices. • Ensure the gamepad is fully charged.

7. SPECIFICATIONS

Feature	Detail
Model Number	BSP-D3
Connectivity	Bluetooth 5.0
Compatible Systems	Android 6.0+, iOS 13.4+, PC (Windows)

Feature	Detail
Supported Phone Size	5.0 - 6.9 inches (128mm - 175mm retractable length)
Battery Capacity	400mAh
Working Time	15-18 hours
Charging Time	2-3 hours
Product Dimensions	20 x 8 x 3 cm
Item Weight	202 g
Country of Origin	China

8. WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact ELECTRO WOLF customer support.

- **Manufacturer:** Electro Wolf, Ahmedabad
- **Customer Support No.:** 7801806979

Please retain your proof of purchase for warranty purposes.

© 2024 ELECTRO WOLF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

