

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tefal](#) /

› [Tefal Easy Fry Max Air Fryer EY2458EG & Express Steam Plus Iron FV2844E2 Instruction Manual](#)

Tefal EY2458EG, FV2844E2

Tefal Easy Fry Max Air Fryer & Express Steam Plus Iron Instruction Manual

Models: EY2458EG (Air Fryer), FV2844E2 (Steam Iron)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new Tefal Easy Fry Max Digital Air Fryer and Tefal Express Steam Plus Steam Iron. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons. This includes:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. TEFAL EASY FRY MAX DIGITAL AIR FRYER (MODEL: EY2458EG)

3.1 Parts and Features

- Digital Touch Screen Control Panel
- Cooking Basket with Handle
- Removable Grid
- Air Inlet and Outlet Vents



Image: Tefal Easy Fry Max Digital Air Fryer. This image shows the main unit of the air fryer, a sleek black appliance with a digital control panel on top and a pull-out basket filled with golden fries.



Image: Tefal Easy Fry Max Air Fryer cooking various foods. This image displays the versatility of the air fryer, showing different food items like a whole chicken, grilled fish, muffins, and fries, all prepared in the air fryer basket.

3.2 Setup

1. Unpack the appliance and all accessories. Remove any packaging materials, stickers, or labels.
2. Clean the basket and the removable grid thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.
5. Ensure there is at least 10 cm of free space on the back and sides and 10 cm above the appliance.

3.3 Operating Instructions

The Tefal Easy Fry Max features 10 pre-set cooking programs and adjustable temperature control up to 220°C.

1. **Preheating:** Plug in the appliance. Select a pre-set program or manually set the desired temperature and time. Press the start button to begin preheating.
2. **Loading Food:** Once preheated (if applicable), carefully pull out the basket. Place ingredients into the basket. Do not overfill.
3. **Cooking:** Slide the basket back into the appliance. Select one of the 10 pre-set programs (e.g., French fries, chicken, fish, pizza, nuggets, vegetables, shrimp, bacon) or manually set the temperature and time using the digital touch screen.
4. **Timer:** Use the 60-minute timer for precise cooking. The appliance will automatically shut off and ring a bell when cooking is complete.

5. **Checking Food:** For even cooking, shake the basket halfway through the cooking time for items like fries or nuggets.
6. **Serving:** Carefully remove the basket and transfer the cooked food to a plate.

3.4 Maintenance and Cleaning

- Always unplug the appliance and let it cool down completely before cleaning.
- Clean the basket and the removable grid with hot water, dish soap, and a non-abrasive sponge. These parts are generally dishwasher safe.
- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaning agents.
- Never immerse the main unit in water or any other liquid.

3.5 Troubleshooting (Air Fryer)

Problem	Possible Cause	Solution
Appliance does not work	Appliance is not plugged in.	Plug the main plug into an earthed wall socket.
Food is not cooked evenly	Too much food in the basket; food not shaken.	Reduce food quantity; shake the basket halfway through cooking.
White smoke comes from the appliance	Fat residues from previous use; fatty ingredients.	Clean the basket and grid thoroughly; remove excess oil from ingredients.

3.6 Specifications (Air Fryer)

- **Model:** EY2458EG
- **Capacity:** 5 Liters
- **Color:** Black
- **Control Method:** Touch Screen
- **Special Features:** Temperature Control, 10 Pre-set Programs, 60-minute Timer, Extra Crisp Technology

4. TEFAL EXPRESS STEAM PLUS STEAM IRON (MODEL: FV2844E2)

4.1 Parts and Features

- Ceramic X-Glide Soleplate
- Water Tank with Easy-Fill Opening
- Water Level Indicator
- Temperature Control Dial
- Steam Boost Button
- Spray Button
- Anti-Drip Feature



Image: Tefal Express Steam Plus Steam Iron. This image shows the steam iron in a purple and white color scheme, highlighting its ergonomic design and soleplate.



Image: Tefal Express Steam Plus Iron features. This image illustrates the iron in use, emphasizing its steam output, 2400W power, and 130g/minute steam boost capability.

4.2 Setup

1. Before first use, remove any protective film or stickers from the soleplate.

2. **Fill the water tank:** Ensure the iron is unplugged. Open the easy-fill opening and pour tap water into the tank up to the 'MAX' level indicated by the water level indicator. Close the opening securely.
3. Plug the iron into a suitable power outlet.

4.3 Operating Instructions

1. **Temperature Setting:** Turn the temperature control dial to the desired setting for your fabric type. Refer to garment care labels.
2. **Heating:** The iron will heat up quickly (2400W power). An indicator light will turn off when the set temperature is reached.
3. **Steam Ironing:** For continuous steam, ensure the temperature is set to a steam-compatible level (usually 2 dots or higher). The iron will produce up to 40g/minute of continuous steam.
4. **Steam Boost:** For stubborn wrinkles, press the steam boost button to release a powerful burst of steam (up to 130g/minute).
5. **Spray Function:** Press the spray button to moisten fabrics, aiding in wrinkle removal.
6. **Vertical Steaming:** The iron can be used vertically to steam delicate garments, suits, or curtains. Hold the iron a few centimeters away from the fabric and press the steam boost button.
7. **Anti-Drip:** The anti-drip feature prevents water droplets from staining your clothes, even at lower temperatures.

4.4 Maintenance and Cleaning

- Always unplug the iron and let it cool down completely before cleaning.
- **Soleplate Cleaning:** Wipe the soleplate with a damp cloth. For stubborn marks, use a specialized soleplate cleaning stick. Do not use abrasive pads or cleaners.
- **Water Tank:** Empty the water tank after each use to prevent mineral buildup.
- **Anti-Calc System:** If your iron has an anti-calc system, follow the specific instructions in the full manual for descaling.

4.5 Troubleshooting (Steam Iron)

Problem	Possible Cause	Solution
Iron does not heat up	Not plugged in; faulty outlet.	Check plug connection; try a different outlet.
No steam or insufficient steam	Water tank empty; temperature too low for steam.	Fill water tank; set temperature to steam-compatible level.
Water drips from soleplate	Temperature too low for steam; anti-drip system working.	Increase temperature; this is normal operation for anti-drip at low temps.

4.6 Specifications (Steam Iron)

- **Model:** FV2844E2
- **Power:** 2400 Watts
- **Continuous Steam Output:** Up to 40 g/minute
- **Steam Boost:** Up to 130 g/minute
- **Soleplate Material:** Ceramic X-Glide
- **Special Features:** Anti-Drip, Spray Function, Vertical Steaming, Fast Heat-up
- **Color:** Royal Port

5. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your retailer. For technical support or service, please contact Tefal customer service or visit the official Tefal website for your region.