

## Kumtel A9-SF3/B

# Kumtel Built-in Electric Oven User Manual

Model: A9-SF3/B

### INTRODUCTION

Thank you for choosing the Kumtel Built-in Electric Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before installation and operation, and keep them for future reference. Proper installation and adherence to safety guidelines are crucial for optimal performance and to prevent hazards.

### Safety Information

- Ensure the oven is installed by a qualified technician in accordance with local regulations.
- Do not operate the oven if the power cord is damaged.
- Keep children away from the appliance during operation as surfaces can become very hot.
- Always use oven mitts when handling hot dishes or oven accessories.
- Do not use abrasive cleaners or sharp objects on the oven's surfaces, especially the glass door.

### PRODUCT OVERVIEW

The Kumtel Built-in Electric Oven Model A9-SF3/B is designed for modern kitchens, offering a 105-liter capacity and multiple cooking functions. Its sleek black finish and easy-to-use controls make it a practical addition to your home.



Image: Front view of the Kumtel Built-in Electric Oven, showcasing the control panel with three knobs, the stainless steel handle, and the double-layer glass door.

## Key Features

- **Power:** 3250 Watts for efficient cooking.
- **Capacity:** Generous 105-liter interior.
- **Programs:** 8+1 cooking functions for versatile meal preparation.
- **Door:** Double-layer glass door with removable Winside glass for easy cleaning.
- **Controls:** Black control panel with mechanical timer and thermostat.
- **Accessories:** Includes 2 trays and 1 oven rack.
- **Design:** Modern handle design and easy-to-use knobs.
- **Special Features:** Mechanical thermostat, automatic defrost function.

## SETUP

### Unpacking

- Carefully remove all packaging materials from the oven.
- Check for any damage during transit. If damage is found, do not install or operate the oven and contact your retailer.
- Remove all internal accessories (trays, racks) and any protective films.

### Installation

This is a built-in appliance and requires professional installation. Ensure the installation area meets the required dimensions and

ventilation standards. The electrical connection must comply with local electrical codes and be performed by a qualified electrician.

- Ensure the power supply matches the oven's specifications (240 Volts).
- The oven must be properly grounded.
- Secure the oven firmly into the cabinet to prevent tipping.

## First Use

Before cooking food, perform an initial burn-off to eliminate any manufacturing odors.

1. Remove all accessories from the oven cavity.
2. Set the oven to its highest temperature (e.g., 250°C) and select a conventional heating function.
3. Run the oven for approximately 30-60 minutes. Ensure the kitchen is well-ventilated during this process.
4. Allow the oven to cool completely before its first use with food.

## OPERATING INSTRUCTIONS

### Control Panel

The oven features a black control panel with three main knobs:

- **Left Knob:** Function Selector (to choose cooking programs).
- **Middle Knob:** Temperature Control (to set the desired temperature).
- **Right Knob:** Mechanical Timer (to set cooking duration).

### Setting the Oven

1. **Select Function:** Turn the left knob to choose one of the 8+1 cooking programs (e.g., conventional heating, grill, fan-assisted, defrost).
2. **Set Temperature:** Turn the middle knob to the desired temperature for your recipe.
3. **Set Timer (Optional):** Turn the right knob to set the cooking duration. The oven will switch off automatically once the set time has elapsed. If no timer is set, the oven will operate continuously until manually turned off.
4. **Preheating:** For best results, preheat the oven to the desired temperature before placing food inside.

### Cooking Programs (8+1 Programs)

Refer to the symbols next to the function selector knob for specific program details. Common programs include:

- **Conventional Heating:** Top and bottom heating elements for traditional baking and roasting.
- **Fan-Assisted Heating:** Even heat distribution for multi-level cooking.
- **Grill:** For grilling and browning dishes.
- **Defrost:** Gentle thawing of frozen foods.
- Additional programs may include bottom heating, top heating, or combinations of elements with fan.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

## General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Use a soft cloth and mild detergent for cleaning the exterior surfaces.
- For the interior, wipe away spills and food residue after each use. For stubborn stains, use a specialized oven cleaner according to its instructions.
- Do not use abrasive sponges, harsh chemicals, or steam cleaners.

## Removable Winside Glass

The inner glass panel of the oven door is removable for easy and thorough cleaning. Consult the detailed instructions in the full product manual for the specific procedure to remove and re-install the glass panel safely.

## TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

| Problem                         | Possible Cause                                                                     | Solution                                                                                                                       |
|---------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Oven does not heat up.          | No power supply; Timer not set or set to 'off'; Function/temperature knob not set. | Check power connection and circuit breaker; Set the mechanical timer; Ensure function and temperature knobs are correctly set. |
| Uneven cooking.                 | Incorrect rack position; Overcrowding the oven; Door not fully closed.             | Use appropriate rack position; Avoid overcrowding; Ensure oven door is securely closed.                                        |
| Excessive smoke during cooking. | Food spills or residue inside the oven; High-fat food cooking.                     | Clean the oven interior thoroughly; Use a drip tray for fatty foods.                                                           |

If the problem persists after checking these points, please contact Kumtel customer support.

## SPECIFICATIONS

Detailed technical specifications for the Kumtel Built-in Electric Oven Model A9-SF3/B:

| Specification     | Detail          |
|-------------------|-----------------|
| Manufacturer      | KUMTEL          |
| Model Number      | 362-10-A9-SF3/B |
| Part Number       | 362-10-A9-SF3/B |
| Installation Type | Built-in        |
| Capacity          | 105 Liters      |
| Power             | 3250 Watts      |

| Specification              | Detail                                                       |
|----------------------------|--------------------------------------------------------------|
| Voltage                    | 240 Volts                                                    |
| Heating Method             | Electric                                                     |
| Fuel Type                  | Electric                                                     |
| Color                      | Black                                                        |
| Finish                     | Black                                                        |
| Material                   | Glass                                                        |
| Product Dimensions (DxWxH) | 78 cm x 58 cm x 44 cm                                        |
| Item Weight                | 35 Kilograms                                                 |
| Special Features           | Easy-to-use handle, Mechanical thermostat, Automatic defrost |
| Included Components        | Built-in oven                                                |
| Batteries Required         | No                                                           |

## WARRANTY AND SUPPORT

### Warranty Information

This Kumtel Built-in Electric Oven comes with a **two-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

### Customer Support

For technical assistance, warranty claims, or to purchase spare parts, please contact Kumtel customer service. You can typically find contact details on the Kumtel official website or through your local retailer.

When contacting support, please have your oven's model number (A9-SF3/B or 362-10-A9-SF3/B) and serial number ready. The serial number is usually located on a label inside the oven door frame or on the back of the appliance.

© 2024 Kumtel. All rights reserved. This manual is subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

## Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

## Question

Example: How do I reset this device or fix this error?

## Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**