

[Manuals.plus](#) /

> [ZdalaMit](#) /

> ZdalaMit Replacement Remote Control User Manual for Samsung TVs

**ZdalaMit UN85CU7000F, UN65CU7000F, UN55CU7000F, UN43CU7000F, UN70CU7000F, UN58CU7000F, UN43CU7000FXZA, UN65CU7000FXZA, UN75CU7000**

## ZdalaMit Replacement Remote Control User Manual

For Samsung TV Models CU7000 Series

### INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your ZdalaMit replacement remote control for Samsung TVs. This remote is designed to function as a direct replacement for your original Samsung TV remote, offering seamless compatibility with various Samsung CU7000 series models without requiring any programming.





Image: Front view of the ZdalaMit replacement remote control, featuring a sleek black design with clearly labeled buttons for power, settings, navigation, volume, channel, and dedicated streaming service access.

## SETUP

---

The ZdalaMit replacement remote control is designed for immediate use. No complex programming or pairing procedures are required. Simply install the batteries, and the remote will be ready to operate your compatible Samsung TV.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Batteries are not included with the remote control.



Image: An angled view of the ZdalaMit replacement remote control, highlighting its ergonomic design and the placement of the battery compartment on the underside.

## OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready to operate your Samsung TV. Ensure there is a clear line of sight between the remote control and the TV's infrared receiver.

## Key Functions

- **Power Button (⏻):** Turns the TV on or off.
- **Settings/123 Button (⚙):** Accesses TV settings or numeric keypad.
- **Color Buttons (Red, Green, Yellow, Blue):** Context-sensitive functions within menus or applications.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and selects options.
- **Back Button (⏪):** Returns to the previous screen or menu.
- **Home Button (🏠):** Accesses the Smart Hub or home screen.
- **Play/Pause/Fast Forward/Rewind (⏮, ⏸, ⏭):** Controls media playback.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (⏶/⏷):** Changes TV channels.
- **Dedicated App Buttons (Netflix, Tving, Prime Video, Disney+):** Direct access to specified streaming applications.

## Compatible Samsung TV Models

This remote control is compatible with a wide range of Samsung CU7000 series TV models, including but not limited to:

- UN85CU7000F, UN65CU7000F, UN55CU7000F, UN43CU7000F, UN70CU7000F, UN58CU7000F
- UN43CU7000FXZA, UN65CU7000FXZA, UN75CU7000DXZA, UN85CU7000DXZA
- UN55CU7000, UN58CU7000, UN55CU7000FXZA, UN50CU7000FXZA, UN43CU7000
- UN50CU7000, UN65CU7000, UN70CU7000, UN75CU7000, UN85CU7000
- UN50CU7000F, UN75CU7000F, UN70CU7000FXZA, UN58CU7000FXZA
- UN55CU7000DXZA, UN70CU7000DXZA, UN65CU7000DXZA, UN50CU7000DXZA, UN58CU7000DXZA
- UN85CU7000FXZA, UN75CU7000FXZA

For a complete list of compatible models, please refer to the product packaging or contact customer support.



Image: The ZdalaMit replacement remote control displayed prominently in a modern living room setting, positioned in front of a television and entertainment console, illustrating its intended use environment.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your remote control.

### Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's surface or internal components.

### Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new 1.5V AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

### Storage

Store the remote control in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.

## TROUBLESHOOTING

---

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh 1.5V AAA alkaline batteries.
- Ensure there is a clear line of sight between the remote's infrared emitter and the TV's infrared receiver. Remove any obstructions.
- Make sure you are within the effective operating range of the TV (typically up to 20 feet).

- **Buttons Not Working:**

- Clean the remote control, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
- If only specific buttons are unresponsive, it might indicate a fault with the remote.

- **TV Not Turning On/Off:**

- Verify that the TV is plugged into a working power outlet.
- Try using the power button directly on the TV to confirm the TV itself is functional.

If the issue persists after trying these steps, please refer to the support information provided in this manual.

## SPECIFICATIONS

---

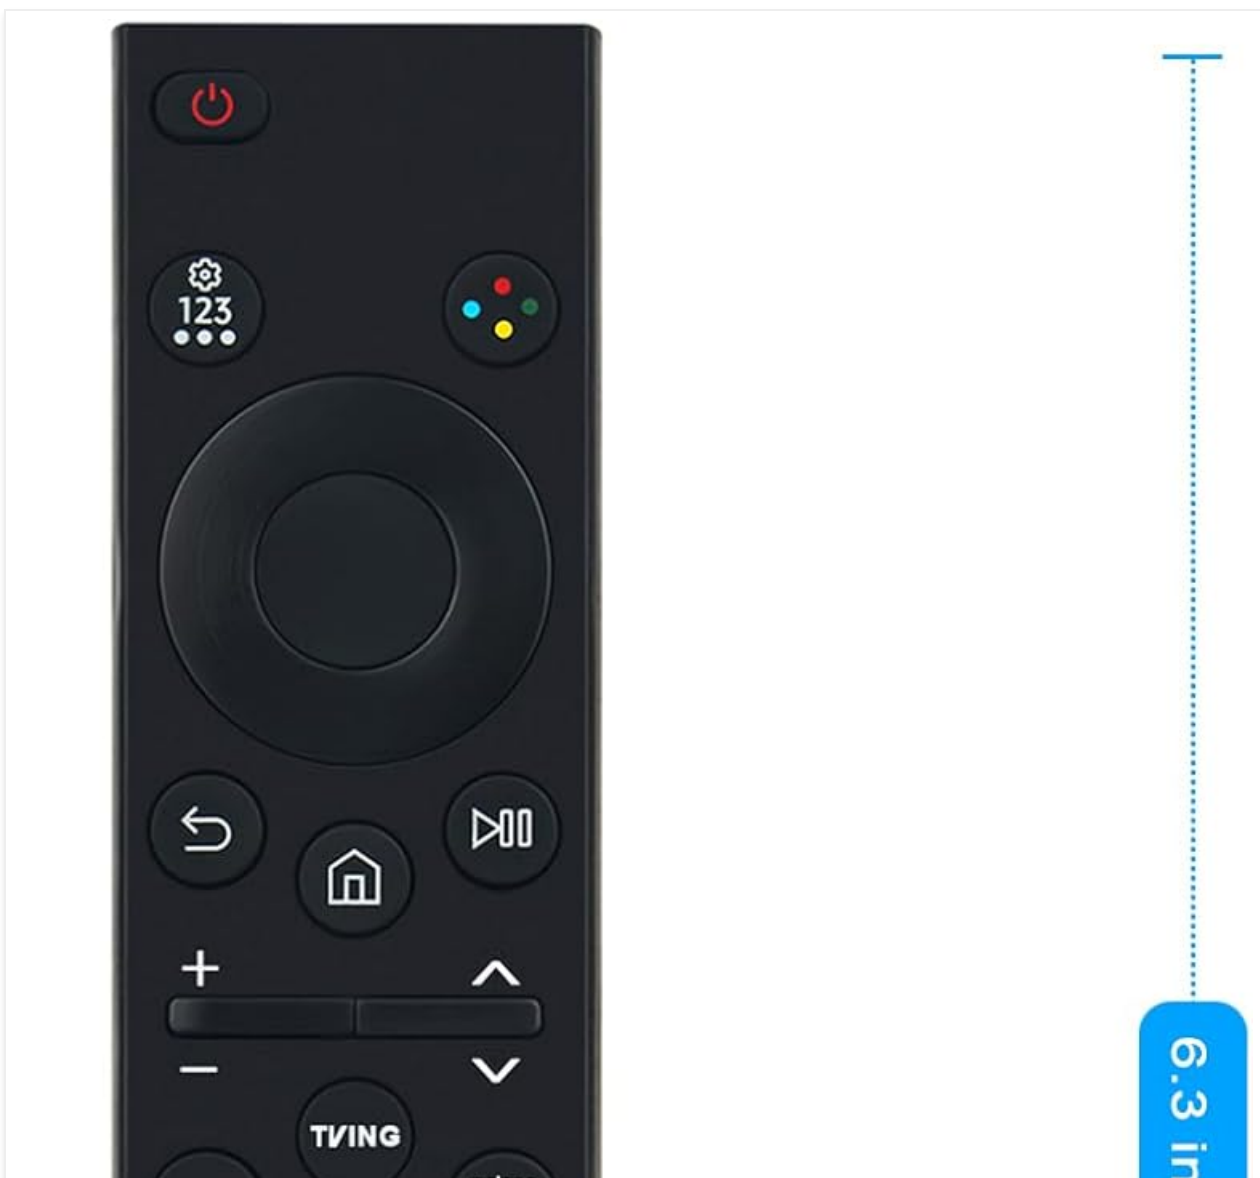




Image: The ZdalaMit replacement remote control shown with its approximate dimensions: 6.3 inches in length and 1.38 inches in width, providing a clear visual reference for its size.

Feature	Detail
Brand	ZdalaMit
Compatible Devices	Samsung Televisions (CU7000 Series and others)
Power Supply	2 x 1.5V AAA Alkaline Batteries (Not Included)
Product Dimensions	6.35 x 1.39 x 0.55 inches
Item Weight	1.41 ounces
Special Feature	Pre-Programmed (No setup required)
Color	Black

## WARRANTY AND SUPPORT

---

For any questions, concerns, or technical assistance regarding your ZdalaMit replacement remote control, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: ZdalaMit Factory



© 2025 ZdalaMit. All rights reserved.