



Manuals.plus /

› TOPZEE /

› TOPZEE Air Fryer 12-in-1, 5.5-QT Instruction Manual AFT05018

**TOPZEE AFT05018**

# TOPZEE Air Fryer 12-in-1, 5.5-QT Instruction Manual

Model: AFT05018

## 1. INTRODUCTION

---

Thank you for choosing the TOPZEE 12-in-1 5.5-QT Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, utilizing 360° hot air circulation for delicious results with up to 95% less oil. Please read this manual thoroughly before use to ensure safe and optimal operation.



Figure 1: TOPZEE 5.5-Qt Air Fryer in Dark Blue. This image displays the compact design of the air fryer, featuring a digital touch screen on top and a visible window on the front of the basket.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

### 3. PRODUCT OVERVIEW

The TOPZEE Air Fryer features a user-friendly design with key components for efficient cooking:

- **Main Unit:** Houses the heating element and control panel.
- **Digital Touch Screen:** For setting temperature, time, and selecting presets.
- **Removable Basket:** 5.5-QT capacity, non-stick, and BPA-free.
- **Crisper Plate:** Sits inside the basket for optimal air circulation.
- **Handle:** Ergonomically designed for safe handling of the hot basket.
- **Visible Window:** Allows monitoring of food during cooking without opening the basket.



Figure 2: The removable basket and crisper plate of the TOPZEE Air Fryer. The crisper plate is designed to be easily removed for cleaning.

### 4. SETUP

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the basket and crisper plate with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Place the appliance on a stable, horizontal, and level surface. Do not place the appliance on non-heat-resistant surfaces.
5. Ensure there is adequate space (at least 4 inches) around the appliance for proper air circulation.

## 5. OPERATING INSTRUCTIONS

---

### Digital Touch Screen Controls

The intuitive digital touch screen allows for precise control over your cooking:

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts temperature from 100°F to 400°F.
- **Time Control:** Sets cooking time.
- **Menu/Presets Selection:** Cycles through 12 preset cooking functions.
- **Light Button:** Illuminates the interior of the basket to monitor food through the visible window.

### Cooking with Presets (12-in-1 Functions)

The TOPZEE Air Fryer offers 12 versatile cooking functions:

- Air Fry
- Bake
- Broil
- Reheat
- Dry (Dehydrate)
- Proof
- Roast
- Fries
- Steam
- Custard Tart
- Wings
- Seafood
- Vegetables

To use a preset, simply press the 'Menu' button until the desired function is highlighted. The appliance will automatically set the recommended time and temperature. You can adjust these settings manually if needed.

# Frozen to table in minutes

Locks in surface moisture, juicy and tender



Figure 3: The TOPZEE Air Fryer showcasing its 12 preset functions and a variety of dishes that can be prepared, including roasted chicken, shrimp, and vegetables.

## Manual Operation

For custom cooking, press the Power button, then use the Temperature and Time controls to set your desired parameters. Press the Start/Pause button to begin cooking.

## Preheat Function

The air fryer includes a preheat function to ensure optimal cooking results. Select the preheat option, set your desired temperature, and allow the unit to reach temperature before adding food.

# Safe.Healthy.Compact. Energy-efficient



Figure 4: The preheat function of the TOPZEE Air Fryer, indicating its ability to lock in moisture for juicy and tender results, shown with cooked chicken drumsticks.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your air fryer:

- **Cleaning the Basket and Crisper Plate:** The non-stick, BPA-free basket and crisper plate are removable and dishwasher safe. For stubborn residue, soak in warm, soapy water before cleaning.
- **Cleaning the Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior Cleaning:** Use a soft, damp cloth to wipe the interior of the appliance. Avoid abrasive cleaners.



Figure 5: The removable air fryer basket being placed into a dishwasher, highlighting its dishwasher-safe and non-stick features for easy cleaning.

## 7. TROUBLESHOOTING

If you encounter issues with your air fryer, please refer to the following common solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **Food not cooking evenly:** Shake or flip food halfway through the cooking process. Ensure the basket is not overloaded.
- **White smoke from appliance:** This may be caused by grease from previous use. Clean the basket and crisper plate thoroughly.
- **Appliance emits a plastic smell:** This is common during initial uses and should dissipate after a few cycles. Ensure proper ventilation.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	AFT05018
Capacity	5.5 Quarts
Product Dimensions	11.4"D x 10.3"W x 14.1"H
Item Weight	10.45 Pounds
Output Wattage	1500 Watts
Temperature Range	100°F - 400°F
Control Method	Push Button (Digital Touch Screen)
Material	Non-Stick
Dishwasher Safe Parts	Yes (Basket, Crisper Plate)
Air Frying Technology	360° Hot Air Circulation

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product packaging or visit the official TOPZEE website. Ensure you have your model number (AFT05018) and proof of purchase available when contacting support.