

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [User Manual for ZdalaMit Replacement Remote Control for LG Sound Bars](#)

ZdalaMit Compatible with multiple LG Sound Bar models including S75QR, S65Q, SP7, SP9YT, S95QR, S90QY, SP9YA, DS80QR, SP8YA, DS95

User Manual for ZdalaMit Replacement Remote Control

Applicable for LG Sound Bar Systems

1. INTRODUCTION

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed for use with various LG Sound Bar models. This remote control offers a direct replacement solution, requiring no complex programming for immediate use.

Please read this manual thoroughly before using the remote control to ensure proper operation and longevity.

2. COMPATIBLE MODELS

This replacement remote control is compatible with the following LG Sound Bar models:

- S75QR
- S65Q
- SP7
- SP9YT
- S95QR
- S90QY
- SP9YA
- DS80QR
- SP8YA
- DS95QR
- WTP3
- SP9A
- SP8A
- SH7Q
- SP70Y
- DS80QY

- SP7Y
- S80QY
- SP11RA
- SPP11M-SR
- SPQ9-SL
- SPQ9-SR
- S78S2-S
- SPQ8-W
- SPQ8-S
- SPP8-W
- SPP5-W
- SPQ5H-W
- SPP5B-W
- SPP11M-SL

3. SETUP AND BATTERY INSTALLATION

The ZdalaMit Replacement Remote Control requires two AAA alkaline batteries (not included) for operation. No programming or pairing is necessary.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 3.1: Back of the remote control with battery compartment.

Once batteries are installed, the remote control is ready for immediate use with your compatible LG Sound Bar.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original LG Sound Bar remote. Simply point the remote control towards your sound bar and press the desired function button.





Figure 4.1: Front view of the remote control with button layout.

Key Functions:

- **Power Button** (): Turns the sound bar on or off.
- **Volume Up/Down** (+ / -): Adjusts the sound bar's volume level.
- **Mute Button** (): Mutes or unmutes the sound.
- **Function/Input Select** (...): Cycles through available input sources (e.g., Optical, Bluetooth, HDMI).
- **Bluetooth Pairing** (): Initiates Bluetooth pairing mode.
- **Sound Effect/Mode** (): Changes sound modes or effects.
- **Settings/Gear** (⚙): Accesses sound bar settings.
- **Navigation Buttons** (↑ ↓ ← →): Used for menu navigation.
- **EQ/Sound Tuning** (): Adjusts equalizer settings.

Refer to your LG Sound Bar's original user manual for specific functions and advanced settings accessible via the remote control.

5. MAINTENANCE AND CARE

Battery Replacement:

When the remote control's range decreases or buttons become unresponsive, it is likely time to replace the batteries. Follow the steps in Section 3 to replace the two AAA alkaline batteries.

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or inserted incorrectly.	Replace batteries with new 1.5V AAA alkaline batteries, ensuring correct polarity.
Remote control range is poor.	Low battery power. Obstruction between remote and sound bar.	Replace batteries. Ensure a clear line of sight to the sound bar's IR receiver.
Specific buttons not responding.	Button malfunction or sound bar not in correct mode.	Ensure the sound bar is powered on and in the correct input mode. If issue persists, the remote may be faulty.

If troubleshooting steps do not resolve the issue, please refer to the support information provided with your purchase.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.9 x 1.57 x 0.55 inches
Item Weight	1.41 ounces
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Color	Black
Special Feature	Pre-Programmed (No setup required)
Compatible Devices	LG Sound Bar Home Theater Systems

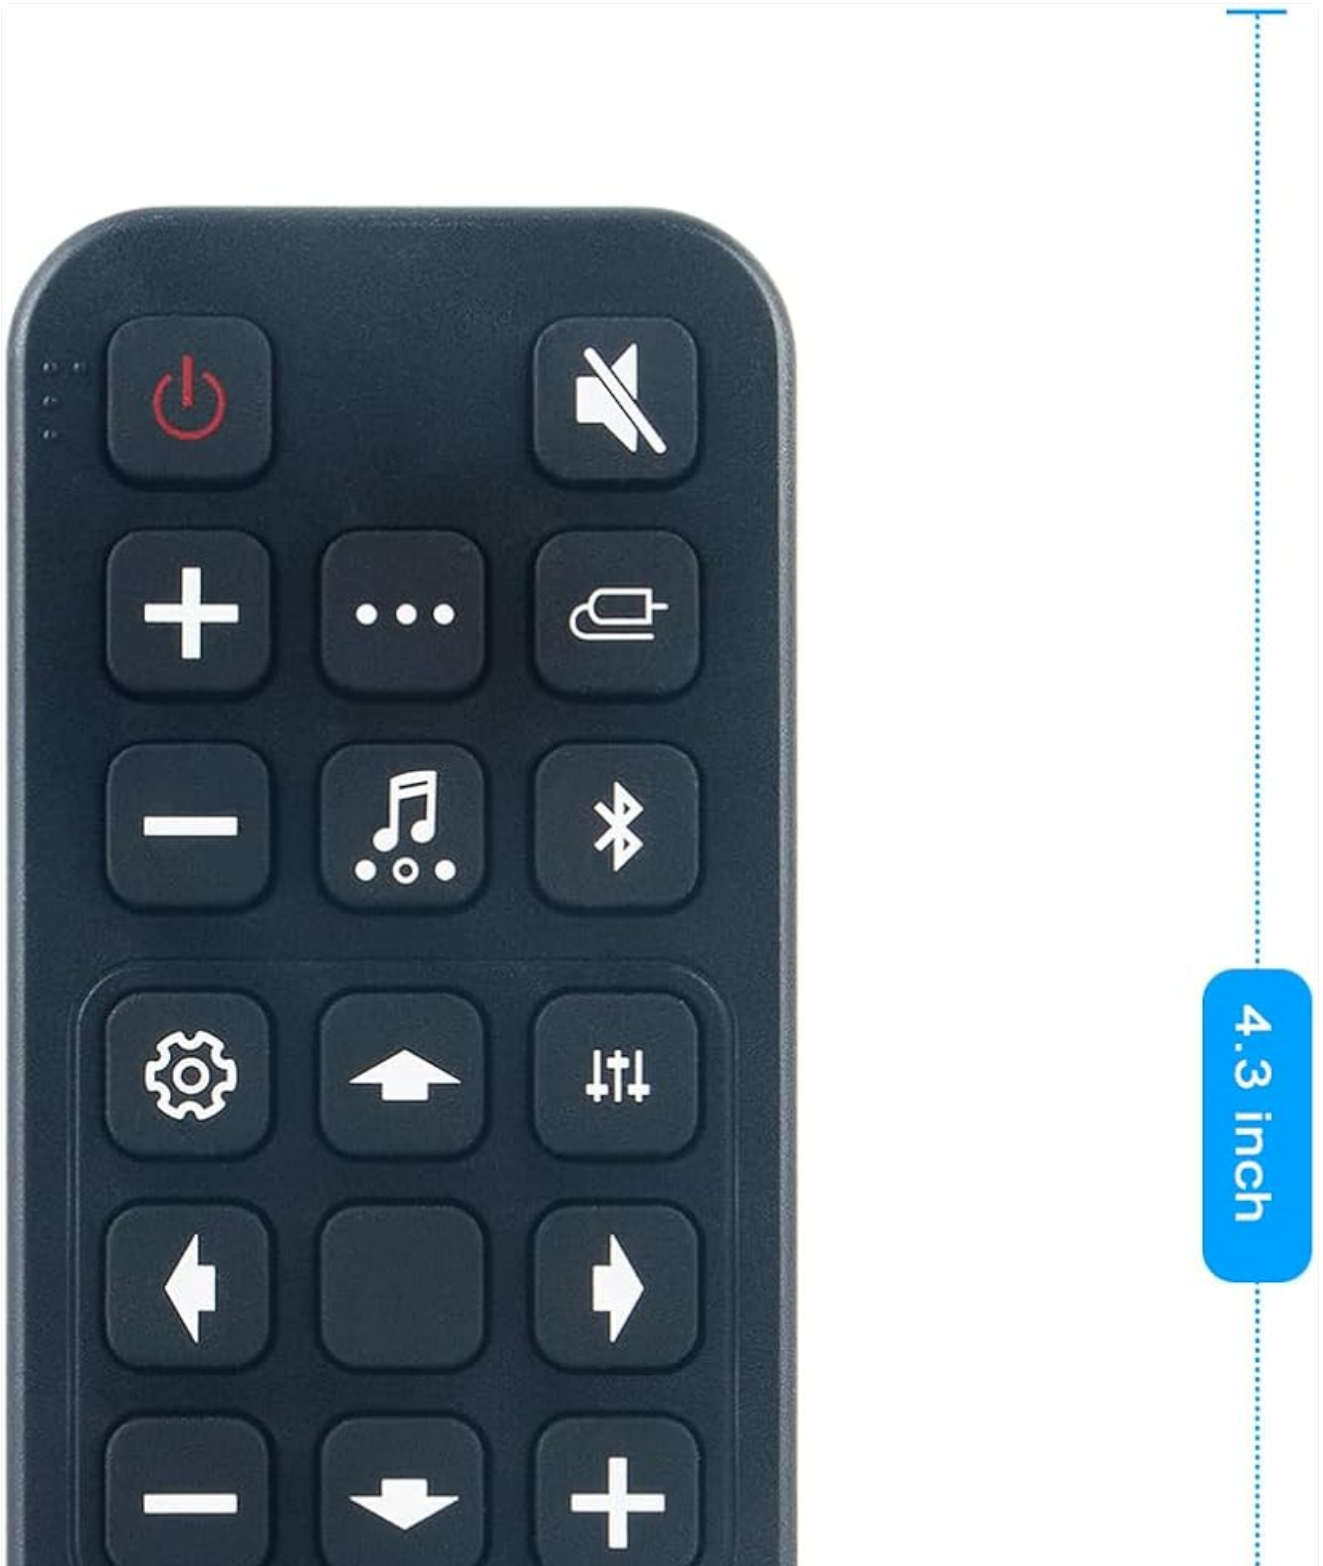




Figure 7.1: Remote control dimensions.

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms and conditions provided by the seller at the time of purchase. For technical support or inquiries, please contact the seller directly through the platform where the purchase was made.

Keep your purchase receipt or order details handy when contacting support.

