

[Manuals.plus](#) /

> [Yaheetech](#) /

> Yaheetech 80cm 24-Panel Pet Playpen Instruction Manual Model 614983

Yaheetech 614983

Yaheetech 80cm 24-Panel Pet Playpen

Model: 614983

INTRODUCTION

Thank you for choosing the Yaheetech 80cm 24-Panel Pet Playpen. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your pet playpen. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

To ensure the safety of your pet and prevent damage to the product, please observe the following:

- Always supervise your pet while it is inside the playpen.
- Ensure all panels are securely connected and stakes are firmly anchored before use.
- This playpen is designed for small to medium-sized pets. It is **not recommended for large animals** that may be able to jump over or push through the enclosure.
- For safety reasons, remove your pet's collar before placing it in the playpen to prevent snagging.
- Do not allow children to climb on or play inside the playpen without adult supervision.
- Keep the playpen away from heat sources, open flames, and electrical outlets.
- Periodically check for any loose parts, damage, or sharp edges and address them immediately.
- Note that there may be a measurement difference of up to ± 1 cm due to manual measurements.

PACKAGE CONTENTS

Please verify that all components are present before assembly:

- 21 x Standard Metal Panels (62 cm L x 80 cm H)
- 3 x Metal Panels with Integrated Door (62 cm L x 80 cm H, Door: 44.5 cm W x 77 cm H)
- 24 x Ground Stakes (84 cm L)
- 1 x Assembly Instructions

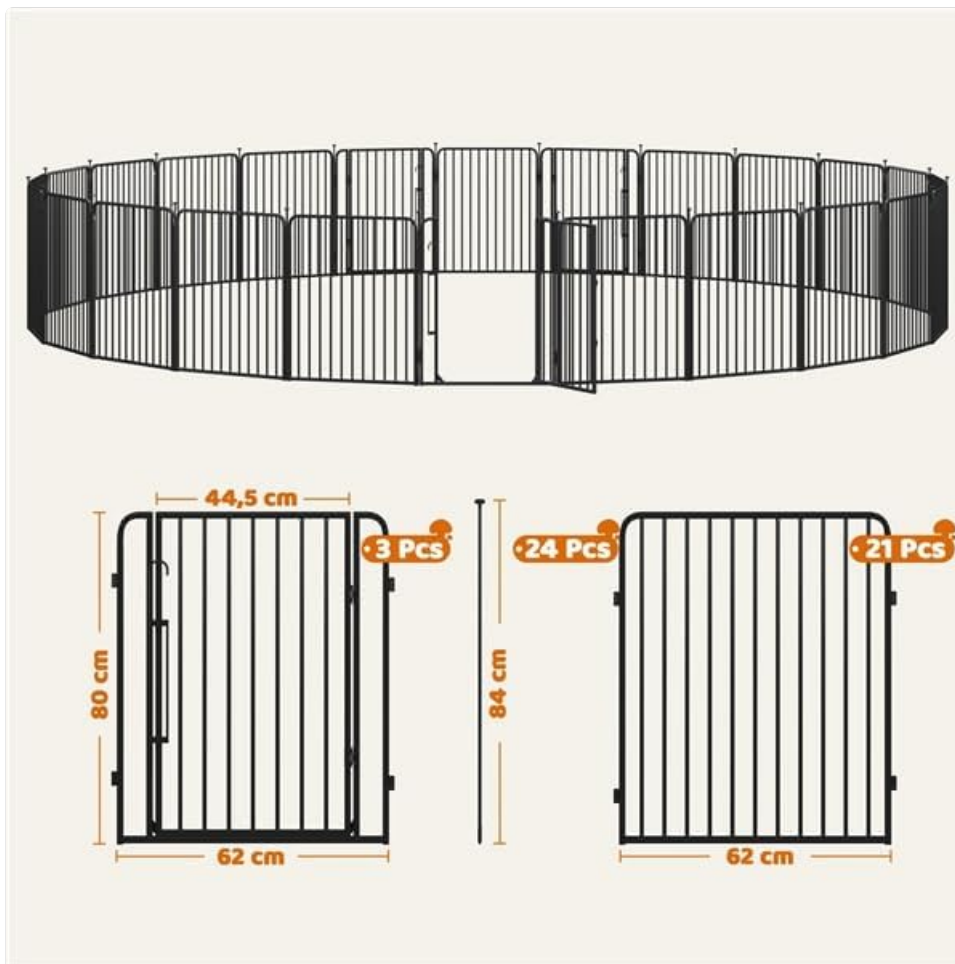


Figure 1: Diagram illustrating the dimensions of the standard panels, door panels, and ground stakes. Each standard panel measures 62 cm wide by 80 cm high. Door panels are also 62 cm wide by 80 cm high, with a door opening of 44.5 cm wide by 77 cm high. Ground stakes are 84 cm long.

SETUP AND ASSEMBLY

The Yaheetech Pet Playpen is designed for easy, tool-free assembly. Follow these steps to set up your playpen:

Step 1: Unpack and Inspect

1. Carefully remove all components from the packaging.
2. Inspect each panel and stake for any signs of damage. If any parts are damaged, do not proceed with assembly and contact customer support.

Step 2: Connect the Panels

1. Arrange the panels in your desired configuration (e.g., square, rectangle, octagon).
2. Align the vertical rods of two adjacent panels.
3. Insert a ground stake through the loops at the top and bottom of the aligned panels, connecting them securely.
4. Repeat this process for all panels until the playpen forms a complete enclosure. Ensure at least one door panel is included for easy access.

Step 3: Secure the Playpen (Outdoor Use)

1. For outdoor use, push the pointed end of the ground stakes firmly into the soil to anchor the playpen.
2. The elliptical flat-head anchor stakes provide additional security against movement.

Façonnez-le à Votre Manière, Sans Avoir Besoin d'Outils



Figure 2: The playpen can be configured into various shapes such as a rectangle, polygon, irregular shape, or an elongated rectangle, offering flexibility without the need for tools.



Figure 3: The integrated lock on the door prevents pets from opening it, while elliptical flat-head anchor stakes reinforce the playpen's stability, especially for active pets.

OPERATING INSTRUCTIONS

Using the Door

- The playpen features an integrated lock designed for easy one-hand operation.
- To open, simply lift the latch and swing the door open.
- To close, swing the door shut and ensure the latch securely engages.
- The low threshold of the door facilitates easy entry and exit for small dogs and puppies.

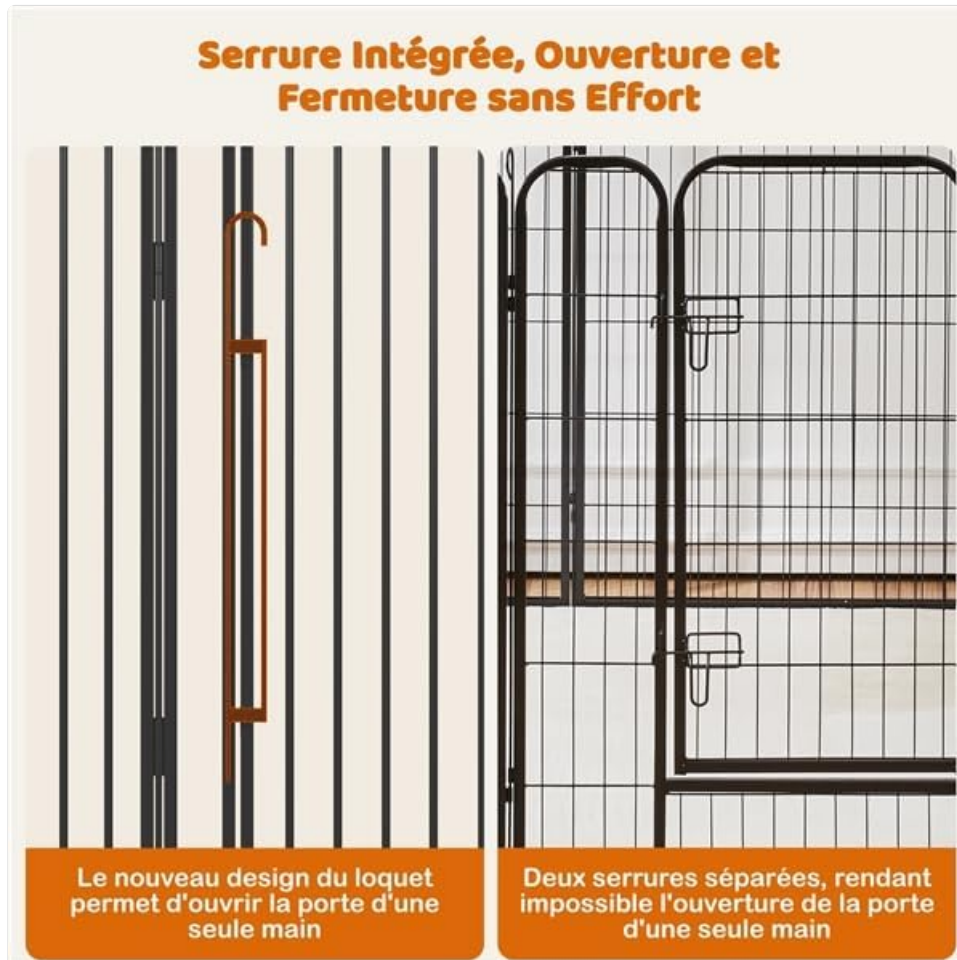


Figure 4: The new integrated lock design allows for convenient one-hand opening, unlike older systems that required two separate locks, making one-hand operation impossible.

Folding and Storage

- The playpen's foldable design allows for compact storage and easy transport.
- To fold, remove the ground stakes and disconnect the panels as needed.
- Collapse the panels flat for space-saving storage when not in use.



Figure 5: The playpen features a foldable and portable design, making it easy to store and transport. It also highlights robust construction, curved design for safety, anti-slip features, and easy access.

MAINTENANCE

Regular maintenance will extend the life of your pet playpen:

- **Cleaning:** Wipe down the metal surfaces with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all connections, welds, and moving parts (like the door latch) for wear or damage. Tighten any loose connections.
- **Floor Protection:** The playpen includes pipe covers and floor protectors to prevent scratches and wear on your flooring. Ensure these are in place, especially when moving the playpen.
- **Storage:** When not in use, store the folded playpen in a dry, protected area to prevent exposure to extreme weather conditions.



Figure 6: The playpen is designed with low-noise tubes and floor protectors to ensure quiet operation and prevent scratches on your floors.



Figure 7: A detailed view of the floor protector, emphasizing its anti-slip design and ability to protect floors from scratches and wear.

TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Playpen is unstable or wobbly.	Panels not fully connected or stakes not properly inserted.	Ensure all ground stakes are fully inserted through the panel loops. For outdoor use, push stakes firmly into the ground.
Door does not close or latch properly.	Obstruction in the latch mechanism or door misaligned.	Check for any debris in the latch. Ensure the door panel is correctly aligned with adjacent panels.
Scratches on flooring (indoor use).	Floor protectors are missing or dislodged.	Verify that all pipe covers and floor protectors are securely attached to the bottom of the panels.
Pet escapes the playpen.	Playpen height is insufficient for the pet or pet is too agile.	Ensure the playpen height is appropriate for your pet's size and jumping ability. This model is 80cm high. Consider additional containment measures or a taller enclosure if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	614983
Material	Powder-coated Metal
Color	Black
Panel Dimensions (each)	62 cm (L) × 80 cm (H)
Door Dimensions	44.5 cm (W) × 77 cm (H)
Ground Stake Length	84 cm
Square Tube Diameter	1.3 cm × 1.3 cm
Round Tube Diameter	0.8 cm
Total Weight (approx.)	15 kg
Assembly Required	Yes
Target Species	Dog (Small to Medium Breeds)

WARRANTY AND SUPPORT

Yaheetech products are manufactured with quality and durability in mind. For specific warranty information, please refer to the documentation included with your purchase or visit the official Yaheetech website.

If you encounter any issues or have questions regarding your pet playpen, please contact Yaheetech customer support. Have your model number (614983) and purchase details ready for faster assistance.

Contact Information: Please refer to your purchase receipt or the Yaheetech official website for the most up-to-date customer service contact details.

© 2026 Yaheetech. All rights reserved.