

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ChuMaste](#) /

› [ChuMaste CM-XWJ02 Countertop Dishwasher Instruction Manual](#)

## ChuMaste CM-XWJ02

# ChuMaste CM-XWJ02 Countertop Dishwasher Instruction Manual

Brand: ChuMaste | Model: CM-XWJ02

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &  
Support](#)

## 1. SETUP

---

### 1.1 Unpacking & Initial Inspection

Carefully remove the dishwasher from its packaging. Verify all components listed in the packing list are present and undamaged. Refer to the illustration below for the included items.

# PACKING LIST




Dishwasher\*1



Basket assembly\*1



Add a glass of water\*1

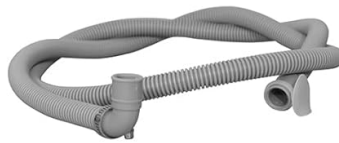


Water outlet pipe\*1



Fruit and vegetable basket\*1



Water inlet pipe\*1

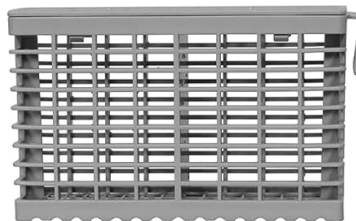

Knife and fork box\*1



User manual\*1

**Image Description:** A visual representation of the ChuMaste Dishwasher packing list, showing the main dishwasher unit, basket assembly, water pitcher, water outlet pipe, fruit and vegetable basket, water inlet pipe, knife and fork box, and user manual.

## 1.2 Placement

Place the dishwasher on a stable, level countertop. Ensure there is a minimum of 18.03 inches of clearance between countertops and cabinets for proper ventilation and operation.

Ensure there is a minimum of 18.03 inches of clearance between countertops and cabinets



**Image Description:** The ChuMaste Dishwasher placed on a countertop, illustrating its dimensions (16.54" W x 16.54" L x 18.03" H) and the recommended minimum clearance of 18.03 inches from overhead cabinets.

### 1.3 Water Supply Methods

Your ChuMaste dishwasher offers two convenient water supply methods:

1. **Built-in Water Tank:** For portable use without direct plumbing, fill the integrated 5L water tank from the top opening using the provided water pitcher. The dishwasher will alert you when the tank is full.
2. **Direct Faucet Connection:** Connect the inlet hose to a kitchen faucet for continuous water supply. Ensure the connection is secure.

### 1.4 Drainage

Connect the water outlet (drain) pipe to a sink to ensure proper drainage of used water. Make sure the drain hose is properly installed and positioned to prevent leaks.

Your browser does not support the video tag.

**Video Description:** An official ChuMaste video demonstrating how to fill the dishwasher's built-in water tank from the top using a pitcher and how to connect the drain hose to a sink for proper water disposal.

### 1.5 Initial Use


Before first use, it is recommended to run a cleaning cycle with vinegar to ensure the dishwasher is thoroughly clean and free of any manufacturing residues. This helps in maintaining optimal performance.

## 2. OPERATING INSTRUCTIONS

---

### 2.1 Loading the Dishwasher

Remove large food scraps before placing tableware into the dishwasher. The spacious interior can accommodate 1 to 3 servings of tableware, including plates up to 10.5 inches. Utilize the adjustable shelf for high glasses and the knife and fork box for utensils.

 

**Image Description:** A visual showing the adjustable shelf for high glasses and the maximum plate size of 10.5 inches that can be accommodated in the ChuMaste Dishwasher.

### 2.2 Adding Detergent

Use professional detergents, dishwashing powders, or dishwashing tablets. Avoid usual detergents as they can cause excessive bubbles and clog the dishwasher. The detergent dispenser is located on the inner side of the door.

### 2.3 Selecting a Wash Program

The dishwasher offers five main programs and additional functions to meet various needs. The control panel features touch buttons for easy selection.



**Image Description:** The ChuMaste Dishwasher control panel displaying various wash programs and their durations, including Dry, Baby Care, Quick, Eco, Strong, and Fruit modes.

Available programs and their typical durations:

- **Normal:** 69 minutes (Hot water washing 55°C/131°F, Rinsing 68°C/154°F)
- **Quick:** 29 minutes (Washing 50°C/122°F, Rinsing 62°C/144°F)
- **Eco:** 59 minutes (Washing 55°C/131°F, Rinsing 68°C/154°F)
- **Baby Care:** 69 minutes (Hot water washing 55°C/131°F, Rinsing 75°C/167°F)
- **Fruit:** 19 minutes (Cold water rinsing)
- **Strong:** 89 minutes (Hot water washing 55°C/131°F, Rinsing 75°C/167°F)
- **Glass:** 50 minutes (Hot water washing 50°C/122°F, Rinsing 68°C/154°F)
- **Self-clean:** 79 minutes (Hot water washing 55°C/131°F, Rinsing 75°C/167°F)

## 2.4 Starting a Cycle

Touch and hold the Power button for 3 seconds to turn on the dishwasher. Then, touch the corresponding icon to choose a wash cycle. Touch and hold the S/P (Start/Pause) button to start the wash cycle.

# WASH THE UPPER AND LOWER SPRAY ARMS MORE THOROUGHLY

360 degrees clean no dead ends



**Image Description:** The interior of the ChuMaste Dishwasher with water spraying from the upper and lower spray arms, demonstrating the 360-degree cleaning action.

## 2.5 Drying

For better drying and to prevent odors, turn on the Dry mode with any washing mode other than Fruit mode. The Dry mode can also be turned on separately. The drying time is typically 60 minutes, providing circulating fresh air for up to 72 hours.

**"b" MEANS ENTERING THE STORAGE STATE**  
**Click Dry to enter 72 hours PTC dry storage**



**Image Description:** The ChuMaste Dishwasher in its drying state, indicated by a warm glow inside the glass door, signifying the PTC dry storage function.

### **3. MAINTENANCE**

---

#### **3.1 Cleaning the Filter**

Regularly remove and clean the filter located at the bottom of the dishwasher to prevent clogs and ensure efficient cleaning. This is typically done by pulling out the filter and rinsing it.

#### **3.2 Deep Cleaning**

To maintain optimal performance and prevent odors, run a self-clean cycle or a normal wash cycle with vinegar periodically (e.g., once a month). This helps to remove any buildup within the machine.

#### **3.3 Emptying Water Tank**

When the water tank is not used for a long time, it is recommended to empty the water tank by touching and holding both the S/P and Power buttons simultaneously for 3 seconds to drain out the water.

## 4. TROUBLESHOOTING

---

- **Residual Water:** This dishwasher undergoes a quality test for the water inlet before it leaves the factory, so a little residual water is normal.
- **Water Supply Issues:** Unplug the plug on the water inlet at the back before connecting the water inlet hose.
- **Steam Burns:** Do not block the air vent on the right side of the dishwasher. Be careful of high temperature steam burns.
- **Opening Door During Wash:** Do not open the glass door while washing, as the hot water may scald you. If you need to open the door, touch the S/P button first, and then slowly open the door.
- **Dry Mode Interruption:** The Dry mode cannot be paused or canceled during operation. If you want to exit the mode, touch and hold the Power button for 3 seconds to turn off the dishwasher.
- **Excessive Bubbles:** Ensure you use professional detergents, dishwashing powders, or dishwashing tablets. Non-professional detergents can cause a large amount of bubbles that may clog the dishwasher.

## 5. SPECIFICATIONS

---

Feature	Detail
Model Name	CM-XWJ02
Product Dimensions	16.54"D x 16.54"W x 18.03"H
Item Weight	33 Pounds
Capacity	5 Liters (1.32 Gallons)
Voltage	120 Volts
Energy Consumption	0.42 Kilowatt Hours
Noise Level	49 Decibels
Cycle Options	Normal, Quick, Eco, Baby Care, Fruit, Strong, Glass, Self-clean, Dry
Controls Type	Touch
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Feature	LED Interior Light
Certifications	ETL, DOE, UL

## 6. WARRANTY & SUPPORT

---

For detailed warranty information and customer support, please refer to the official ChuMaste website or contact their customer service directly. The product is ETL, DOE, and UL certified, ensuring safety and

quality standards.

Visit the [ChuMaste Store](#) for more products and information.