



[Manuals.plus](#) /

› [YOLEO](#) /

› YOLEO Kick Scooter Instruction Manual - Model 931

YOLEO 931

YOLEO Kick Scooter Instruction Manual

Model: 931

1. INTRODUCTION

Thank you for choosing the YOLEO Kick Scooter. This manual provides essential information for the safe and proper use, maintenance, and care of your new scooter. Please read it thoroughly before use and keep it for future reference. The YOLEO Kick Scooter is designed for children aged 3 to 12 years, featuring adjustable height, LED light-up wheels, a foldable design for easy storage, and intuitive gravity steering.

折りたたみ式・省スペース

コンパクトに折り畳み式で持ち運びや収納もラクラク！



01
手で黒いラッチロックを握って、力を入れて矢印通りに引っ張ります。

02
ヘッドパイプをデッキの方向に倒し、カチッと音がすれば折り畳み完了です。

03



Image: Children enjoying their YOLEO Kick Scooters, showcasing the product in use.

2. SAFETY INFORMATION

- **Certification:** This product complies with European toy safety standard EN71, similar to the Japanese Toy Association's ST Mark, ensuring safety for children.
- **Protective Gear:** Always wear a helmet, knee pads, and elbow pads when riding the scooter.
- **Supervision:** Children should always be supervised by an adult while riding.
- **Weight Limit:** Do not exceed the maximum weight capacity of 50 kg.
- **Age Range:** Suitable for children aged 3 to 12 years.
- **Riding Surface:** Use on smooth, dry, and level surfaces away from traffic. Avoid riding on wet, uneven, or slippery surfaces.
- **Night Riding:** While LED wheels enhance visibility, exercise caution when riding in low-light conditions.

3. PRODUCT FEATURES

3.1. Adjustable Height

The handlebar height can be adjusted steplessly from a minimum of 58cm to a maximum of 82cm to accommodate your child's growth. Please confirm your child's height and the product's actual size for optimal fit.

簡単！高さ自由調節
最小58cm~最大82cmまで無段階固定可能

対象年齢
3~12
歳

耐荷重
50kg

年齢	3歳	5歳	8歳	10歳	12歳
身長	97cm	110cm	128cm	138cm	145cm



Image: Adjustable handlebar height for various child sizes.

3.2. LED Light-Up Wheels

The kick scooter features wide 120x40mm light-up tires that do not require batteries. The wheels illuminate automatically while moving, making the scooter visible in the evening and enhancing safety.

カラフルな点滅ホイール

120x40mmの幅広い光タイヤ使って、
動きながらピカピカホイールが現れる。



子供が大興奮！

夕暮れ、夜道でもよく目立って、
もっと良い安定感があります。

Image: LED light-up wheels for enhanced visibility and fun.

3.3. Foldable Design

This kick scooter is designed to be foldable. It can be compactly stored in just 3 seconds without requiring much force. Its lightweight design (3.1KG) makes it easy for children to carry when folded. Ideal for storage in hallways, indoors, or in a car. **Note: This kick scooter comes fully assembled and does not require additional assembly.**



大きい滑り止めシート

凸凹形で滑りにくく走行中にしっかりサポートします。

安定した大幅デッキ

13cmの幅広いデッキ、足全体が収まできて、安定性を実現できます。

フットブレーキ

ブレーキは止まる時や減速の際片足でブレーキができます。

しっかり握れる ゴムグリップ

滑り止めとハンドルの末端が大きく握り外しを防止します。

Image: Foldable design for convenient storage and portability.

3.4. Gravity Steering

The kick scooter incorporates gravity steering, allowing for easy turns by shifting your body weight. This design helps children develop their balance and coordination, preventing falls by improving maneuverability.

YOLEO キックスクーター

大切なお子様のための洗練された贈り物



Image: Gravity steering mechanism for intuitive turning and balance development.

3.5. Additional Features

- **Stable Wide Deck:** The 13cm wide deck provides ample foot space and stability.
- **Non-slip Deck:** Features a textured, non-slip surface for secure footing during rides.
- **Rear Foot Brake:** Allows for smooth deceleration and quick stops by pressing down with your foot.
- **Secure Rubber Grips:** Handlebar grips are designed for a firm hold, preventing hands from slipping.



Image: Key features including the wide deck, foot brake, and rubber grips.

4. SETUP

The YOLEO Kick Scooter comes pre-assembled, so no complex setup is required. Simply unfold the scooter and adjust the handlebar height to your child's preference.

4.1. Unfolding the Scooter

1. Locate the folding mechanism near the base of the handlebar stem.
2. Press the release button or lever (refer to the diagram on the product for exact location).
3. Pull the handlebar stem upwards until it locks securely into the upright position. Ensure you hear a 'click' sound, indicating it is locked.

4.2. Adjusting Handlebar Height

1. Locate the height adjustment clamp on the handlebar stem.
2. Open the clamp.
3. Press the spring-loaded button and slide the handlebar to the desired height.
4. Ensure the button snaps into one of the adjustment holes.

5. Close the clamp firmly to secure the handlebar in place.

5. OPERATING INSTRUCTIONS

5.1. Riding

1. Place one foot firmly on the scooter deck.
2. Use the other foot to push off the ground, gaining momentum.
3. Once moving, place both feet on the deck, one behind the other.

5.2. Steering

The YOLEO Kick Scooter uses gravity steering. To turn, simply lean your body in the direction you wish to go. The wheels will respond to your body's movement, providing an intuitive and stable steering experience.

5.3. Braking

To slow down or stop, place your foot on the rear brake pedal located above the back wheel. Apply gentle pressure to gradually reduce speed, or firm pressure for a quicker stop. Practice braking in a safe area before riding at higher speeds.

6. MAINTENANCE

- **Cleaning:** Wipe the scooter clean with a damp cloth after each use. Avoid using harsh chemicals or abrasive cleaners.
- **Wheel Inspection:** Regularly check the wheels for wear and tear. Ensure they spin freely and are free from debris.
- **Handlebar and Folding Mechanism:** Periodically check that the handlebar is securely fastened and the folding mechanism operates smoothly. Lubricate moving parts if necessary.
- **Bolts and Screws:** Ensure all bolts and screws are tight before each ride.
- **Storage:** Store the scooter in a dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

7. TROUBLESHOOTING

If you encounter any issues with your YOLEO Kick Scooter, please consider the following general advice:

- **Loose Handlebar:** Ensure the height adjustment clamp is fully tightened and the spring-loaded button is engaged in a hole.
- **Wheels Not Lighting Up:** The LED wheels are motion-activated. Ensure the scooter is moving to activate the lights. If they still don't light up, check for any obstructions or damage to the wheel mechanism.
- **Difficulty Steering:** Ensure the handlebar is correctly installed and not overly tightened, allowing for the lean-to-steer mechanism to function properly.
- **Brake Not Effective:** Check the rear brake pedal for any debris or damage. Ensure it makes proper contact with the wheel.

For persistent issues, please refer to the warranty and support section for contact information.

8. SPECIFICATIONS



Image: Product specifications and dimensions.

Attribute	Value
Brand	YOLEO
Model Number	931
Color	Pink
Features	Light-up wheels, Foldable, Non-slip deck, Lightweight, Adjustable height
Weight Limit	50 kg
Product Dimensions (L x W x H)	56 cm x 17 cm x 58 cm
Number of Wheels	3
Handlebar Type	Stepless adjustment
Brake Style	Rear brake

Product Weight	3.1 kg
Handle Height (Max)	82 cm
Wheel Size	12 cm
Wheel Material	Polyurethane
Frame Material	Aluminum
Country of Origin	China
Included Components	Instruction Manual

9. WARRANTY AND SUPPORT

Your YOLEO Kick Scooter comes with a **1-year manufacturer's warranty** from the date of purchase. If you experience any defects or issues upon arrival of the product, exchanges or returns may be possible. Please contact the seller directly via the 'Ask a Question' button on the product page for prompt assistance. Our customer support team is dedicated to providing quick and effective solutions.

10. PRODUCT VIDEOS

No official product videos from the seller for this specific YOLEO Kick Scooter model were found in the provided data.