

[Manuals.plus](#) /

› [FULMINARE](#) /

› FULMINARE Bluetooth Speaker User Manual

FULMINARE US-XIMEHS02-B

FULMINARE Bluetooth Speaker User Manual

Model: US-XIMEHS02-B

INTRODUCTION

Thank you for choosing the FULMINARE Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read it thoroughly before use.




Front view of the FULMINARE Bluetooth Speaker, showcasing its sleek design and illuminated LED lights.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- FULMINARE Bluetooth Speaker (Model: US-XIMEHS02-B) x 1
- 3.5mm AUX Cable x 1
- USB Charging Cable x 1
- User Manual x 1

Speaker*1

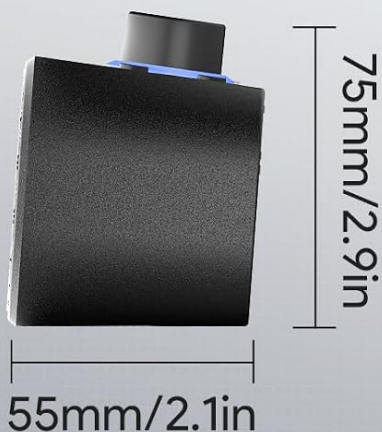

User Manual*1



3.5mm AUX Cable*1



USB charging Cable*1



Image displaying the FULMINARE Bluetooth Speaker, user manual, 3.5mm AUX cable, and USB charging cable included in the package.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

2. Powering On/Off

To power on the speaker, press and hold the power button located on the top panel. You will hear an audible prompt. To power off, press and hold the power button again until the speaker turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for "FULMINARE" in the list of available Bluetooth devices.
4. Select "FULMINARE" to connect. Once connected, the blue LED will stop flashing and remain solid, and you will hear a confirmation tone.

The speaker features Bluetooth 5.3 for stable and efficient wireless connectivity.

2. Audio Playback Options

The FULMINARE speaker supports multiple audio input methods:

- **Bluetooth:** Connect wirelessly as described above.
- **TF Card:** Insert a TF (MicroSD) card into the designated slot. The speaker will automatically switch to TF card mode and begin playing MP3 format songs.
- **USB Drive:** Insert a USB flash drive into the USB port. The speaker will automatically switch to USB mode and play MP3 format songs.
- **AUX Input:** Use the supplied 3.5mm AUX cable to connect the speaker to any device with a 3.5mm audio output jack (e.g., laptop, MP3 player, TV). The speaker will automatically switch to AUX mode.

Enhanced Audio Performance



Wireless Playback



TF Card



USB Drive



AUX Device

Visual representation of the four versatile playback options: Wireless Bluetooth, TF Card, USB Drive, and AUX input.

3. Controls

The speaker features intuitive controls on its top panel:

- **Volume Knob:** Rotate clockwise to increase volume, counter-clockwise to decrease. Press the knob to play/pause audio.
- **Previous Track (<<):** Press to go to the previous track.
- **Next Track (>>):** Press to go to the next track.
- **Mode (M):** Press to switch between Bluetooth, TF Card, USB, and AUX input modes.

4. RGB Light Show

The speaker includes an RGB LED light show that pulses and shifts with your music, creating an immersive visual experience. The lights automatically adjust to the audio. There is no specific control mentioned for the lights, implying they are integrated with the audio playback.

Soothing Light & Sound Fusion

Adjust the volume and enjoy a calming light display that gradually fades, creating a relaxing ambiance that complements your music. The subtle breathing light effect adds a serene atmosphere to enhance your listening experience.



The speaker's LED lights create a dynamic and immersive atmosphere, complementing the audio experience.

5. Wireless Calling

When connected via Bluetooth, the speaker allows for hands-free calling with its built-in microphone. Incoming calls will pause music playback. Press the Play/Pause button (volume knob) to answer or end a call. Long press to reject a call.

Wireless Calling

Stay effortlessly connected with seamless wireless calling, allowing you to take calls directly through your speaker while enjoying crystal-clear sound quality.



A user demonstrating the wireless calling feature, taking a call directly through the speaker for clear, hands-free communication.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Recharge it regularly, even if not in use for extended periods.
- **Water Exposure:** The product specifications indicate "Is Waterproof: False". Avoid exposing the speaker to water or high humidity to prevent damage.

TROUBLESHOOTING


Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed long enough.	Charge the speaker fully. Press and hold the power button for 3-5 seconds.
No sound.	Volume too low; Incorrect input mode; Device not connected.	Increase speaker and device volume. Press 'M' button to select correct input mode. Ensure Bluetooth is paired or AUX/USB/TF card is properly inserted.
Bluetooth pairing fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in Bluetooth pairing mode (flashing blue LED). Turn device Bluetooth off and on. Move device closer to speaker (within 10m).
Audio distortion.	Volume too high; Audio source quality.	Lower the volume on both the speaker and the connected device. Try a different audio source or file.

SPECIFICATIONS

Brand	FULMINARE
Model Name	HS02 (US-XIMEHS02-B)
Speaker Type	Dual Speaker
Connectivity Technology	Bluetooth 5.3, AUX, USB, TF Card
Output Power	26W (Dual 13W drivers)
Frequency Response	16 Hz (Lower bound, as per data)
Battery Life	Up to 30 Hours
Dimensions	2.36 x 15.74 x 2.55 inches
Item Weight	1.47 pounds
Color	Black
Waterproof	No

Enhanced Audio Performance

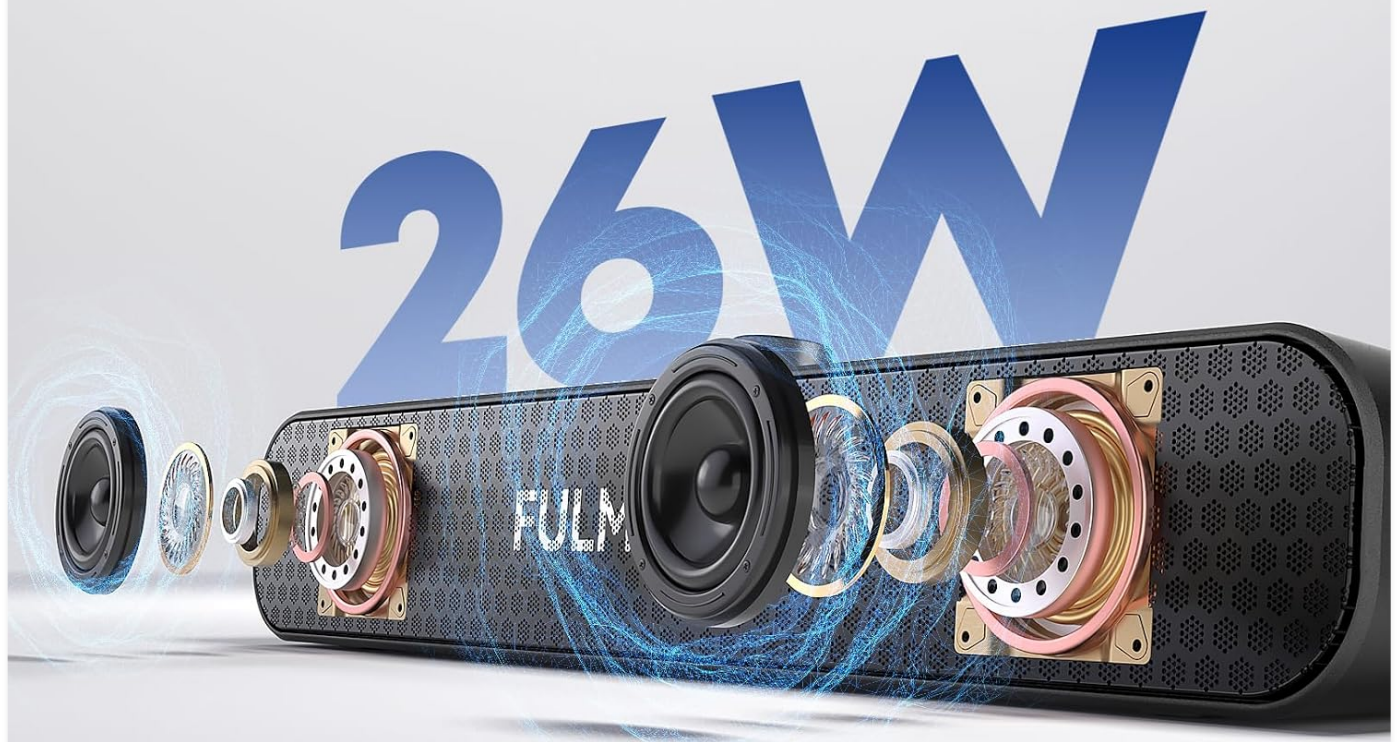

85db Sensitivity
10m Transmission Distance



2 × 52mm
Internal Magnetic Speaker



140Hz-16KHz
Frequency Response

An exploded view illustrating the internal components and audio performance metrics of the FULMINARE speaker.

WARRANTY AND SUPPORT

The FULMINARE Bluetooth Speaker comes with a **Limited Warranty**. For detailed warranty information or technical support, please refer to the contact information provided on the product packaging or visit the official FULMINARE website. Keep your purchase receipt for warranty claims.

For further assistance, you may also contact the seller directly through the platform where the product was purchased.

© 2025 FULMINARE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question