

[Manuals.plus](#) /

› [Aeitto](#) /

› Aeitto Slow Juicer Machine User Manual (Model B0DR8HKH4R)

Aeitto B0DR8HKH4R

Aeitto Slow Juicer Machine User Manual

Model: B0DR8HKH4R

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Aeitto Slow Juicer Machine. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Aeitto Slow Juicer Machine in green, shown with a measuring cup filled with green juice.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the juicer from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Ensure all parts are correctly assembled before operating the juicer.
- Do not use the appliance if the power cord or plug is damaged.
- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aeitto Slow Juicer Machine:

Motor Base: Contains the motor and control panel.

Juicing Bowl: Collects the juice and pulp.

Auger: The spiral component that crushes fruits and vegetables.

Filter Screen: Separates juice from pulp.

Feeding Chute: Where ingredients are inserted.

Pusher: Used to guide ingredients into the chute.

Pulp Outlet: Discharges dry pulp.

Juice Outlet: Dispenses fresh juice.

Juice Cup & Pulp Container: For collecting juice and pulp.

Cleaning Brush: For easy cleaning of components.

2 Masticating Modes

Hard Mode



Celery



Carrot




Apple



Ginger



Pineapple

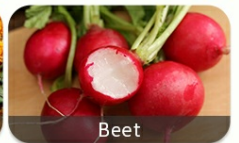

Beet

Soft Mode



Orange



Blueberry



Watermelon



Tomato



Kiwi



Strawberry

Image: Diagram showing the quick setup and disassembly of the juicer, illustrating its main components.

SETUP AND ASSEMBLY

1. Place the motor base on a stable, flat surface.
2. Align the juicing bowl with the motor base and rotate until it locks into place.
3. Insert the filter screen into the juicing bowl.
4. Place the auger into the center of the filter screen, pressing down firmly.
5. Attach the feeding chute assembly to the juicing bowl, ensuring it clicks securely.
6. Position the juice cup under the juice outlet and the pulp container under the pulp outlet.

Easy To Clean & Disassemble



Clean With Brush



One Button Disassemble



Dishwasher Safe

All parts, except the main motor, can be cleaned with the included brush or in the dishwasher

Image: The juicer components laid out, demonstrating ease of disassembly for cleaning.

OPERATING INSTRUCTIONS

Preparation of Ingredients:

- Wash all fruits and vegetables thoroughly.
- The 3.6-inch wide chute accommodates large pieces, reducing the need for extensive pre-cutting. However, very large or fibrous items may benefit from being cut into smaller, manageable pieces.
- Remove hard pits from fruits like peaches, plums, and cherries.
- Peel citrus fruits before juicing.

3.6 Inch Extra-Wide Chute

Reduce Preparation & Save Your Time

Ours

Others



Image: A visual comparison highlighting the advantage of the 3.6-inch wide chute for larger fruits and vegetables, reducing preparation time.

Juicing Process:

1. Plug in the juicer.
2. Select the appropriate masticating mode:
 - **Hard Mode:** For firm ingredients such as celery, carrots, apples, ginger, pineapple, and beets.
 - **Soft Mode:** For softer ingredients like oranges, blueberries, watermelon, tomatoes, kiwi, and strawberries.
3. Turn on the juicer using the 'Power' button.
4. Gradually feed ingredients into the feeding chute. Use the pusher only if necessary to gently guide ingredients. Do not force ingredients.
5. The juicer will automatically separate juice into the juice cup and pulp into the pulp container.
6. When finished, press the 'Power' button to turn off the juicer and unplug it.

2 Masticating Modes

Hard Mode



Celery



Carrot



Beet



Ginger



Pineapple



Apple

Soft Mode



Orange



Blueberry



Watermelon



Tomato



Kiwi



Strawberry

Image: A display of various fruits and vegetables categorized under 'Hard Mode' and 'Soft Mode' for the juicer's two masticating settings.

2.0 Upgraded Auger

Juice Yield Up To 90%



Thick Cutting Kerf

Fast Cutting



Larger Diameter

High Juice Yield



Thread Design

Less Clog

Image: An illustration detailing the 2.0 upgraded auger, highlighting features like thick cutting kerf, larger diameter, and thread design for efficient juicing and less clogging.

CLEANING AND MAINTENANCE


Regular cleaning ensures optimal performance and longevity of your juicer.

1. Unplug the juicer from the power outlet.
2. Press the disassembly button and rotate the feeding chute assembly to unlock and remove it.
3. Remove the auger, filter screen, and juicing bowl.
4. Rinse all detachable parts under running water. Use the included cleaning brush to remove any pulp residue from the filter screen and other components.
5. All detachable parts are dishwasher safe for convenience.
6. Wipe the motor base with a damp cloth. Never immerse the motor base in water.
7. Allow all parts to dry completely before reassembling or storing.

2X Juicing Efficiency

Get more juice in less time

Aeitto Laboratory Data

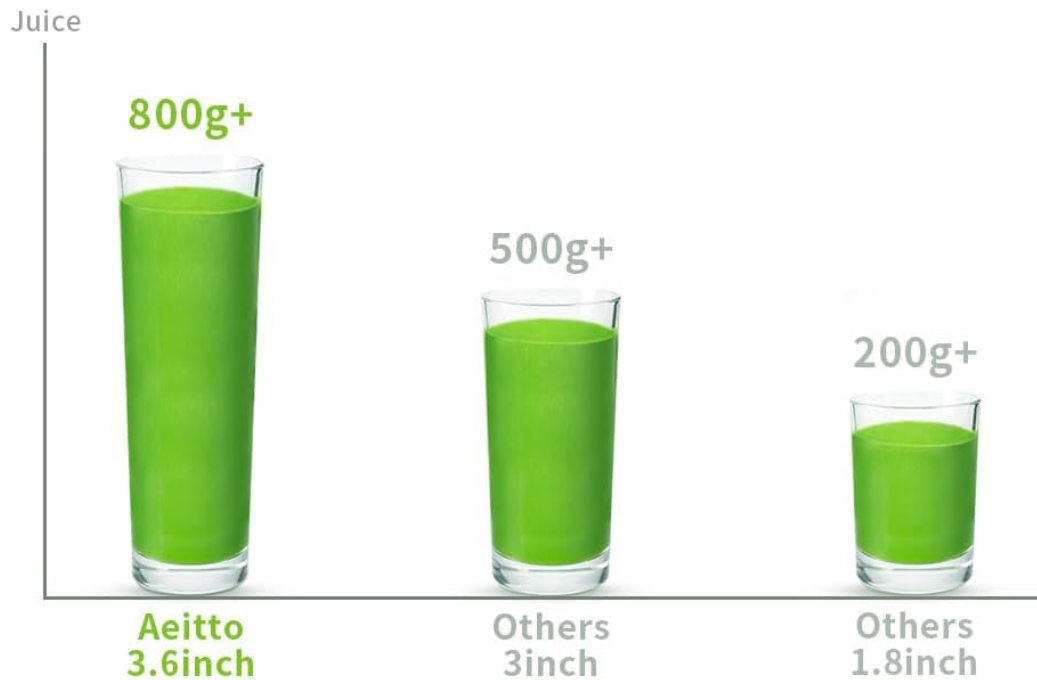

*Note: Data is based on the yeild of celery juice tested using different juicers within five minutes under the same conditions.

Image: A visual guide demonstrating how to clean the juicer components using the provided brush and indicating that parts are dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; parts not assembled correctly.	Ensure power cord is securely plugged in. Check that all components are locked into place.

Problem	Possible Cause	Solution
Excessive vibration or noise.	Improper assembly; hard ingredients forced.	Disassemble and reassemble all parts correctly. Do not force hard ingredients; cut them smaller if needed.
Low juice yield or wet pulp.	Incorrect mode selected; filter screen clogged.	Ensure 'Hard' mode is used for firm produce and 'Soft' for soft produce. Clean the filter screen thoroughly.
Juicer stops during operation.	Overload protection activated; blockage.	Turn off and unplug. Remove any blockage. Let the motor cool down for 15-30 minutes before restarting.

SPECIFICATIONS

Brand: Aeitto

Model: B0DR8HKH4R

Product Dimensions: 7.87"D x 17.71"W x 13.81"H

Item Weight: 11.05 pounds

Chute Size: 3.6 inches (Wide Chute)

Masticating Modes: 2 (Soft & Hard)

Dishwasher Safe Parts: Yes (all detachable parts)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Aeitto website. Keep your purchase receipt as proof of purchase for warranty claims. Aeitto is committed to providing quality products and customer satisfaction. For further assistance, please contact customer service.

© 2025 Aeitto. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question