



[Manuals.plus](#) /

› [XINFUTE](#) /

› XINFUTE RM-L1162 Universal Remote Control User Manual

## XINFUTE RM-L1162

# XINFUTE RM-L1162 Universal Remote Control User Manual

Model: RM-L1162

## 1. INTRODUCTION

---

This manual provides instructions for the XINFUTE RM-L1162 Universal Remote Control. This remote is designed to be a direct replacement and is compatible with most LG LCD TV models, including those that originally used the AKB73715610 remote, such as the 55LA691V. It requires no programming and is ready for use upon battery installation.



Image 1.1: Front view of the XINFUTE RM-L1162 remote control, showing all buttons and layout.

## 2. SETUP

---

### 2.1 Battery Installation

The XINFUTE RM-L1162 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the

markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image 2.1: Rear view of the remote control showing the open battery compartment and proper battery orientation.

## 2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your LG LCD TV and press the Power button to test functionality.

## 3. OPERATING INSTRUCTIONS

---

The XINFUTE RM-L1162 remote control provides full functionality for your compatible LG LCD TV. Below is a general guide to common button functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (▲/▼):** Adjusts the TV volume.
- **Channel Up/Down (▲/▼):** Changes TV channels sequentially.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back/Exit Button:** Returns to the previous screen or exits the current menu.
- **Smart TV/App Buttons (e.g., MY APPS):** Accesses smart TV features or installed applications (functionality may vary based on TV model).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications.

Refer to your LG TV's original user manual for specific functions of advanced buttons if needed.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### 4.3 Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

## 5. TROUBLESHOOTING

---

If you experience issues with your XINFUTE RM-L1162 remote control, please refer to the following common solutions:

- **Remote not responding:**
  - Ensure batteries are correctly installed with proper polarity (+/-).
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote and the TV's infrared sensor.
  - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Specific buttons not working:**
  - This remote is a universal replacement. While it supports most functions, some highly specific or advanced features of your original LG remote might not be replicated.

- Clean the remote's surface and buttons to ensure no debris is interfering with button presses.
- **TV not turning on/off:**
  - Verify the TV is plugged into a power source and is not in standby mode due to a power outage.
  - Test the remote with another LG TV if available to confirm the remote's functionality.

## 6. SPECIFICATIONS

---

|                                |  |
|--------------------------------|--|
| <b>Model Number</b>            | RM-L1162   |
| <b>Brand</b>                   | XINFUTE  |
| <b>Compatible Devices</b>      | LG LCD Televisions (Universal fit, including AKB73715610, 55LA691V models) |
| <b>Connectivity Technology</b> | Infrared (IR)  |
| <b>Power Source</b>            | 2 x AAA Batteries (not included)   |
| <b>Material</b>                | ABS Material   |
| <b>Product Dimensions</b>      | 6 x 3 x 1 inches (approximately)   |
| <b>Item Weight</b>             | 2.82 ounces (approximately)  |
| <b>Special Feature</b>         | Ergonomic, No Programming Required   |

## 7. WARRANTY AND SUPPORT

---

### 7.1 Product Warranty

The XINFUTE RM-L1162 Universal Remote Control comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

### 7.2 Customer Support

For any questions, concerns, or issues not covered in this manual, please contact XINFUTE customer support. All goods are inspected before shipment. If you are not satisfied with your purchase, you may contact us within 24 hours of receipt for assistance.

For support, please refer to the contact information provided with your purchase or visit the official XINFUTE store page on Amazon: [XINFUTE Store](#).