

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Westclox](#) /

> [Westclox Digital Alarm Clock User Manual - Model B0DR8LP7QQ](#)

Westclox B0DR8LP7QQ

Westclox Digital Alarm Clock User Manual

Model: B0DR8LP7QQ

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Westclox Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

2. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the clock will not be used for an extended period.
- Dispose of used batteries responsibly according to local regulations.
- Keep the device away from water and high humidity.
- Avoid extreme temperatures and direct sunlight.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Westclox Digital Alarm Clock (Model B0DR8LP7QQ)
- User Manual (this document)

Note: 3 AAA batteries are required for operation and are not included.

4. PRODUCT OVERVIEW

4.1 Front View



Image 4.1: Front view of the Westclox Digital Alarm Clock. The large LCD displays the current time, AM/PM indicator, alarm time, month, date, and indoor temperature.

1. **Large LCD Display:** Shows time, alarm, month, date, and temperature.
2. **Snooze/Light Button:** Located on top, activates backlight and snooze function.

4.2 Back View and Controls



Image 4.2: Back view of the Westclox Digital Alarm Clock. This image highlights the battery compartment and various control buttons and switches for setting time, alarm, date, and temperature units.

1. **ALARM ON/OFF Switch:** Activates or deactivates the alarm.
2. **12/24 YEAR Button:** Toggles between 12-hour and 24-hour time format, and sets the year.

3. **°C / °F MINUTE / DATE Button:** Toggles between Celsius and Fahrenheit temperature display, and sets the minute/date.
4. **HOUR MONTH Button:** Sets the hour/month.
5. **SET Button:** Enters setting mode.
6. **RUN / ALM / DATE / TIME Switch:** Selects the mode for setting (Run, Alarm, Date, Time).
7. **Battery Compartment:** Holds 3 AAA batteries.

5. SETUP

5.1 Battery Installation

1. Open the battery compartment cover on the back of the clock.
2. Insert 3 new AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.
4. The clock display will activate.

5.2 Initial Time and Date Setting

After battery installation, the clock will typically display a default time. Follow these steps to set the correct time and date:

1. Slide the **RUN / ALM / DATE / TIME** switch to **TIME**.
2. Press the **SET** button. The hour digits will flash.
3. Press the **HOUR MONTH** button to adjust the hour. Observe the AM/PM indicator for 12-hour format.
4. Press the **SET** button again. The minute digits will flash.
5. Press the **°C / °F MINUTE / DATE** button to adjust the minutes.
6. Press the **SET** button again. The year digits will flash.
7. Press the **12/24 YEAR** button to adjust the year.
8. Press the **SET** button again. The month digits will flash.
9. Press the **HOUR MONTH** button to adjust the month.
10. Press the **SET** button again. The date digits will flash.
11. Press the **°C / °F MINUTE / DATE** button to adjust the date.
12. Press the **SET** button one last time to confirm all settings and exit time/date setting mode.
13. Slide the **RUN / ALM / DATE / TIME** switch back to **RUN** for normal operation.

6. OPERATING INSTRUCTIONS

6.1 Setting the Alarm

1. Slide the **RUN / ALM / DATE / TIME** switch to **ALM**. The alarm time will be displayed.
2. Press the **SET** button. The alarm hour digits will flash.
3. Press the **HOUR MONTH** button to adjust the alarm hour. Observe the AM/PM indicator.
4. Press the **SET** button again. The alarm minute digits will flash.
5. Press the **°C / °F MINUTE / DATE** button to adjust the alarm minutes.
6. Press the **SET** button one last time to confirm the alarm setting.
7. Slide the **RUN / ALM / DATE / TIME** switch back to **RUN**.
8. To activate the alarm, slide the **ALARM ON/OFF** switch to **ON**. A bell icon will appear on the display.

6.2 Snooze Function and Backlight

- When the alarm sounds, press the large **SNOOZE/LIGHT** button on top of the clock. The alarm will pause for approximately 5 minutes.
- Pressing the **SNOOZE/LIGHT** button at any time will activate the shallow white backlight for about 5 seconds, providing temporary illumination of the display.

6.3 12/24 Hour Format

In normal **RUN** mode, press the **12/24 YEAR** button to toggle between 12-hour (with AM/PM indicator) and 24-hour time formats.

6.4 Temperature Display (°C / °F)

In normal **RUN** mode, press the **°C / °F MINUTE / DATE** button to switch the temperature display between Celsius (°C) and Fahrenheit (°F).

7. MAINTENANCE

7.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or display.

7.2 Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the steps in Section 5.1 for battery installation.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace with new AAA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the ALARM ON/OFF switch is set to ON and the alarm time is correctly set (refer to Section 6.1).
Time or date is incorrect.	Time/date was not set correctly or batteries were removed.	Re-set the time and date (refer to Section 5.2).
Backlight does not work.	Batteries are low or backlight function is faulty.	Replace batteries. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model	B0DR8LP7QQ
Display Type	Digital LCD
Dimensions (W x H x D)	5" x 2.7" x 2.9" (12.7 cm x 6.86 cm x 7.37 cm)
Power Source	3 x AAA Batteries (not included)

Feature	Detail
Backlight	Shallow White, 5-second duration
Snooze Duration	5 minutes
Temperature Display	Celsius (°C) / Fahrenheit (°F)
Time Format	12-hour / 24-hour selectable
Weight	5.3 ounces (approx. 150g)



Image 9.1: Dimensions of the Westclox Digital Alarm Clock. Note: The product description states a depth of 2.9 inches, while this image indicates 1.75 inches. Please refer to the product packaging for the most accurate dimensions.

10. WARRANTY AND SUPPORT

10.1 Limited Warranty

This Westclox Digital Alarm Clock is covered by a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or battery leakage.

Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Westclox customer support. Refer to the product packaging or the official Westclox website for current contact information.