

- Manuals.plus /
- › [APD APETDOLA](#) /
- › APD APETDOLA FS10Pro-5 Wireless Pet Water Fountain User Manual

APD APETDOLA FS10Pro-5

APD APETDOLA FS10Pro-5 Wireless Pet Water Fountain
USER MANUAL

1. Product Overview

The APD APETDOLA FS10Pro-5 is a wireless, battery-operated pet water fountain designed to provide fresh, filtered water for cats and small to medium-sized dogs. Constructed from SUS 304 stainless steel, it features a large 152oz (4.5L) capacity and multiple operating modes to suit your pet's preferences.

Fresh in Every Drop

6-layer filtration system keep drinking water fresher, healthier, better taste for your fur babies.



1. KDF



2. Activated Carbon



3. Ionic resin



4. Maifan Stone



5. Tourmaline



6. Acupuncture cotton

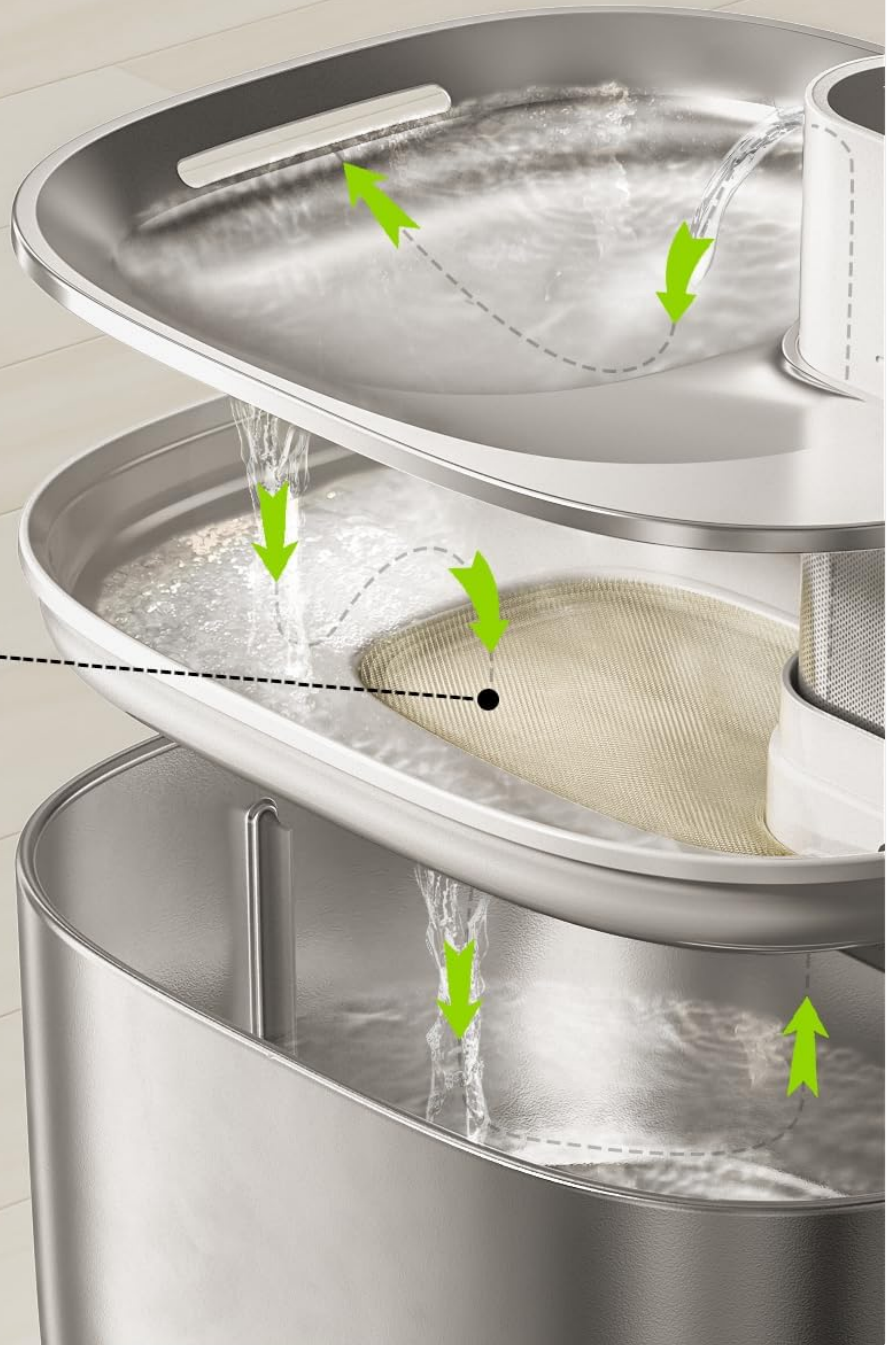 


Image: The APD APETDOLA FS10Pro-5 Wireless Pet Water Fountain, a stainless steel unit with a visible water level indicator.

Key Features:

- **Wireless Design:** Offers flexible placement without cord limitations.
- **Long Battery Life:** Built-in 4000mAh rechargeable battery provides up to 60 days of operation on a single charge.
- **Large Capacity:** 152oz (4.5L) water tank ensures hydration for up to 2 weeks.
- **Durable Material:** Made from SUS 304 food-grade stainless steel for safety, durability, and easy cleaning.

- **Triple Water Modes:** Includes Sensing Mode (motion-activated), Intermittent Mode (timed dispensing), and Constant Mode (continuous flow).
- **Ultra-Quiet Operation:** Operates at a low 20dB noise level.
- **Multi-Layer Filtration:** Ensures clean and fresh water by removing impurities.

304 Food-Grade Stainless Steel

Hygienic and easy-to-clean
stainless steel more durable helps
pets become healthier.



Image: A cat sitting beside the stainless steel pet water fountain, highlighting its durable and hygienic construction.

2. Safety Instructions

Please read and follow all safety instructions carefully to prevent injury or damage to the product.

- This product is intended for pet use only. Do not use for human consumption.
- For indoor use only. Do not expose to rain or extreme temperatures.
- Keep the product out of reach of children and pets during charging to prevent accidental damage or injury.
- Never submerge the electric motor or the main control module in water. Only the stainless steel components are washable.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Use only the provided power adapter and charging cable.
- Regularly inspect the power cord and pump for any signs of damage. Discontinue use if damaged.
- Unplug the fountain before cleaning or performing any maintenance.

3. Package Contents

Verify that all items are present in the package:

- Stainless Steel Water Tank × 1
- Stainless Steel Water Tray × 1
- Master Control Module × 1
- Filter Tray × 1
- Filter Cotton × 20
- Filter × 5
- Type-C Cable × 1
- Adapter × 1
- Cleaning Brush × 1
- User Manual × 1

Packing Accessories

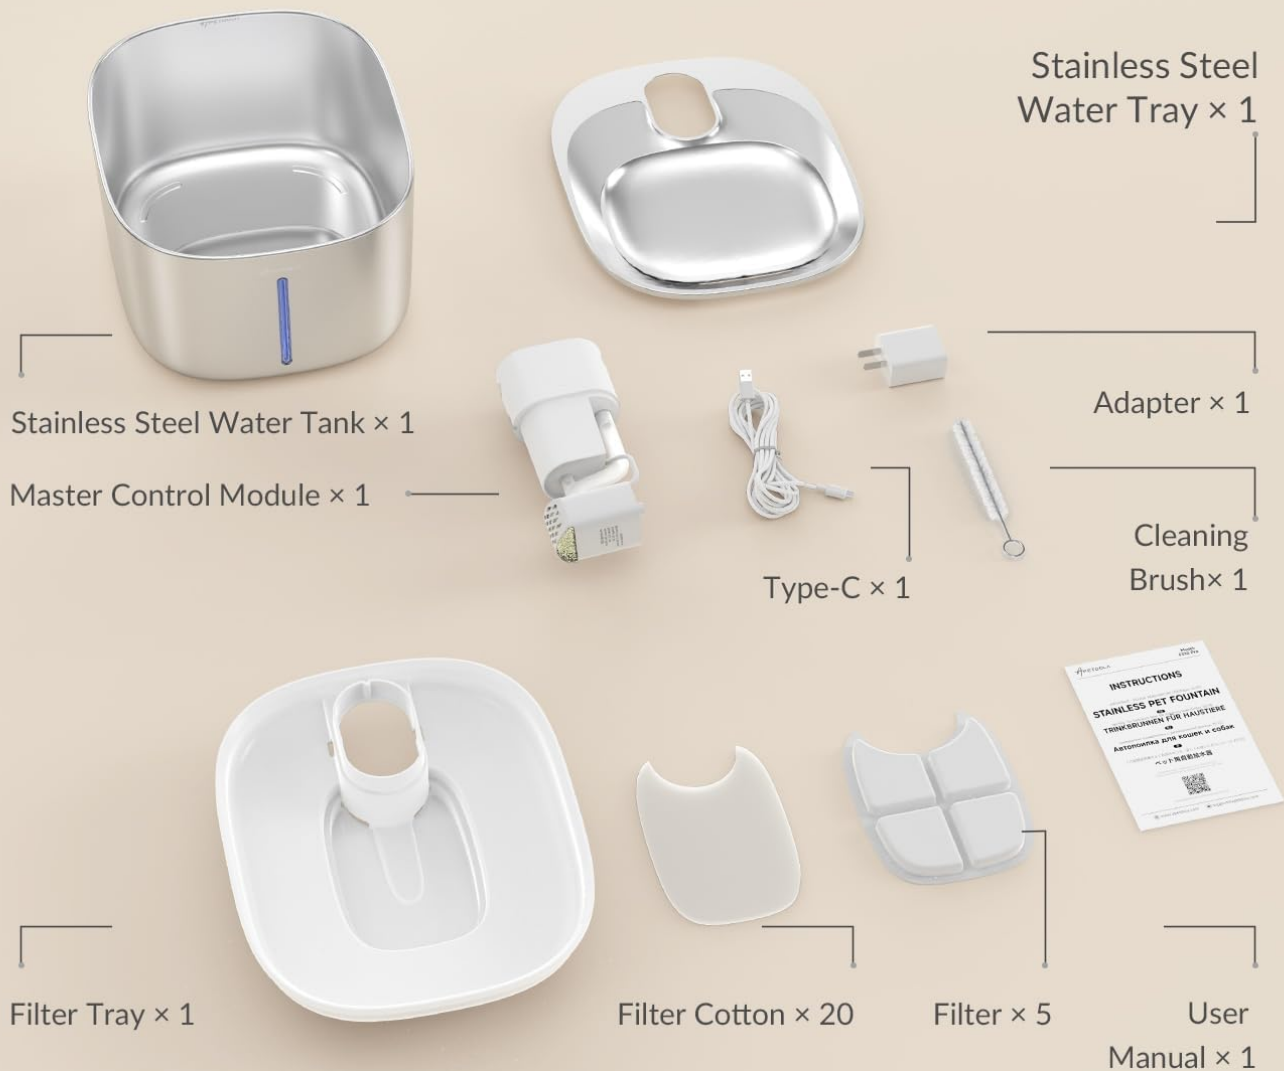 


Image: All components of the APD APETDOLA pet water fountain, including the stainless steel tank, tray, control module, filters, and accessories.

4. Setup Instructions

Follow these steps to assemble and prepare your pet water fountain for first use:

1. **Clean Components:** Wash the stainless steel water tank, water tray, and filter tray with mild soap and water. Rinse thoroughly. Do not wash the Master Control Module.
2. **Install Filter:** Place one filter cotton and one filter into the filter tray.
3. **Assemble Pump:** Attach the Master Control Module to the filter tray, ensuring a secure fit.
4. **Place in Tank:** Insert the assembled filter tray and Master Control Module into the stainless steel water tank.

5. **Fill with Water:** Fill the stainless steel water tank with fresh water up to the 'MAX' line. Do not overfill.
6. **Place Water Tray:** Position the stainless steel water tray on top of the tank, ensuring it sits correctly.
7. **Initial Charge:** For optimal performance, fully charge the fountain before first use. Connect the Type-C cable to the Master Control Module and the adapter to a power outlet. The battery indicator will show charging status.

Wireless Put it Anywhere

Battery-Operated help your pets can drink wherever they feel comfortable.



Image: A cat drinking from the wireless pet water fountain, demonstrating its flexible placement in a home environment.

Your browser does not support the video tag.

5. Operating Instructions

The fountain offers three distinct operating modes:

- **Sensing Mode (Recommended):** The fountain dispenses water for 15 seconds when a pet approaches within 31.5 inches (80 cm). This mode conserves battery life and encourages pets to drink.
- **Intermittent Mode:** Water is dispensed for 15 seconds at intervals of 10 minutes. This mode provides regular hydration while still being energy efficient.
- **Constant Mode:** Water flows continuously. This mode is ideal for pets who prefer a constant water source.

Changing Modes:

Press the mode button on the Master Control Module to cycle through the available modes. The indicator light will change to reflect the selected mode.

Battery and Charging:

The built-in 4000mAh battery provides extended operation. When the battery is low, an indicator light will alert you. Connect the Type-C cable to the charging port on the Master Control Module and plug the adapter into a power source to recharge.

3 Work Modes

With sensor mode, entices instinct to drink more water.



Sensor mode

Water Runs Auto When Cat Approaches.

120°

4-6ft



Timed Mode (unplugged)
Save energy by running water every 15 minutes.



Continuous mode (plug in)
For pets 24/7 hydration.

Image: A cat approaching the pet water fountain, illustrating the sensor mode which activates water flow when a pet is detected.

Reassuring Power

Battery operated for safer hydration. Lasts up to 60-100 days on a single charge.



Image: The pet water fountain's Master Control Module being charged via a USB-C cable, highlighting its rechargeable battery feature.

Your browser does not support the video tag.

Video: Demonstrates the various operating modes and features of the FS40 Cat Water Fountain, including continuous and timed flow.

6. Maintenance

Regular cleaning and filter replacement are crucial for maintaining water quality and extending the life of your fountain.

Cleaning the Fountain:

1. **Disassemble:** Turn off the fountain and unplug it. Remove the water tray, Master Control Module, and filter tray.
2. **Clean Stainless Steel Parts:** Wash the stainless steel water tank and water tray with mild soap and water. These parts are dishwasher-safe.
3. **Clean Filter Tray and Module:** Gently scrub the filter tray and the exterior of the Master Control Module with the provided cleaning brush. **Do not submerge the Master Control Module in water.**
4. **Rinse and Dry:** Rinse all components thoroughly and dry them before reassembly.

Filter Replacement:

It is recommended to change the filters every two weeks and clean the pump and the automatic cat water dispenser at least once a week to maintain your pet's health.

- Remove the old filter cotton and filter from the filter tray.
- Insert a new filter cotton and filter into the filter tray.
- Replacement filters can be purchased by searching for ASIN **B0C36JSP76**.



Image: A diagram illustrating the 6-layer filtration system, showing different media layers like KDF, activated carbon, and maifan stone for water purification.

5 Pack Filters & 20 Pack Pre-Filter Sponges

Help to increase your pet's water consumption and reduce the risk of urinary tract infections.

Please replace the filter every 4 weeks and replace the pre-filter sponge once a week.

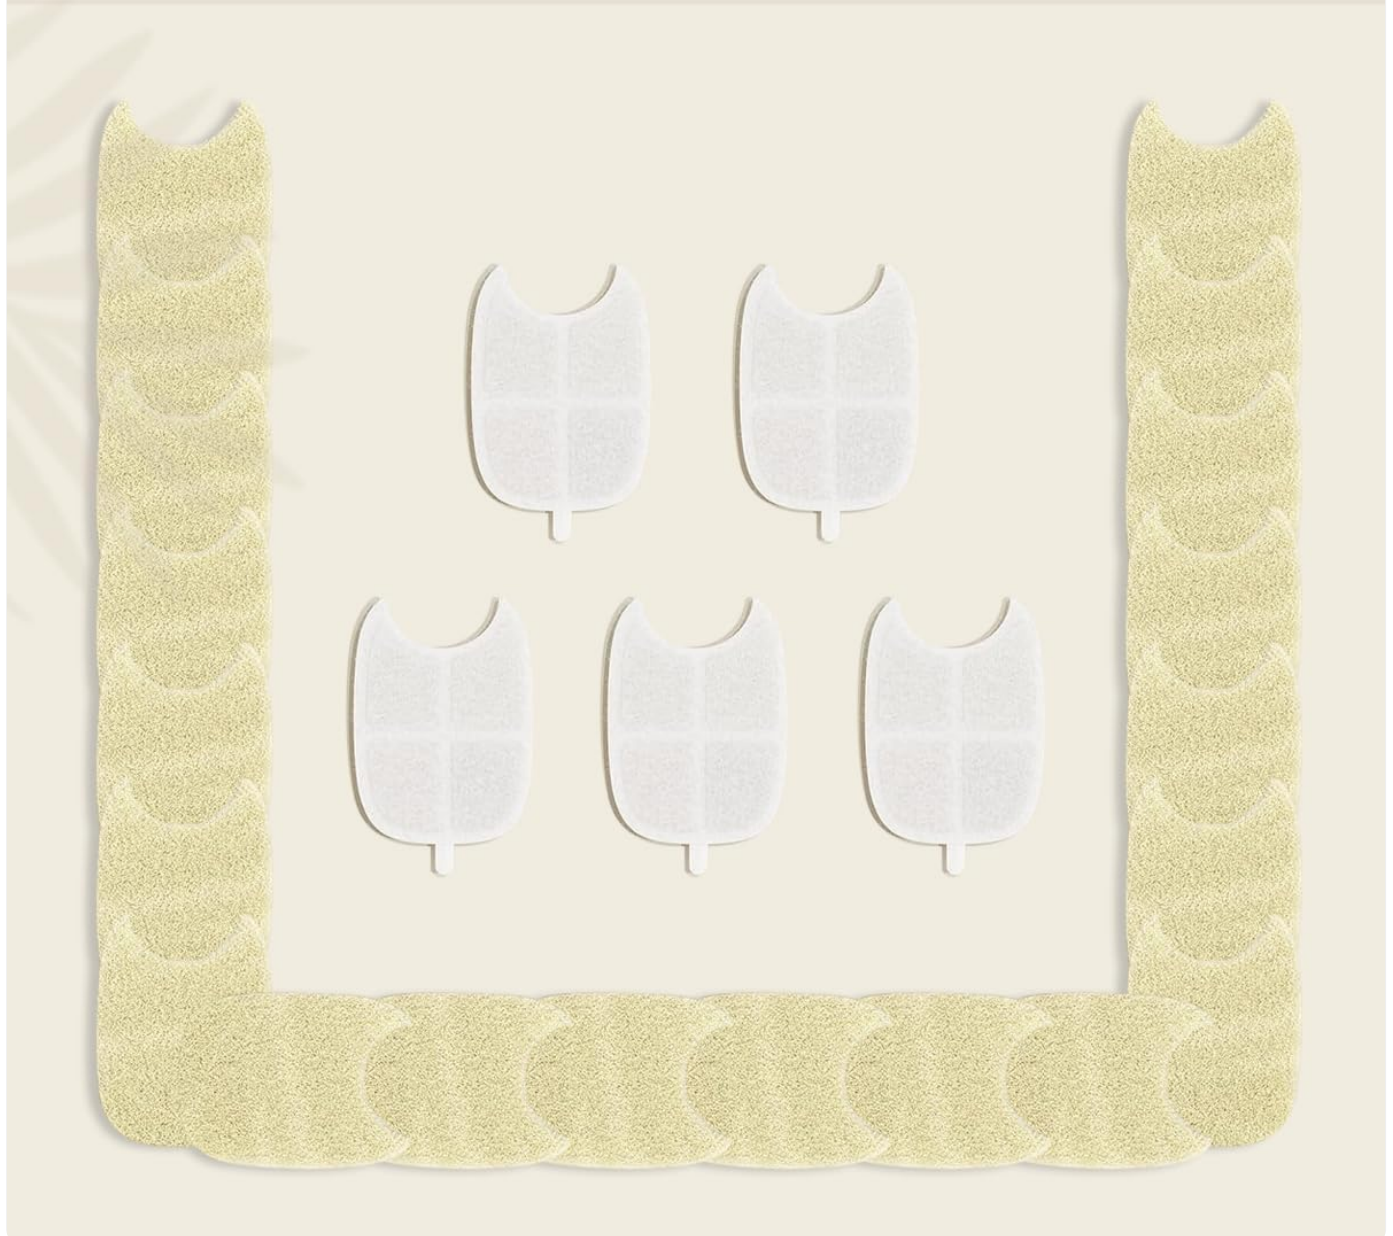 


Image: A visual representation of the 5-pack filters and 20-pack pre-filter sponges, essential for maintaining water quality.

Your browser does not support the video tag.

Video: A step-by-step guide on how to clean the water pump of the pet water fountain, including disassembly and reassembly.

7. Troubleshooting

If you encounter any issues with your pet water fountain, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water flow	Low battery; Water level too low; Pump clogged; Incorrect mode.	Charge the fountain; Refill water to MAX line; Clean the pump and filter; Switch to Constant or Sensing mode.
Fountain is noisy	Low water level; Pump not properly installed; Debris in pump.	Refill water; Ensure pump is securely seated; Clean the pump thoroughly.
Water tastes or smells bad	Filter needs replacement; Fountain needs cleaning.	Replace the filter; Clean all fountain components thoroughly.
Indicator lights not working	No power; Malfunction.	Ensure fountain is charged or connected to power; Contact customer support if issue persists.

8. Specifications

- **Model Number:** FS10Pro-5
- **Material:** SUS 304 Stainless Steel
- **Capacity:** 152 fl oz (4.5 L)
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Battery Capacity:** 4000mAh
- **Noise Level:** < 20dB
- **Special Features:** Automatic Water Bowl, Wireless, Motion Sensor
- **Dimensions:** 26.9 x 23.29 x 15.6 cm
- **Weight:** 1.55 kg

9. Warranty and Support

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact APD APETDOLA customer support.

If you have any questions, require technical assistance, or need to report an issue, please contact our customer support team through the retailer's platform or visit the official APD APETDOLA website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DR8V2Z1N>

More documents and user manuals: <https://manuals.plus/>