

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [aiprotabket](#) /
- › [aiprotabket 10-inch Android 14 Tablet User Manual](#)

aiprotabket K12

aiprotabket 10-inch Android 14 Tablet User Manual

Model: K12

1. PRODUCT OVERVIEW

The aiprotabket 10-inch Android 14 Tablet is a versatile 2-in-1 device designed to enhance both productivity and entertainment. It comes equipped with a Bluetooth keyboard, wireless mouse, and a protective case, allowing for seamless transitions between tablet and laptop modes. Powered by Android 14, it offers a responsive and intuitive user experience.



Figure 1: aiprotab 10-inch Android 14 Tablet and its accessories.

2. WHAT'S IN THE BOX

- aiprotab 10-inch Android 14 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- Foldable Protective Case
- Charger
- Stylus

3. INITIAL SETUP

3.1 Charging the Tablet

Before first use, fully charge the tablet using the provided charger. Connect the charger to the tablet's charging port and plug it into a power outlet. The battery indicator on the screen will show charging status.

3.2 Powering On/Off

- To power on: Press and hold the Power button until the aiprotab^{le}t logo appears.
- To power off: Press and hold the Power button, then select 'Power off' from the options.
- To restart: Press and hold the Power button, then select 'Restart' from the options.

3.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to complete the initial setup:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password).

Your browser does not support the video tag.

Video 1: Unboxing and initial setup of the aiprotab^{le}t K12 Tablet, demonstrating how to connect accessories and navigate the initial Android setup screens.

4. OPERATING THE TABLET

4.1 Navigating the Interface

- **Home Screen:** Swipe left/right to access different pages.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, etc.).

4.2 Connecting Accessories

- **Bluetooth Keyboard:** Turn on the keyboard and enable Bluetooth on the tablet. Go to Settings > Connected devices > Pair new device, and select the keyboard from the list.
- **Wireless Mouse:** Ensure the mouse is powered on and in pairing mode. Follow the same Bluetooth pairing steps as the keyboard.
- **Stylus:** The stylus is passive and does not require pairing. Simply use it directly on the touch screen for precise input.

4.3 Using Split Screen Mode

The tablet supports split-screen multitasking. To activate:

1. Open the first app you want to use.
2. Tap the recent apps button (square icon) to view open applications.
3. Tap the app icon at the top of the first app's card, then select 'Split screen'.
4. Choose the second app from the recent apps list or app drawer to fill the other half of the screen.

10.1 inch tablet with split screen



10.1 inch
Display



1280x800
Resolution



84%
Screen-to-Body
Ratio



Split Screen

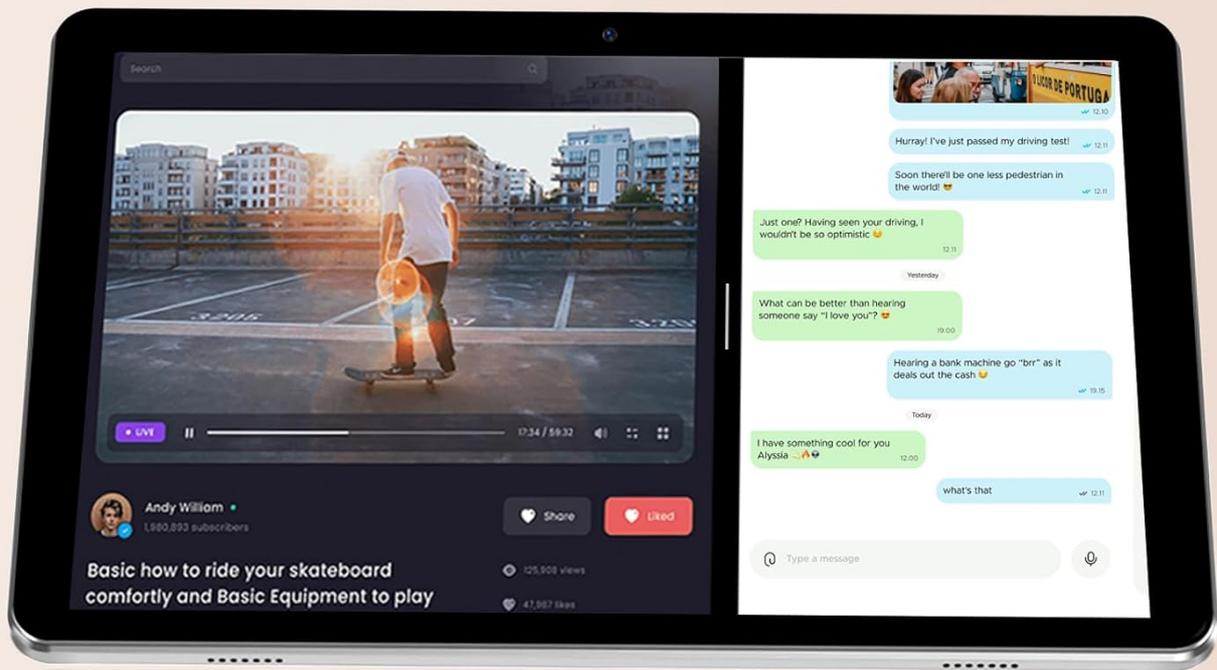


Figure 2: Efficient multitasking with split-screen mode.

5. FEATURES AND SPECIFICATIONS

5.1 Key Features

- **Operating System:** Android 14 (GMS Certified)
- **Processor:** 2.0GHz Quad-Core Unisoc Chipset
- **Memory:** 6GB RAM + 64GB ROM (Expandable up to 1TB via microSD card)
- **Display:** 10.1-inch IPS HD Touch Screen (1280x800 resolution, 84% Screen-to-Body Ratio)
- **Cameras:** Dual Cameras (Front and Rear)
- **Audio:** Dual Speakers
- **Connectivity:** Wi-Fi 6 (2.4G/5G 802.11ax), Bluetooth 5.0
- **Battery:** 6000mAh (Up to 8 hours of regular operation, 12 hours standby)
- **Media:** Widevine L1 support for HD streaming (Netflix, Prime Video, YouTube, Hulu)

Figure 3: Overview of key tablet features.

5.2 Physical Specifications

Attribute	Value
Dimensions (LxWxH)	9.5 x 7 x 0.5 inches
Weight	2.2 pounds
Color	Silver

6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not leave the tablet fully discharged for extended periods.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to Settings > System > System update.

- **Storage Management:** Periodically clear unnecessary files and uninstall unused apps to free up storage space.

7. TROUBLESHOOTING

Problem	Possible Solution
Tablet won't turn on	Ensure the tablet is charged. Connect to charger for at least 30 minutes. If still unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unused apps. Clear cache for frequently used apps. Check for system updates. Consider a factory reset if issues persist (backup data first).
Bluetooth accessories not pairing	Ensure accessories are in pairing mode and fully charged. Restart tablet and accessories. Check tablet's Bluetooth settings.

8. WARRANTY AND SUPPORT

Your aiprotaplet K12 Tablet comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included in your product packaging or visit the official aiprotaplet website. For technical support, troubleshooting assistance, or service inquiries, please contact aiprotaplet customer service through their official channels. Keep your purchase receipt and product serial number handy for faster service.

For more information, visit the [aiprotaplet Store](#).