

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mattel](#) /

› [Mattel WWE Money in The Bank Cash-in Ring Playset Instruction Manual \(Model JJB81\)](#)

## Mattel JJB81

# Mattel WWE Money in The Bank Cash-in Ring Playset Instruction Manual

Brand: Mattel | Model: JJB81

## 1. IMPORTANT SAFETY INFORMATION

- **Recommended Age:** This playset is suitable for children aged 6 years and up.
- **Small Parts:** The playset includes small accessories such as the briefcase and ladders, which may pose a choking hazard for younger children. Adult supervision is recommended.
- **Battery Safety:** The playset requires 3 LR44 batteries (included). Ensure batteries are inserted with correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly.

## 2. WHAT'S INCLUDED

Your Mattel WWE Money In The Bank Cash-in Ring Playset package contains the following items:

- 1 x WWE Money In The Bank Cash-in Ring playset
- 1 x Breakaway scaffold crane
- 1 x Briefcase accessory
- 2 x Ladder accessories
- 3 x LR44 batteries (pre-installed or included separately)

**Note:** WWE Superstar action figures are sold separately and are not included with this playset.

## 3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your WWE Money In The Bank Cash-in Ring Playset:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Ring:** Snap the ring components together securely. Ensure all connections are firm.

3. **Apply Stickers:** Apply any included decorative stickers to the designated areas on the ring and accessories as shown in the product illustrations.
4. **Install Batteries:** Locate the battery compartment, typically on the underside of the ring. Insert 3 LR44 batteries, ensuring correct polarity. Close the compartment securely.
5. **Attach Crane:** Securely attach the breakaway scaffold crane to the designated corner of the ring.
6. **Position Accessories:** Place the ladders and briefcase around or within the ring as desired for play. The briefcase can be suspended from the crane.



**2 matches in 1!  
Win the briefcase & cash it in!**

*Image: The fully assembled WWE Money in the Bank playset, featuring the ring, crane, ladders, and briefcase.*

## 4. OPERATING INSTRUCTIONS

The WWE Money In The Bank Cash-in Ring Playset offers two exciting play modes and over 40 sounds and phrases to enhance your wrestling matches.

### 4.1. Play Modes

- **Money In The Bank Mode:** To activate this mode, slide the bell mechanism located on the side of the ring outwards. In this mode, figures can be launched towards the suspended briefcase or out of the ring, simulating a thrilling Money In The Bank ladder match.
- **Kick Out Mode:** To activate this mode, slam the bell mechanism inwards. When a figure is pinned in

in this mode, the ring will randomly decide if the pinfall results in a 3-count victory or a dramatic kickout, adding unpredictability to your matches.

## 4.2. Sounds and Phrases

The playset features over 40 unique sounds and phrases that activate during play, bringing the excitement of a live WWE event to your home. These sounds are triggered by interacting with the ring, such as slamming the bell or figures impacting the ring surface.



**Slam the bell for in-ring chaos  
& 40+ unique sounds!**

*Image: A hand demonstrating how to slam the bell mechanism to activate sounds and switch play modes.*



*Image: Action figures engaged in a match within the ring, illustrating the dynamic play features.*

### 4.3. Official Product Demo Video

Your browser does not support the video tag.

*Video: An official demonstration of the WWE Money in the Bank Cash-In Ring Playset, showcasing its features and play modes.*

## 5. PRODUCT SPECIFICATIONS

Feature	Specification
Product Dimensions	17.01 x 13.78 x 25 inches
Item Weight	14.1 ounces
Item Model Number	JJB81
Manufacturer Recommended Age	6 years and up
Batteries Required	3 LR44 batteries (included)
Sounds & Phrases	40+ unique sounds and phrases

## 6. CARE AND MAINTENANCE

- Cleaning:** Wipe the playset with a damp cloth to remove dust and dirt. Do not immerse in water.
- Storage:** Store the playset in a cool, dry place away from direct sunlight when not in use to prevent damage and discoloration.
- Battery Replacement:** Replace batteries when sounds and phrases become faint or stop working.

## 7. TROUBLESHOOTING

- **No Sound/Faint Sound:** Check if the batteries are correctly installed. Replace with fresh LR44 batteries if necessary.
- **Parts Not Snapping Together:** Ensure you are aligning the parts correctly. Apply gentle, even pressure. Do not force components.
- **Figures Not Launching/Pinning Correctly:** Ensure the play mode selector (bell mechanism) is fully engaged in the desired mode. Check for any obstructions in the ring mechanism.

## 8. WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts, please contact Mattel Customer Service. Refer to the contact information provided on the product packaging or visit the official Mattel website.