

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KESIEME](#) /

> [KESIEME YYK Intelligent Touch Screen Open Ear Earbuds User Manual](#)

KESIEME YYK

KESIEME YYK Intelligent Touch Screen Open Ear Earbuds User Manual

Model: YYK

1. INTRODUCTION

Welcome to the KESIEME YYK Intelligent Touch Screen Open Ear Earbuds user manual. This guide provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new open-ear headphones. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

Product Overview

The KESIEME YYK earbuds feature an innovative open-ear design for comfort and situational awareness, advanced Bluetooth 5.4 connectivity for stable audio, and a charging case with an intelligent touch screen for intuitive control and real-time information display.

What's in the Box



Image: Contents of the KESIEME YYK Earbuds box.

- Open Air Conduction Earphones (2)
- Charging Case (1)
- User Manual (1)
- Type-C Charging Cable (1)

2. PRODUCT FEATURES

Open Ear Design

Why did you choose us ?

Non in ear wearing with ergonomic design that fits snugly to the ear contour

Upgraded Hook Open Ear Design

Compact; Comfortable;
No pain; No fall easily



It reduces the build up of air pressure in the ear canal, minimizing the risk of hearing damage.

Severe Ear Strain

Cochlear swelling and inflammation



VS

Severe Ear Strain

Easy to fall off and ear pain



Image: Comparison of open-ear design versus traditional in-ear headphones.

The KESIEME YYK earbuds feature a true open-ear design, resting gently and securely on the top of your ear. This design avoids insertion into the ear canal, reducing pressure and allowing for greater comfort during extended wear. It also enhances situational awareness, allowing you to hear your surroundings while enjoying audio.

Bluetooth 5.4 Connectivity

Upgraded Bluetooth 5.4 Technology

Dual-channel transmission creates an unbreakable connection, improves stability and lower power consumption.



More Stable
Connection



Lower
Latency



Lower Power
Consumption



Longer Transmission
Range(15m)

Image: Benefits of Bluetooth 5.4 technology.

Equipped with the latest Bluetooth 5.4 technology, these earbuds offer a stable and fast wireless connection. This ensures uninterrupted music playback and calls, with a connection range of up to 33 feet (10 meters). The dual-channel transmission improves stability and reduces power consumption.

Premium Sound Quality

Premium Sound Quality

14.2mm dynamic speaker
providing dynamic and impactful bass



Crystal-
Clear Call



High-Fidelity
Audio



14.2mm Dynamic Drivers

Image: 14.2mm dynamic speaker driver for sound quality.

Experience clear and powerful audio with dual 14.2mm air conduction dynamic drivers. These drivers deliver high-fidelity sound with crisp highs and impactful lows, providing an immersive listening experience while minimizing sound leakage.

Extended Playtime & Digital Display



Image: Battery life and LED display features.

The earbuds provide up to 20 hours of playtime on a single charge. The charging case extends the total listening time to approximately 50 hours. The smart LED power display on the case shows the remaining battery level for both the case and individual earbuds in real-time.

Comfortable and Lightweight Fit

Ultimate Comfort and Perfect Fit for Your Ears



Image: Ergonomic design for comfort and fit.

Designed for ultimate comfort, the earbuds feature ergonomic ear hooks made from skin-friendly, ultra-lightweight materials. This ensures a secure fit without discomfort, even during active use like running or fitness activities.

Intelligent Touch Screen Case

LCD full color touch screen rich functions one finger control

LCD full color touch screen, free control of music playback, mode selection and sound switching



Image: Touch screen case displaying various functions.

The charging case features an LCD full-color touch screen, providing convenient access to various functions. This includes music playback control, mode selection, sound switching, weather information, calendar, timer, and more, all controlled with a single finger.

3. SETUP

Charging the Device

Before first use, fully charge the earbuds and the charging case. Connect the provided Type-C charging cable to the charging port on the case and a compatible USB power source. The LED display on the case will indicate the charging status and battery levels.

Pairing Instructions

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select 'KESIEME YYK' from the list of found devices to connect.
4. Once connected, a voice prompt will confirm successful pairing. The earbuds will automatically reconnect to

the last paired device when taken out of the case.

Wearing Instructions



Image: Step-by-step guide for wearing the earbuds.

1. Take out both earphones from the charging case.
2. Gently hang the end of each earphone onto your ear bone.
3. Turn the earphone and slide it behind your ear.
4. Adjust the ear hook and pull it down for a secure and comfortable fit.

4. OPERATING INSTRUCTIONS

Basic Touch Controls

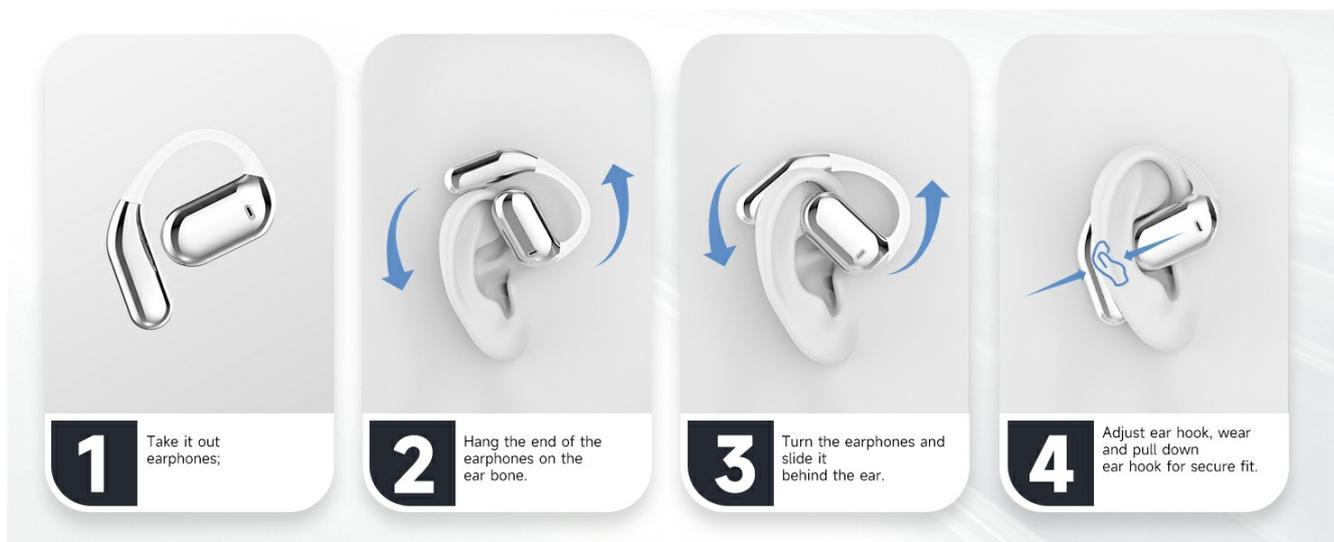


Image: Earbud touch control functions.

Action	Control	Earbud (L/R)
Volume Up	Double Tap	Left or Right
Volume Down	Double Tap	Left or Right

Action	Control	Earbud (L/R)
Play/Pause	Single Tap	Left or Right
Answer Call	Single Tap	Left or Right
Previous Song	Long Press (1s)	Left
Next Song	Long Press (1s)	Right
Reject Call/Hang Up	Long Press (1s)	Left or Right
Activate Voice Assistant (Siri)	Triple Tap	Left or Right
Reset Earbuds	Double Tap + Long Press (2s)	Left & Right Simultaneously

Warning Tips: To reset earbuds, disconnect from the phone and quickly press the left button 5 times at the same time to reset.

Touch Screen Case Operation



WHAT'S IN THE BOX?

- 1 Open Air Conduction Earphones
- 2 Charging Case
- 3 User Manual
- 4 Type-C Charging Cable
- 5 Box

Image: Touch screen case displaying various functions.

The charging case features a responsive touch screen interface. Swipe left or right to navigate through different functions and tap to select. Functions include:

- **Music Playback:** Control tracks and volume.
- **Weather:** View current weather conditions.
- **Calendar:** Access date and time information.
- **Cycle Tracking:** Monitor fitness data.
- **Timer:** Set countdowns or use as a stopwatch.
- **Mode Selection:** Switch between different audio modes.
- **Theme:** Customize the screen display.
- **Telephone:** View call history or dial.
- **Find a Mobile Phone:** Locate your paired phone.
- **AI Voice:** Activate voice assistant.
- **Game:** Access simple games.
- **Camera:** Remote control for your phone's camera.
- **Sound Effects:** Adjust audio profiles.
- **Message:** View notifications.

Wide Compatibility



Image: Device compatibility.

The KESIEME YYK earbuds are compatible with a wide range of Bluetooth-enabled devices, including:

- Smartphones
- Tablets
- Laptops
- Desktops
- Smartwatches
- Smart TVs (with Bluetooth audio support)

5. MAINTENANCE

Cleaning

- Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and dry.

Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures (hot or cold) or high humidity.
- Keep out of reach of children and pets.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Earbuds not pairing	Earbuds not in pairing mode, Bluetooth off on device, out of range.	Ensure earbuds are out of the case and charged. Turn Bluetooth on your device. Move closer to the device. Try resetting the earbuds.

Problem	Possible Cause	Solution
Only one earbud working	One earbud not charged, not paired correctly, or connection issue.	Place both earbuds back in the case, close it, then reopen. Ensure both are charged. Try resetting the earbuds.
Poor sound quality	Low battery, interference, earbud placement.	Charge earbuds. Move away from sources of interference. Adjust earbud position for optimal sound.
Charging case not charging	Cable issue, power source issue, dirty charging port.	Try a different Type-C cable or power adapter. Clean the charging port.
Touch controls unresponsive	Temporary software glitch, dirty sensor.	Clean the touch sensor area. Place earbuds back in case and take them out again. Restart your connected device.

Resetting Earbuds

If you experience persistent connection issues or other malfunctions, you can reset the earbuds:

1. Disconnect the earbuds from all paired devices in your device's Bluetooth settings.
2. Take both earbuds out of the charging case.
3. Quickly tap the touch sensor on the left earbud 5 times simultaneously.
4. Place the earbuds back into the charging case and close the lid for a few seconds.
5. Open the case and attempt to pair them again with your device.

7. SPECIFICATIONS

Feature	Specification
Model Name	Open Ear Earbuds (YYK)
Brand	KESIEME
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	33 Feet (10 meters)
Audio Driver Size	14.2 Millimeters
Audio Driver Type	Dynamic Driver
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohm
Battery Life (Earbuds)	Up to 20 Hours
Total Playtime (with Case)	Up to 50 Hours
Control Method	Touch

Feature	Specification
Water Resistance Level	Water Resistant
Item Weight	0.19 Kilograms (6.7 ounces)
Product Dimensions	6 x 4.2 x 1.5 inches
Ear Placement	Open Ear
Form Factor	Open Ear

8. SAFETY INFORMATION

- Do not disassemble or modify the product.
- Avoid exposing the product to extreme temperatures, direct sunlight, or fire.
- Do not immerse the earbuds or charging case in water. While water-resistant, they are not waterproof.
- Use only the provided charging cable or a certified equivalent.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Be aware of your surroundings when using open-ear headphones, especially in traffic or hazardous environments.

9. WARRANTY AND SUPPORT

KESIEME products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or visit the official KESIEME website. Please retain your proof of purchase for warranty claims.