

[Manuals.plus](#) /

› [Robo Alive](#) /

› Robo Alive Deep Sea Monster Surprise Octopus Instruction Manual

Robo Alive 71155

Robo Alive Deep Sea Monster Surprise Octopus Instruction Manual

Model: 71155

INTRODUCTION

Welcome to the world of Robo Alive Deep Sea Monster Surprise! This electronic toy offers an engaging underwater adventure. Inside the barrel, you will discover over 15 surprises, including slime and a water-activated sea creature. This manual provides detailed instructions for unboxing, assembly, operation, and care of your Robo Alive Deep Sea Monster Surprise Octopus.



Image: The Robo Alive Deep Sea Monster Surprise Octopus toy, featuring its vibrant orange color and detailed tentacles.

What's Included

Your Robo Alive Deep Sea Monster Surprise (Octopus) package contains the following items:

- 1 x Robo Alive Deep Sea Monster Surprise Barrel
- 1 x Water-activated Octopus creature (assembly required)
- Slime
- Stickers
- Instruction booklet (this manual)
- Other surprise accessories



Image: The back of the Robo Alive Deep Sea Monster Surprise barrel, illustrating the contents and other available creatures.

SETUP AND ASSEMBLY

1. **Unbox the Barrel:** Carefully open the Robo Alive Deep Sea Monster Surprise barrel.
2. **Discover Surprises:** Search through the compartments and the slime to find all the hidden surprises, including the parts for your octopus.
3. **Assemble Your Octopus:** Connect the octopus parts as shown in the included visual guide (if any) or by matching the connection points. Ensure all parts are securely attached.
4. **Battery Installation:** The octopus requires 3 AAA batteries. Locate the battery compartment, typically on the underside of the creature. Use a small screwdriver to open the compartment, insert the batteries with correct polarity (+/-), and secure the cover.

Your browser does not support the video tag.

Video: A demonstration of unboxing the Deep Sea Monster Surprise, revealing slime and assembling a creature. This video illustrates the general unboxing and assembly process for the Robo Alive Deep Sea Monster Surprise line.



Image: The Robo Alive Deep Sea Monster Surprise Octopus partially submerged in green slime, illustrating the unboxing experience.

OPERATING INSTRUCTIONS

The Robo Alive Deep Sea Monster Surprise Octopus is water-activated, meaning it will come to life once placed in water.

1. **Prepare Water:** Fill a basin, bathtub, or pool with water. Ensure the water is clean and free of debris.
2. **Place in Water:** Gently place your assembled Robo Alive Octopus into the water.
3. **Activation:** The toy will automatically activate upon contact with water and begin to move its tentacles, simulating real octopus movement.
4. **Removal:** To stop the toy, simply remove it from the water. It will automatically power off.



Image: A child holding the Robo Alive Deep Sea Monster Surprise barrel, ready for unboxing and play.

CARE AND MAINTENANCE

- **Drying:** After each use, thoroughly dry the toy with a soft cloth to prevent water damage to the electronic components.
- **Cleaning:** If the toy becomes dirty, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Slime Care:** Store the slime in an airtight container to prevent it from drying out. Keep slime away from fabrics and porous surfaces.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace batteries when the toy's movement becomes sluggish or stops. Always use new batteries of the specified type (3 AAA).

TROUBLESHOOTING

- **Toy does not activate in water:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Check if the batteries are fresh and not depleted.
 - Verify that the battery compartment cover is securely closed to prevent water entry.
- **Movement is weak or inconsistent:**
 - Replace old batteries with new ones.
 - Ensure no debris is obstructing the moving parts of the toy.

SPECIFICATIONS

Feature	Detail
Model Number	71155
Product Dimensions	9.06 x 6.65 x 10.24 inches
Item Weight	1.68 pounds
Batteries Required	3 AAA batteries (not included)
Recommended Age	5 years and up
Manufacturer	ZURU

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult supervision is recommended during play, especially with slime and small parts.
- Do not ingest slime. If ingested, seek medical attention.
- Ensure the battery compartment is sealed correctly before placing the toy in water to prevent water damage and potential electrical hazards.
- Dispose of used batteries responsibly.

WARRANTY AND SUPPORT

For warranty information or product support, please contact ZURU customer service. Details can typically be found on the product packaging or the official ZURU website.
Website: www.zuru.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question