

PHILIPS NA322/09

Philips 3000 Series Airfryer 4.2L-NA322/09

USER MANUAL

1. Important Safety Information

Before using the appliance, carefully read this user manual and save it for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before you connect the appliance.
- Keep all ingredients in the basket to prevent any contact with heating elements.
- Do not cover the air inlet and air outlet openings while the appliance is operating.
- Do not fill the pan with oil or other liquid, as this may cause a fire hazard.
- Always return the appliance to a service center authorized by Philips for examination or repair. Do not attempt to repair the appliance yourself.

2. Product Overview

The Philips 3000 Series Airfryer NA322/09 utilizes RapidAir Plus Technology to circulate hot air, allowing you to fry, bake, grill, roast, and reheat with little to no oil. It features a 4.2L capacity and 16 cooking functions for versatile meal preparation.



Figure 2.1: Front view of the Philips 3000 Series Airfryer NA322/09. This image shows the sleek black design with gold accents and the transparent viewing window.

3. Setup and First Use

3.1 Unpacking

Carefully remove all packaging materials from the appliance. Retain the packaging for future storage or disposal.

3.2 Initial Cleaning

Before first use, clean the basket and pan with hot water, some dishwashing liquid, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a moist cloth.

3.3 Placement

Place the appliance on a stable, horizontal, and level surface. Ensure there is at least 10 cm (4 inches) of free space at the back, sides, and above the appliance to allow for proper air circulation.



Figure 3.1: Dimensions of the Philips Airfryer. The appliance measures approximately 28.6 x 29.7 x 29.4 cm, requiring adequate space for safe operation.

4. Operating the Airfryer

4.1 Powering On and Controls

Plug the appliance into a grounded wall outlet. The digital display will illuminate. Use the touch controls on the top panel to select cooking functions, adjust temperature, and set time.



Figure 4.1: Close-up of the Airfryer's digital control panel. This panel allows for precise temperature and time adjustments, along with selection of various cooking presets.

4.2 Cooking Process

1. Pull the pan out of the appliance.
2. Place ingredients in the basket. Do not exceed the MAX indication.
3. Slide the pan back into the Airfryer.
4. Select the desired cooking function or manually set the temperature and time.
5. Press the start button to begin cooking.



Figure 4.2: The Airfryer basket filled with food, ready for cooking. The transparent window allows for monitoring the cooking progress without opening the drawer.



Figure 4.3: Overhead view of the Airfryer with the basket containing food. This perspective highlights the spacious interior for various food items.

4.3 RapidAir Plus Technology

The unique RapidAir Plus Technology ensures fast and even cooking by circulating hot air throughout the cooking chamber. This results in crispy exteriors and tender interiors with significantly less fat.



Figure 4.4: Visual representation of the RapidAir Plus Technology. Hot air circulates rapidly to ensure even cooking and crisping of food.

5. Maintenance and Cleaning

Regular cleaning of your Airfryer will ensure optimal performance and extend its lifespan. Always unplug the appliance and allow it to cool down completely before cleaning.

5.1 Cleaning the Pan and Basket

The pan and basket are non-stick coated for easy cleaning and are dishwasher safe. For stubborn residue, soak them in hot water with some dishwashing liquid for about 10 minutes before cleaning.



Figure 5.1: Airfryer basket and pan placed in a dishwasher. This illustrates the convenience of dishwasher-safe components for easy cleanup.

5.2 Cleaning the Interior and Exterior

Wipe the exterior of the appliance with a moist cloth. Clean the interior with hot water and a non-abrasive sponge. For the heating element, use a cleaning brush to remove any food residue.

5.3 Fat Extraction

The unique design of the Airfryer helps to extract fat from food, which collects in the pan. Dispose of the collected fat responsibly after each use.



Figure 5.2: Illustration of fat being drained from the Airfryer pan. The design allows for efficient separation and collection of excess fat.

6. Troubleshooting

Problem	Possible Cause	Solution
Airfryer does not work.	The appliance is not plugged in.	Plug the mains plug into a grounded wall socket.
Food is not cooked evenly.	Too much food in the basket.	Reduce the amount of food per batch.
White smoke comes from the appliance.	Fat residue from previous use.	Clean the pan and basket thoroughly after each use.
Fresh fries are not crispy.	Not enough oil used or potatoes not properly prepared.	Ensure potatoes are rinsed and dried properly. Add a small amount of oil.

7. Specifications

Brand: PHILIPS

Model Number: NA322/09

Color: Black

Product Dimensions: 28.6 x 29.7 x 29.4 cm

Capacity: 4.2 Liters

Power / Wattage: 1400 watts

Voltage: 220 Volts

Material: Stainless Steel, Plastic

Auto Shutoff: Yes

Special Features: Temperature Control, Stain Resistant

Item Weight: 4.6 Kilograms

8. Warranty and Support

This Philips Airfryer comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Philips website.

For technical support, troubleshooting assistance, or to inquire about spare parts and repairs, please contact Philips customer service. You can find contact information on the Philips website or in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question