

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY 00084A Replacement Remote Control User Manual for Samsung DVD-VR370, DVD-VR375, DVD-VR375A

ECONTROLLY AK59-00084A

ECONTROLLY 00084A Replacement Remote Control User Manual

For Samsung DVD-VR370, DVD-VR375, DVD-VR375A DVD Recorder VHS Combo

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of the ECONTROLLY 00084A replacement infrared remote control. This remote is designed to be compatible with specific Samsung DVD Recorder VHS Combo models, including DVD-VR370, DVD-VR375, and DVD-VR375A. Please read this manual thoroughly before use to ensure proper functionality.

PRODUCT OVERVIEW

The ECONTROLLY 00084A remote control is a direct replacement for the original AK59-00084A remote. It features a standard layout for controlling DVD and VCR functions, as well as basic TV controls. No programming is required for use with compatible devices.



Figure 1: Front view of the ECONTROLLY 00084A remote control, displaying all buttons and their labels.



Figure 2: Angled view of the remote control, highlighting its ergonomic design.



Figure 3: Image illustrating the physical dimensions of the remote control (approximately 9.53 x 1.91 x 0.56 inches).

SETUP: BATTERY INSTALLATION

To begin using your remote control, you must install batteries. Follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important: Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could damage the remote. Batteries are not included with the remote control.

OPERATING INSTRUCTIONS

This remote control is pre-programmed and requires no additional setup for compatible Samsung DVD Recorder VHS Combo units. Simply point the remote at your device and press the desired button.

Basic Functions

- **POWER:** Turns the connected device (TV, DVD, VCR) on or off.
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical values.
- **PLAY (▶), PAUSE (■ ■), STOP (■), REWIND (◀◀), FAST FORWARD (▶▶):** Control media playback.
- **TV VOL (+/-):** Adjusts the television volume.
- **TV MUTE:** Mutes the television audio.
- **TRK/CBC CH/TV CH (+/-):** Changes television channels or tracks/chapters on media.
- **MENU:** Accesses the main menu of the DVD/VCR.
- **ENTER:** Confirms selections within menus.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **RETURN:** Returns to the previous screen or menu.

Device Selection and Specific Functions

- **SELECT VIEW / INPUT SEL (TV, DVD, VCR):** Use these buttons at the top of the remote to switch control between your TV, DVD player, or VCR. Ensure the correct mode is selected for the desired operation.
- **REC (●):** Initiates recording on the VCR or DVD recorder.
- **TO DVD / TO VCR:** Switches the recording destination or playback source between DVD and VCR modes.
- **DUBBING:** Initiates the dubbing process between DVD and VCR.
- **TITLE LIST / DISC MENU:** Accesses the DVD title list or disc menu.
- **PLAY LIST / TITLE MENU:** Accesses the DVD playlist or title menu.
- **ANYKEY / SUBTITLE / ANGLE / EZ REC MODE:** Provides access to various DVD/VCR functions as labeled.

COMPATIBILITY

This remote control is compatible with the following Samsung DVD Recorder VHS Combo models:

- Samsung DVD-VR370
- Samsung DVD-VR375
- Samsung DVD-VR375A
- Replaces original remote model AK59-00084A

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA ALKALINE batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not working:**

- Ensure batteries are installed correctly with the correct polarity.
- Replace old batteries with new AAA ALKALINE batteries.
- Check for any obstructions between the remote control and the device's infrared sensor.
- Ensure you are within the effective range of the device.
- Verify that the correct device mode (TV, DVD, VCR) is selected on the remote.

- **Buttons not responding:**

- Clean the remote control surface, especially around the buttons, to remove any dirt or debris.
- If only specific buttons are not working, the remote may be damaged and require replacement.

SPECIFICATIONS

Model Number	AK59-00084A
Product Dimensions	9.53 x 1.91 x 0.56 inches
Item Weight	1.76 ounces
Color	Black
Special Feature	Pre Programmed
Max Number of Supported Devices	1 (for primary control, with TV functions)
Compatible Devices	Samsung DVD-VR370, DVD-VR375, DVD-VR375A DVD Recorder VHS Combo
Power Source	2 x AAA ALKALINE Batteries (not included)

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any questions regarding product functionality, troubleshooting, or warranty claims, please contact the seller or manufacturer directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DRCFLVD1>

More documents and user manuals: <https://manuals.plus/>