

[manuals.plus](#) /

› [HAUSHOF](#) /

› [HAUSHOF 2025 Model Handheld High-Temperature Steam Cleaner \(Model HH24128A\) - User Manual](#)

HAUSHOF HH24128A

HAUSHOF 2025 Model Handheld High-Temperature Steam Cleaner

Model: HH24128A - User Manual

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the HAUSHOF Handheld High-Temperature Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Hot Steam Hazard:** The appliance produces high-temperature steam. Always direct the steam away from yourself, other people, pets, and electrical appliances.
- **Burn Risk:** Do not touch the steam nozzle or any accessories during or immediately after use, as they will be hot. Allow the unit to cool completely before handling or changing accessories.
- **Water Tank:** Never open the safety cap while the unit is pressurized or hot. Wait until the unit has cooled down and the red indicator dot on the cap has lowered before attempting to open.
- **Electrical Safety:** Do not immerse the appliance, power cord, or plug in water or other liquids. Ensure your hands are dry before handling the plug or operating the appliance.
- **Children and Pets:** Keep the appliance and its accessories out of reach of children and pets. Supervise children to ensure they do not play with the appliance.
- **Storage:** Store this product in a dry, clean, and dust-free place.
- **Chemicals:** Do not add any cleaning chemicals, detergents, or aromatic oils to the water tank. Use only clean tap water.

わずか 3 ~ 5 分で使用開始可能 !

素早く加熱

安全キャップ

安全ロック

取外しボタン

スチーム排出口

インジケーターイト

スイッチボタン



Image: Diagram illustrating the safety cap and safety lock features of the steam cleaner, highlighting the importance of these mechanisms for safe operation.

2. PRODUCT OVERVIEW

2.1 Package Contents

The HAUSHOF Handheld High-Temperature Steam Cleaner package includes the following items:

- HAUSHOF Steam Cleaner Unit
- Funnel (1)
- Measuring Cup (1)
- Cloth Cover (1)
- Window Brush (1)
- Nozzle (1)
- Extension Nozzle (1)
- Nylon Brush (1)

- Stainless Steel Brush (1)
- Instruction Manual



Image: The HAUSHOF steam cleaner unit displayed alongside its complete set of 8 accessories, including various brushes, nozzles, and a measuring cup.

2.2 Key Features

- **Large Capacity Tank:** Equipped with a 450ml water tank, allowing for approximately 10-12 minutes of continuous steam.
- **Rapid Heating:** Boiler heating system allows the unit to heat up in just 3-5 minutes, ready for immediate use.
- **High-Temperature Sterilization:** Generates 105°C high-temperature steam for effective cleaning and sterilization, removing unseen bacteria and viruses.
- **Chemical-Free Cleaning:** Utilizes only natural steam, eliminating the need for chemical cleaning agents, making it safe for households with children and pets.
- **Versatile Attachments:** Includes 8 different attachments to tackle various cleaning tasks around the home, kitchen, and even vehicles.
- **Extended Reach:** Features a 2.8-meter power cord for enhanced mobility and convenience during cleaning.

450ml 大容量タンク

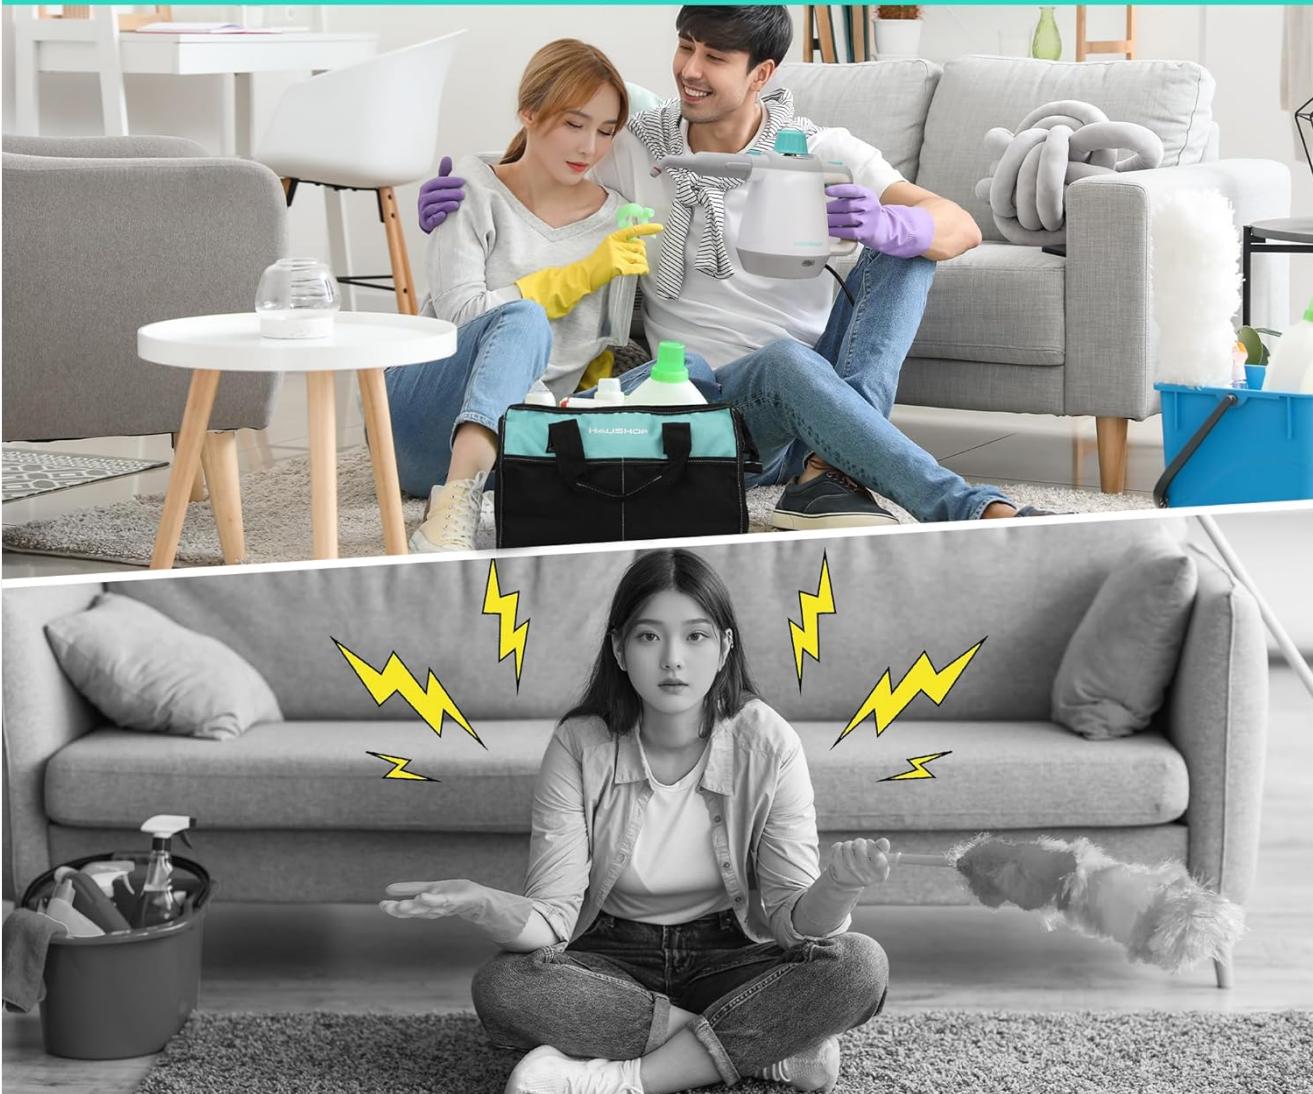


Image: A visual representation of the steam cleaner's 450ml water tank being filled, emphasizing its capacity and the 'Water Only' requirement.

3. SETUP

- 1. Prepare the Unit:** Ensure the steam cleaner is unplugged and completely cool before beginning setup.
- 2. Fill the Water Tank:** Unscrew the safety cap counter-clockwise. Using the provided measuring cup and funnel, carefully pour up to 450ml of clean tap water into the tank. Do not overfill. Screw the safety cap back on tightly, ensuring it is fully sealed.
- 3. Attach Desired Accessory:** Select the appropriate attachment for your cleaning task. Align the accessory with the nozzle and push firmly until it clicks into place. For extended reach, first attach the extension nozzle, then your chosen cleaning tool.
- 4. Connect to Power:** Plug the power cord into a grounded electrical outlet. The indicator light will illuminate, signaling that the unit is heating.
- 5. Heat-Up Time:** Allow 3-5 minutes for the unit to heat up. The indicator light will change or turn off once the optimal steam temperature is reached and the unit is ready for use.

専用バック付き、収納も持ち運びも簡単



WHERE IS MY CLEANER ?

Image: A six-panel diagram illustrating the setup process: opening the safety cap, filling water with the measuring cup and funnel, attaching an accessory, plugging in the power cord, waiting for heating, and the safety cap mechanism.

4. OPERATING INSTRUCTIONS

Once the unit is heated and ready, you can begin cleaning:

- Activate Steam:** To release steam, first slide the safety lock button forward (away from the handle), then press and hold the steam trigger. Release the trigger to stop the steam flow.
- Initial Steam Release:** When first starting, a small amount of hot water may be discharged before continuous steam appears. This is normal. Direct this initial discharge into a cloth or sink.
- Cleaning Surfaces:** Hold the nozzle or brush attachment close to the surface you wish to clean. Move the unit slowly over the area to allow the steam to penetrate and loosen dirt.
- Wipe Clean:** After steaming, immediately wipe the treated surface with a clean, dry cloth to remove loosened dirt and moisture.
- Using Attachments:**
 - Nozzle:** For concentrated steam on small areas, grout, or tight spaces.

- **Nylon Brush:** Suitable for general scrubbing on various surfaces like tiles, sinks, and stovetops.
- **Stainless Steel Brush:** For stubborn dirt and grime on durable, heat-resistant surfaces (e.g., oven racks, BBQ grills). Test on an inconspicuous area first.
- **Window Brush:** Attach the cloth cover for cleaning windows, mirrors, and other smooth surfaces.
- **Cloth Cover:** Use with the window brush or other attachments for delicate surfaces or to absorb excess moisture.
- **Extension Nozzle:** Extends reach for high or low areas, or for cleaning inside narrow spaces.

6. **Refilling:** If the steam output decreases or stops, the water tank may be empty. Unplug the unit and allow it to cool completely before refilling.



Image: A collage demonstrating the versatility of the HAUSHOF steam cleaner's attachments, showing them in action for window cleaning, kitchen range hood cleaning, and general surface cleaning.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

1. **Cool Down:** Always unplug the unit and allow it to cool completely before performing any maintenance.

- Empty Water Tank:** Once cool, carefully unscrew the safety cap and empty any remaining water from the tank.
- Clean Accessories:** Wash removable accessories with warm, soapy water and rinse thoroughly. Allow them to air dry completely before storing.
- Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
- Descaling (Optional):** If you notice reduced steam output or mineral buildup, you may need to descale the unit. Consult the manufacturer's website or contact support for specific descaling instructions.
- Storage:** Store the steam cleaner and all accessories in a dry, clean place, preferably in the provided tool bag, away from direct sunlight and extreme temperatures.



Image: The HAUSHOF steam cleaner and its various attachments are shown organized within a dedicated storage bag, emphasizing easy storage and portability.

6. TROUBLESHOOTING

If you encounter issues with your HAUSHOF steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or weak steam output.	Water tank is empty or low. Unit not fully heated. Mineral buildup.	Refill water tank (ensure unit is cool). Wait for indicator light to signal readiness. Perform descaling if necessary.
Water leaking from nozzle.	Normal initial discharge before steam. Safety cap not tightened. Gasket worn.	Direct initial discharge into a cloth. Ensure safety cap is securely tightened. If persistent, contact customer support.
Safety cap cannot be opened.	Unit is still hot and pressurized.	Allow the unit to cool down completely. The red indicator dot on the cap must lower before it can be safely opened.
Power indicator light not on.	Unit not plugged in. Power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Attachments do not fit or fall off.	Not properly aligned or pushed firmly.	Ensure attachments are aligned correctly and pushed firmly until they click into place.

If the problem persists after attempting these solutions, please contact HAUSHOF customer support for further assistance.

7. SPECIFICATIONS

Specification	Detail
Brand	HAUSHOF
Model Number	HH24128A
Manufacturer	HANGZHOU GREATSTAR INDUSTRIAL CO.,LTD
Power (Wattage)	1200 W
Water Tank Capacity	450 ml
Color	White
Product Dimensions	32.3 x 23.9 x 16.3 cm
Package Weight	2.28 Kilograms
Special Features	Rapid Heating
Battery Use	No

8. WARRANTY AND SUPPORT

HAUSHOF products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official HAUSHOF website. You may also contact our customer service team through the retailer where you purchased the product.

Please have your model number (HH24128A) and purchase date available when contacting support.

