

## Edifier M60

# Edifier M60 Multimedia Speaker User Manual

Model: M60 | Brand: Edifier

## 1. INTRODUCTION

---

The Edifier M60 Multimedia Speaker system is designed to deliver high-quality audio with versatile connectivity options. This manual provides detailed instructions for setting up, operating, and maintaining your M60 speakers. Key features include:

- Powerful 66W RMS output from handcrafted wooden cabinets.
- High-quality audio processing with 24-bit/96kHz support.
- Multiple input methods: USB-C, AUX, and Bluetooth 5.3 with LDAC codec support.
- User-friendly touch controls with automatic backlight.
- Dedicated aluminum speaker stands for optimized listening.
- Control and customization via the EDIFIER ConneX mobile app.

## 2. PACKAGE CONTENTS

---

Before you begin, please ensure all items are present in the package:

- M60 Speakers (x1 pair)
- Power Cable (x1)
- Speaker Connection Cable (x1)
- Aluminum Speaker Stands (x1 pair)
- 3.5mm-3.5mm Audio Cable (x1)
- 3.5mm-RCA Audio Cable (x1)
- USB-C to USB-C Cable (x1)

- Quick Start Guide (x1)
- Important Safety Instructions (x1)

## コンパクトデザイン

100mm(W)x168mm(H)x147mm(D)のサイズで、  
どんな空間にもシームレスにフィットします。



Figure 2.1: Contents of the Edifier M60 speaker package.

### 3. SETUP

#### 3.1 Speaker Placement

Place the speakers on a stable, flat surface. The included aluminum stands are designed to tilt the speakers at a 15-degree angle, reducing sound reflections from the desktop surface and optimizing the listening experience.



Figure 3.1: Proper speaker placement with 15-degree angled stands.

### 3.2 Connecting the Speakers

Connect the left and right speakers using the provided speaker connection cable. Ensure the power cable is securely connected to the main speaker and a power outlet.

# 使いやすいタッチ操作

手を近づけると自動でバックライトが点灯、離れると消灯するタッチパネルを搭載。タップやスワイプで簡単に操作できます。



Figure 3.2: Rear panel connections for the Edifier M60 speaker.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

To power the speakers on or off, press and hold the power button on the top panel for 1.5 seconds.

# EDIFIER ConneX専用アプリ

EDIFIER ConneXモバイルアプリをダウンロードして、  
より多くの機能を利用してください。

再生コントロールサウンドエフェクトの切り替えとカスタマイズ  
タッチパネルバックライト設定  
ユーザーマニュアルおよびその他の設定



EDIFIER ConneX



Figure 4.1: Top panel touch controls.

## 4.2 Input Source Switching

Tap the power button to cycle through input modes: Bluetooth (blue indicator), USB Audio (red indicator), and AUX (green indicator).

## 4.3 Bluetooth Connection

Switch the speaker to Bluetooth input mode. If no device is connected, the speaker will automatically enter Bluetooth pairing mode, and the indicator will flash blue.

On your device, select "EDIFIER M60" from the Bluetooth list. The indicator will turn solid blue upon successful

connection.

If the speaker does not enter pairing mode, press and hold the power button and the "-" button for 1.5 seconds to force pairing mode.

To disconnect the current device, press and hold the power button and the "-" button for 1.5 seconds.

If the device is not connected for 10 minutes, the speaker will enter Bluetooth hidden mode, and the blue indicator will breathe. In this mode, new devices cannot discover the speaker, but previously paired devices can reconnect from their Bluetooth device list. To exit Bluetooth hidden mode, tap the power button.

Your browser does not support the video tag.

Video 4.3.1: A user guide video demonstrating Bluetooth connection for the Edifier M60 speaker. It shows how to switch to Bluetooth mode, pair a device, and manage connections.

## 4.4 USB Audio Streaming

Switch the speaker to USB Audio streaming mode. Connect the M60 to your computer using the provided USB-C cable. Select "EDIFIER M60" as the audio output device on your computer to begin playback.



Figure 4.4: USB-C and AUX input ports on the Edifier M60.

## 4.5 AUX Input Connection

Switch the speaker to AUX mode. Connect the M60 to an audio device using the provided 3.5mm audio cable or 3.5mm-RCA audio cable.

## 4.6 Playback Controls

- **Volume Adjustment:** Tap the "+" or "-" buttons on the top panel to adjust the volume.
- **Track Skip (Bluetooth/USB Audio mode):** To skip to the next track, slide your finger from the "-" button towards the "+" button. To skip to the previous track, slide your finger from the "+" button towards the "-" button.
- **Pause/Resume Playback (Bluetooth/USB Audio mode):** To pause or resume playback, cover the entire top panel with your hand.
- **Mute/Unmute (AUX mode):** To mute or unmute the speaker in AUX mode, cover the entire top panel with your hand.

Your browser does not support the video tag.

Video 4.6.1: A user guide video demonstrating playback controls for the Edifier M60 speaker. It shows how to adjust volume, skip tracks, and pause/resume playback using the touch panel.

## 4.7 EDIFIER ConneX App

Download the "EDIFIER ConneX" mobile app from the App Store or Google Play by scanning the QR code in the Quick Start Guide or package. Connect your device to the speaker via Bluetooth.

The app allows you to control playback, adjust volume, switch sound effects, customize settings, and perform firmware upgrades.

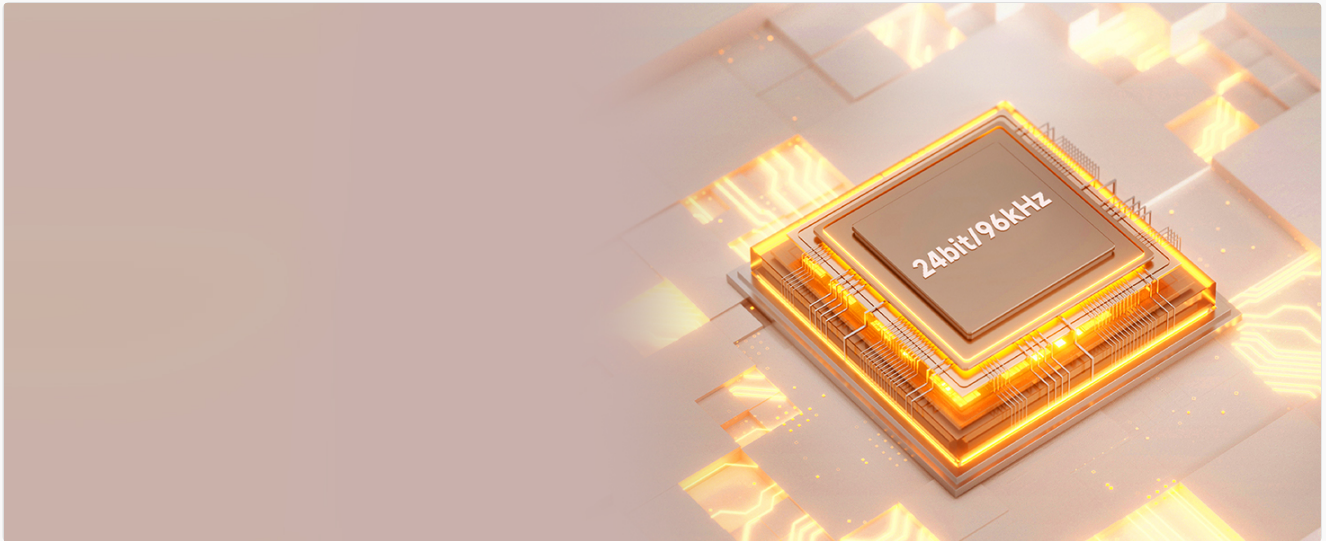


Figure 4.7: EDIFIER ConneX app interface for speaker control.

## 5. MAINTENANCE

- Clean the speaker surfaces with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Keep the speakers away from direct sunlight, heat sources, and moisture.
- Ensure proper ventilation around the speakers.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Power not connected, incorrect input mode, volume too low.	Check power connection, switch to correct input mode, increase volume.
Bluetooth pairing failed	Speaker not in pairing mode, device too far.	Ensure speaker is in pairing mode (flashing blue indicator), move device closer, try force pairing (power + '-' buttons).
Sound distortion	Volume too high, poor audio source quality.	Reduce volume, try a different audio source.
Touch panel unresponsive	Temporary software glitch.	Restart the speaker by powering it off and on.

## 7. SPECIFICATIONS

- **Brand:** Edifier

- **Model Name:** M60
- **Speaker Type:** Multimedia
- **Mounting Type:** Tabletop
- **Color:** Brown (Current product variant)
- **Item Dimensions (D x W x H):** 14.7 cm x 10 cm x 16.8 cm
- **Total Power Output:** 66W RMS
- **Tweeter:** 1-inch silk dome tweeter
- **Mid-bass Driver:** 3-inch long-throw aluminum mid-bass driver
- **Bluetooth Version:** 5.3 (supports LDAC)
- **Audio Processing:** High-performance analog audio front-end (ADC) and Class-D digital amplifier from Texas Instruments, supporting 24-bit/96kHz.
- **DSP:** Built-in DSP for precise 22-way active crossover and effective Dynamic Range Control (DRC).
- **Inputs:** USB-C, AUX
- **Included Accessories:** Speaker stands
- **Manufacturer Warranty:** 1 year
- **Country of Origin:** China



Figure 7.1: Internal components of the Edifier M60 speaker.



Figure 7.2: High-resolution audio processing in the M60.

## 8. WARRANTY AND SUPPORT

---

The Edifier M60 Multimedia Speaker comes with a 1-year manufacturer's warranty. For warranty claims or technical support, please contact Edifier customer service or visit the official Edifier website.

You can also find additional support and resources through the [Edifier Brand Store on Amazon](#).

---

## 9. FACTORY RESET

---

If necessary, you can reset the speaker to its factory default settings:

1. Open the "EDIFIER ConneX" app.
2. Navigate to "My Device" > "Initialize".
3. Select "Initialize" to confirm and reset the speaker.

Your browser does not support the video tag.

Video 9.1: A user guide video demonstrating how to perform a factory reset on the Edifier M60 speaker using the EDIFIER ConneX app.

---

