

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SelfieShow](#) /

› [SelfieShow C15 Aluminum Selfie Stick Phone Tripod Instruction Manual](#)

SelfieShow C15

SelfieShow C15 Aluminum Selfie Stick Phone Tripod Instruction Manual

Model: C15 | Brand: SelfieShow

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your SelfieShow C15 Aluminum Selfie Stick Phone Tripod. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

Package Contents

- Selfie Stick Phone Tripod
- Wireless Remote Control (with 1 CR2032 battery included)
- Instruction Manual



Figure 1: The SelfieShow C15 Aluminum Selfie Stick Phone Tripod shown collapsed, extended as a selfie stick, and set up as a tripod with the remote control.

2. COMPONENTS OVERVIEW

Familiarize yourself with the main parts of your SelfieShow C15 device:

- **Extendable Aluminum Pole:** The main shaft that extends for selfie stick use or tripod height adjustment.
- **Tripod Base:** Foldable legs at the bottom for stable freestanding use. Features anti-slip silicone pads.
- **Phone Holder:** Adjustable clamp to secure your smartphone. Detachable.
- **360° Rotatable Ball Head:** Allows for flexible angle adjustments of the phone holder. Includes a 1/4" screw for other accessories and a cold shoe interface.
- **Wireless Remote Control:** Bluetooth-enabled remote for capturing photos or starting videos from a distance. Stores securely in the handle.

Reinforced Wider Stable Base



Figure 2: Close-up view of the reinforced tripod base, highlighting the anti-slip silicone pads and the durable aluminum alloy pole construction.

Angle Can be Adjusted Flexibly



360-degree full rotation



110-degree angle adjustment



Figure 3: Illustration of the 360-degree full rotation and 110-degree angle adjustment capabilities of the ball head for flexible phone positioning.

3. SETUP INSTRUCTIONS

3.1 Remote Control Pairing

1. Ensure the remote control has a working CR2032 battery.
2. Press and hold the button on the remote control until the indicator light flashes, indicating it is in pairing mode.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "SelfieShow" from the list to pair. The indicator light on the remote will stop flashing once successfully paired.



Figure 4: Visual guide for pairing the wireless remote shutter via Bluetooth, showing the remote and a phone screen with 'SelfieShow' connected.

3.2 Attaching Your Smartphone

1. Gently pull apart the phone holder clamps to expand them.
2. Insert your smartphone into the holder, ensuring it is securely gripped by both clamps. The holder accommodates phones between 2.5 to 3.7 inches (6.5 to 9.5 cm) in width.
3. Ensure your phone's buttons are not obstructed or pressed by the clamps.

Detachable Phone Clip & Widely Compatible

compatible with 2,5"-3,7" cellphones



Figure 5: Diagram illustrating the adjustable width of the phone clip (2.5-3.7 inches) and its compatibility with various smartphone models.

4. OPERATING INSTRUCTIONS

4.1 Using as a Selfie Stick

1. Hold the handle firmly.

2. Extend the aluminum pole to your desired length. The pole can extend from 9.8 inches (25 cm) to 49 inches (126 cm).
3. Adjust the phone holder's angle using the ball head to achieve the desired shot.
4. Use the paired wireless remote control to capture photos or start/stop video recording.

4.2 Using as a Tripod

1. From the collapsed position, gently pull the bottom handle downwards to deploy the tripod legs. Ensure the legs are fully spread for maximum stability.
2. Place the tripod on a flat, stable surface.
3. Extend the aluminum pole to your desired height.
4. Adjust the phone holder's angle using the ball head.
5. Use the paired wireless remote control to capture photos or start/stop video recording.

49.60"/126cm Tall Phone Tripod

freely adjust the height to meet your different needs



Figure 6: Visual guide demonstrating the adjustable height of the tripod from its folded state to various extended heights, up to 49 inches (126 cm).

4.3 Using the Cold Shoe and 1/4" Screw Mount

The SelfieShow C15 features a cold shoe interface and a standard 1/4" screw mount for expanded functionality:

- **Cold Shoe:** Located on top of the phone holder, this allows you to attach accessories such as external microphones or LED fill lights.

- **1/4" Screw Mount:** The ball head features a universal 1/4" screw, allowing direct attachment of compact cameras, action cameras (like GoPro), or other compatible accessories when the phone holder is detached.

Multi-function Phone Clip

The Cold Shoe



1/4" Screws

Locking Knob



Figure 7: Detailed view of the multi-function phone clip, highlighting the cold shoe interface for attaching external accessories.



Figure 8: Image demonstrating the 1/4 inch screw mount for connecting cameras, GoPros, or fill lights, showcasing the versatility of the tripod head.

5. MAINTENANCE

5.1 Cleaning

- Wipe the device with a soft, dry cloth.

- Do not use harsh chemicals or abrasive cleaners.
- Avoid exposing the device to excessive moisture.

5.2 Storage

- Store the selfie stick in a cool, dry place when not in use.
- Ensure the remote control is securely placed in its designated slot to prevent loss.

5.3 Remote Control Battery Replacement

The remote control uses a CR2032 coin cell battery. To replace:

1. Locate the battery compartment on the remote control.
2. Use a small coin or tool to open the compartment.
3. Remove the old battery and insert a new CR2032 battery with the positive (+) side facing up.
4. Close the battery compartment securely.

6. TROUBLESHOOTING

6.1 Remote Control Not Connecting

- Ensure the remote control battery is not depleted. Replace if necessary.
- Make sure Bluetooth is enabled on your smartphone.
- Try unpairing and re-pairing the remote control in your phone's Bluetooth settings.
- Ensure the remote is within the 30 ft (10 m) operating range of your phone.

6.2 Tripod Instability

- Ensure the tripod legs are fully extended and locked into position on a flat, stable surface.
- Avoid extending the pole to its maximum height in windy conditions or on uneven terrain.
- Verify that your smartphone is securely seated in the phone holder and balanced.

6.3 Phone Not Fitting in Holder

- Check that your phone's width is within the compatible range of 2.5 to 3.7 inches (6.5 to 9.5 cm).
- Remove any bulky phone cases if they prevent a secure fit.

7. SPECIFICATIONS

Feature	Detail
Model Name	C15
Brand	SelfieShow
Material	Aluminum
Item Weight	10.5 ounces (297.67 grams)
Folded Size	9.8 inches (25 cm)
Minimum Height	9.8 inches (25 cm)

Feature	Detail
Maximum Height	49 inches (124.5 cm)
Phone Holder Width	2.5 - 3.7 inches (6.5 - 9.5 cm)
Tripod Head Type	Ball Head (360° rotation)
Remote Control Range	Up to 30 ft (10 m)
Remote Control Battery	1 x CR2032 (included)
Compatible Devices	Smartphones (iPhone, Android)
Additional Features	Cold Shoe, 1/4" Screw Mount

8. WARRANTY INFORMATION

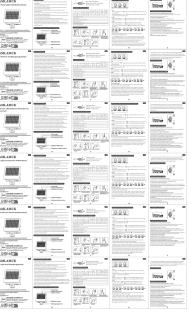
SelfieShow products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact customer support. Typically, products are covered against manufacturing defects for a period specified at the time of purchase.

9. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your SelfieShow C15 Aluminum Selfie Stick Phone Tripod that are not addressed in this manual, please contact our customer support team. Refer to your product packaging or the SelfieShow official website for contact information.

Related Documents - C15

	<p>SelfieShow Extendable Selfie Stick Tripod with Wireless Remote - User Guide</p> <p>Comprehensive guide to the SelfieShow extendable selfie stick tripod, featuring a wireless remote, portable monopod design, and wide smartphone compatibility for iPhone, Samsung, and Huawei devices.</p>
	<p>COMISO C15 Wireless Waterproof Speaker User Manual</p> <p>Comprehensive user manual for the COMISO C15 Wireless Waterproof Speaker, detailing features, operation, safety instructions, and troubleshooting.</p>
	<p>FASS Titanium Signature Series Installation Manual for Duramax L5P (2020-2023)</p> <p>Comprehensive installation manual for the FASS Titanium Signature Series fuel system, designed for 2020-2023 Duramax L5P trucks with aftermarket tuning. Includes parts list, step-by-step instructions, warnings, and warranty information.</p>

	<p><u>MINI Printer Manual: Setup, Usage, and Maintenance</u></p> <p>A comprehensive user manual for the MINI Printer, covering setup, paper replacement, charging, and important safety precautions. Includes FCC compliance information.</p>
	<p><u>LAMLAMCK LED Flood Light with Motion Sensor - Installation Guide and Specifications</u></p> <p>Detailed user manual for the LAMLAMCK LED Flood Light with Motion Sensor. Includes installation instructions, product specifications, sensor function settings (LUX, SENS, TIME), manual mode operation, and troubleshooting FAQs. Features IP66 waterproof rating.</p>
	<p><u>Nonlinear Labs C15 Studio Package Addendum: MIDI and Recorder Guide</u></p> <p>This addendum to the Nonlinear Labs C15 Studio Package user manual details its MIDI capabilities, including comprehensive settings for receiving and sending MIDI messages, mapping hardware sources like pedals and ribbons, and managing program changes. It also explains the integrated digital audio recorder, its functions, user interface, playback features, and how to select and download audio segments.</p>