

[Manuals.plus](#) /

› [Floisdace](#) /

› Floisdace 10-QT Dual Large Air Fryer Instruction Manual

Floisdace WL-02D

Floisdace 10-QT Dual Large Air Fryer Instruction Manual

Model: WL-02D

1. PRODUCT OVERVIEW

The Floisdace 10-QT Dual Large Air Fryer is an innovative kitchen appliance designed for efficient and healthy cooking. It features a unique dual-basket system, allowing you to cook two different dishes simultaneously with independent temperature and time settings. Its 10-in-1 functionality provides versatility for various cooking methods, making meal preparation simpler and faster.



Figure 1.1: Floisdace 10-Qt Dual Large Air Fryer with two baskets.

Key Features:

- **Innovation Double Design:** Seamlessly switch between a generous 10-QT basket for large family feasts and two 5-QT baskets to cook different dishes simultaneously with varied settings.
- **XL Family-Sized Capacity:** 10 QT Large capacity lets you cook for 8 people, family-sized meals effortlessly. Perfect for cooking large portions in one go.
- **10-in-1 Versatility:** Features 10 preset menus including air fry, grill, dehydrate, bake, roast, broil, reheat, toast, mellow, and custom.
- **Smart Sync Finish & Match Cook:** Synchronizes cooking times so both baskets finish simultaneously.
- **Customizable Cooking Precision:** Wide temperature range from 70°F to 450°F.



Figure 1.2: Illustration of the dual 5-QT basket capacity, allowing two different foods to be cooked simultaneously.

10-in-1 functionality

10 versatile cooking programs air fry



Figure 1.3: Visual representation of the 10-in-1 functionality, showcasing various food types that can be prepared.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- The appliance is made of durable plastic and features non-stick inner material.

3. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials, including any protective films or stickers.
2. **Clean:** Wash the removable baskets, crisper plates, and dividers with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is adequate space (at least 6 inches) around the back and sides for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 3.1: The air fryer's compact, space-saving design allows it to fit under standard cabinets while offering a large 10-QT capacity.

4. OPERATING INSTRUCTIONS

The Floisdace Air Fryer features an intuitive touch control panel for easy operation.



Figure 4.1: Close-up of the digital touch control panel with various preset icons and manual controls.

1. **Power On:** Press the power button () to turn on the appliance.
2. **Select Basket:** Choose basket 1 or 2 by pressing the corresponding number button.
3. **Choose Cooking Function:**
 - **Preset Menus:** Rotate the control knob to scroll through the 10 preset cooking icons (e.g., fries, chicken, steak, vegetables, bake, roast). Press the knob to select. The appliance will automatically set a recommended time and temperature.
 - **Manual Setting:** Press the temperature button () to adjust temperature (70°F to 450°F) using the control knob. Press the time button () to adjust cooking time using the control knob.
4. **Smart Sync Finish / Match Cook:**
 - **Sync Finish:** If cooking different foods in both baskets that require different times, use the 'SYNC'

function. Set each basket's program, then press 'SYNC' to ensure both finish simultaneously.

- **Match Cook:** If cooking the same food in both baskets with identical settings, set one basket, then press 'MATCH' to apply the same settings to the other basket.

5. **Start Cooking:** Press the Play/Pause button (▶||) to begin cooking.
6. **Pause/Resume:** Press the Play/Pause button (▶||) during cooking to pause or resume the process.
7. **Shake Reminder:** For some recipes, the air fryer may beep to remind you to shake the basket for even cooking.
8. **End of Cooking:** The air fryer will beep when cooking is complete. Carefully remove the baskets.



Figure 4.2: The user-friendly interface simplifies the cooking process, allowing for quick selection of functions.

5. COOKING FUNCTIONS

The 10-in-1 versatility of your Floisdace Air Fryer allows for a wide range of culinary creations. Here are some general guidelines:

- **Air Fry:** Ideal for achieving crispy textures with minimal oil. Perfect for fries, chicken wings, and nuggets.
- **Grill:** Use for meats and vegetables to get a charred finish.
- **Dehydrate:** Low temperature setting for drying fruits, vegetables, or making jerky.
- **Bake:** Suitable for cakes, muffins, and other baked goods.
- **Roast:** For larger cuts of meat or whole vegetables, providing tender interiors and crispy exteriors.
- **Broil:** High heat from above for quick browning and melting.
- **Reheat:** Gently warms up leftovers without drying them out.
- **Toast:** For bread, bagels, or frozen waffles.
- **Mellow:** A gentle cooking setting for delicate items.
- **Custom:** Allows full manual control over time and temperature for personalized recipes.



Figure 5.1: Examples of various dishes that can be cooked using the air fryer's diverse functions, from crispy fries to roasted chicken.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Baskets and Accessories:** The non-stick baskets, crisper plates, and dividers are dishwasher-safe for convenient cleanup. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Interior:** For stubborn residue inside the cooking chamber, wipe with a damp cloth and a small amount of mild detergent.
- **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Figure 6.1: The removable baskets and accessories are designed for easy cleaning, including being dishwasher-safe.

7. TROUBLESHOOTING

If you encounter any issues with your Floisdace Air Fryer, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Food not cooked evenly.	Overcrowding; not shaking baskets.	Do not overcrowd baskets. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease residue; fatty food.	Clean baskets and interior thoroughly. For fatty foods, drain excess grease during cooking.
Food not crispy.	Insufficient oil; low temperature/time.	Lightly coat food with oil. Increase temperature or cooking time as needed.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	WL-02D
Capacity	10 Liters (Dual 5-QT Baskets)
Product Dimensions	15.7"D x 9.3"W x 17.5"H
Output Wattage	1800 Watts
Voltage	120 Volts
Temperature Range	70°F to 450°F
Control Method	Touch
Material	Plastic, Non-stick Inner Material
Dishwasher Safe Parts	Yes (Baskets, Crisper Plates, Dividers)
Item Weight	18.5 Pounds

9. WARRANTY AND SUPPORT

Your Floisdace 10-QT Dual Large Air Fryer is covered by a manufacturer's warranty against defects in material and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty

card included with your product or visit the official Floisdace website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Floisdace Customer Service. Have your model number (WL-02D) and purchase information ready when contacting support.

Contact Information:

- Please refer to your product packaging or the official Floisdace website for the most up-to-date contact details.