

B0DRCLVXXY

# Generic Robot Vacuum 3-in-1 Cleaner User Manual

Model: B0DRCLVXXY

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Generic Intelligent Sweeping Robot 3-in-1 Vacuum Cleaner. This device is designed for sweeping, vacuuming, and mopping hard floor surfaces.

## 2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not operate the robot vacuum near open flames or heat sources.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not immerse the appliance in water or other liquids.
- Use only the charging cable provided by the manufacturer.
- Ensure the dustbin and filter are correctly installed before operation.
- This appliance is designed for indoor use on hard floors only.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Robot Vacuum (Sweeper Unit)
- 1 x Charging Cable (Data Line)
- 1 x Mop Pad

## 4. PRODUCT OVERVIEW

The Generic Robot Vacuum is a compact, intelligent cleaning device offering 3-in-1 functionality: sweeping, vacuuming, and mopping. It features obstacle avoidance and is designed for efficient cleaning of hard floors.



**Figure 4.1:** Top view of the robot vacuum, highlighting its sleek design and central control button.

The robot is equipped with a 400mAh lithium battery for lasting performance and can be controlled via an app for convenience.



**Figure 4.2:** The robot vacuum in operation, demonstrating its compact size and cleaning path.

## 5. SETUP

---

### 5.1 Charging the Robot Vacuum

1. Locate the charging port on the side of the robot vacuum.
2. Connect the provided charging cable to the robot vacuum and plug the other end into a power outlet.
3. Allow the robot to charge fully before first use. The indicator light will change to show charging status.

## 400mAh lithium battery

Lithium battery power supply, lasting sweep and drag without electricity



Figure 5.1: Location of the battery compartment and battery specifications.

### 5.2 Attaching the Mop Pad

1. Ensure the robot vacuum is powered off.
2. Attach the mop pad to the designated area on the underside of the robot. Ensure it is securely fastened.
3. Dampen the mop pad with water if performing wet mopping.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Starting a Cleaning Cycle

1. Place the robot vacuum on the floor in the area you wish to clean.
2. Press the power button located on the top of the robot to begin a cleaning cycle. The robot will automatically sweep, vacuum, and mop.
3. To pause or stop cleaning, press the power button again.



**Figure 6.1:** The robot vacuum actively cleaning a hard floor surface.

## 6.2 Using App Control

For advanced control and scheduling, download the dedicated app (refer to packaging or manufacturer's website for app details). Follow the in-app instructions to connect your robot vacuum and manage cleaning modes, schedules, and monitor status.

## 7. MAINTENANCE

---

### 7.1 Emptying the Dustbin

1. Power off the robot vacuum.
2. Locate and remove the dustbin from the robot.
3. Empty the contents into a waste bin.
4. Reinsert the dustbin securely.

### 7.2 Cleaning the Filter

The robot vacuum uses a cloth filter. After emptying the dustbin, gently tap the filter to remove accumulated dust. If necessary, the filter can be rinsed with water. Ensure the filter is completely dry before reinserting it into the dustbin.

### 7.3 Cleaning the Mop Pad

Remove the mop pad after each use. Hand wash the mop pad with mild detergent and water. Allow it to air dry completely before reattaching or storing.

### 7.4 Cleaning Brushes and Sensors

Regularly inspect the side brushes for tangled hair or debris and clean them as needed. Wipe the charging contacts and obstacle avoidance sensors with a dry, soft cloth to ensure optimal performance.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; not charged.	Charge the robot vacuum fully.
Robot stops unexpectedly.	Obstacle detected; low battery; brushes tangled.	Clear obstacles; recharge; clean brushes.
Poor cleaning performance.	Full dustbin; dirty filter; worn brushes.	Empty dustbin; clean/replace filter; clean/replace brushes.
Robot does not charge.	Charging cable not connected; dirty charging contacts.	Ensure cable is connected; clean charging contacts on robot and cable.

## 9. SPECIFICATIONS

---

**Brand:** Generic

**Model:** B0DRCLVXXY

**Color:** White

**Special Features:** Obstacle Avoidance, Wet/Dry, Lightweight

**Included Components:** 1 x Mop Pad

**Filter Type:** Cloth

**Power Source:** Battery Powered (400mAh Lithium Battery)


**Form Factor:** Round

**Item Weight:** 6.3 ounces

**Surface Recommendation:** Hardwood

**Controller Type:** App Control

**Dimensions:** Approximately 16cm (6.29 in) diameter, 6cm (2.36 in) height

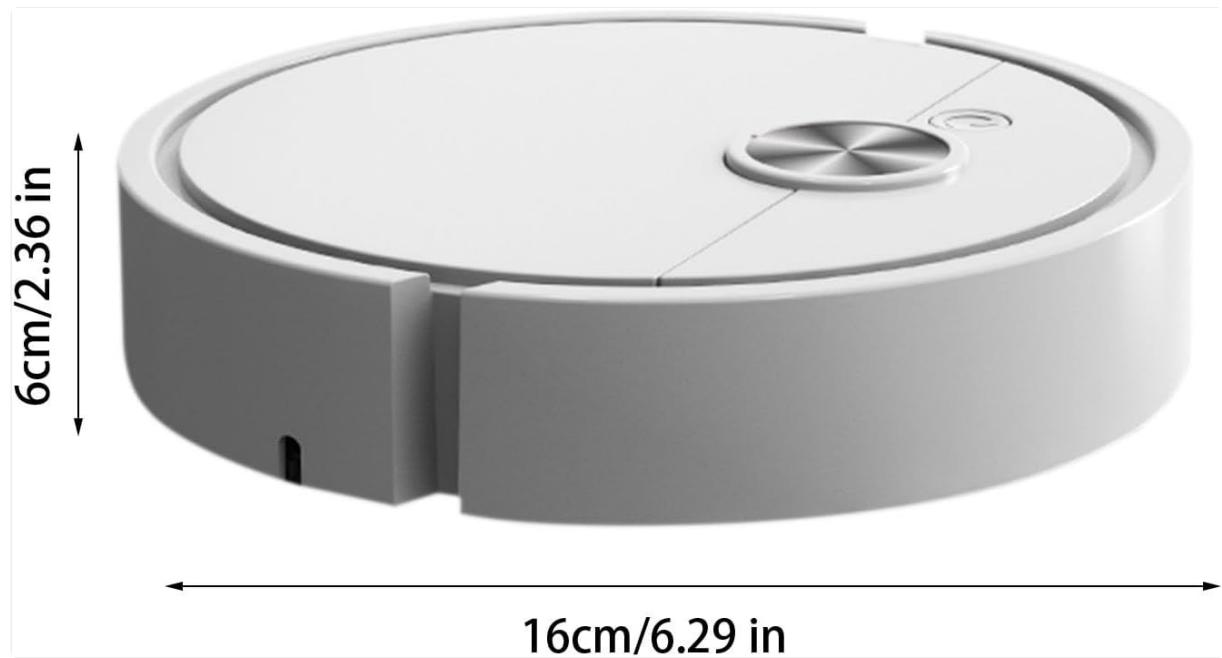

**Figure 9.1:** Robot vacuum dimensions.

## 10. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase.