

AceGamer Wireless Controller

AceGamer Wireless Controller

INSTRUCTION MANUAL FOR NINTENDO SWITCH/LITE/OLED/SWITCH 2

Introduction

Thank you for choosing the AceGamer Wireless Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller. Please read this manual thoroughly before use to ensure optimal performance and a satisfying gaming experience. Keep this manual for future reference.

Product Overview

The AceGamer Wireless Controller is designed for use with Nintendo Switch, Switch Lite, Switch OLED, and Switch 2 consoles, as well as Windows PCs and Android phones. It features dual vibration, a 6-axis gyro sensor, and an ergonomic design for comfortable gameplay.



Image: Two AceGamer Wireless Controllers shown with their respective USB-C charging cables.

Controller Components



Image: A detailed diagram illustrating the front and top views of the AceGamer Wireless Controller, with labels for all buttons, joysticks, D-pad, LED indicators, and the USB-C port.

- **Left Joystick:** For directional movement.
- **D-pad:** Directional pad for precise input.
- **Menu Selection (-):** Accesses negative menu options.
- **Turbo Button (T):** Activates/deactivates turbo function.
- **Home Button (H):** Returns to the console's home screen, wakes up console.
- **Capture Button:** Takes screenshots.
- **Menu Selection (+):** Accesses positive menu options.
- **Action Buttons (A, B, X, Y):** Primary action inputs.
- **Right Joystick:** For camera control or secondary movement.
- **LED Indicators (1, 2, 3, 4):** Show player number and charging status.
- **L/R Buttons:** Left and Right shoulder buttons.
- **ZL/ZR Buttons:** Left and Right trigger buttons.
- **USB-C Port:** For charging and wired connection to PC.
- **Reset Button:** Small button for resetting the controller (requires a pin).

Setup

1. Unboxing

Verify that the package contains the following items:

- AceGamer Wireless Controller (x2)
- USB-C Charging Cable (x2)
- User Manual (this document)

2. Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB-C cable to the controller's USB-C port and the other end to a USB power source (e.g., console, PC, USB wall adapter). The LED indicators will show charging status and turn off when fully charged.

3. Pairing with Nintendo Switch/Lite/OLED/Switch 2

Follow these steps to pair your AceGamer Wireless Controller with your Nintendo Switch console:

1. Turn on your Nintendo Switch console.
2. From the HOME Menu, select **Controllers > Change Grip/Order**.
3. On the controller, press and hold the **Home button (H)** for 3-5 seconds until the four LED indicators start flashing rapidly. This indicates the controller is in pairing mode.
4. Once the controller is successfully paired, one or more LED indicators will remain solid, indicating the player number.
5. After the first successful pairing, you can wake up the console and controller by simply pressing the **Home button (H)** on the controller.

One-click Wake-up



Image: An AceGamer Wireless Controller shown with the Home button highlighted, indicating its function to wake up a connected Nintendo Switch console.

4. Connecting to PC (USB Cable)

The AceGamer Wireless Controller supports wired connection to Windows PCs. Simply connect the controller to your PC using the supplied USB-C cable. No additional drivers are typically required.

Compatible With Multiple Devices

Compatible with Switch/Switch Lite/Switch OLED/PC Steam



Image: An AceGamer Wireless Controller displayed alongside various compatible devices, including a Nintendo Switch, a laptop, a desktop monitor, and a PC tower, illustrating its multi-device compatibility.

Operating Instructions

1. Basic Controls

Refer to the 'Controller Components' diagram in the Product Overview section for button layout. All buttons and joysticks function as standard inputs for your gaming console or PC.

2. Turbo Function

The Turbo function allows for rapid, repeated pressing of a button with a single hold.

- **Activating Turbo:** Press and hold the **Turbo button (T)**, then press the desired action button (A/B/X/Y/L/R/ZL/ZR). The button will now continuously input when held.
- **Adjusting Turbo Speed:** While holding the **Turbo button (T)**, move the **Right Joystick Up** to increase turbo speed or **Down** to decrease it. There are 3 available speeds.
- **Deactivating Turbo:** Repeat the activation step (press **Turbo button (T)**, then the turbo-enabled action button).



Image: A graphic illustrating the three adjustable turbo speeds (5 shots/s, 12 shots/s, 20 shots/s) available on the AceGamer Wireless Controller, depicted in a gaming scenario.

3. Vibration Adjustment

The controller features dual vibration motors with adjustable intensity.

- **Adjusting Vibration:** Press and hold the **Turbo button (T)**, then move the **Left Joystick Up** to increase vibration intensity or **Down** to decrease it. There are 4 levels of vibration (0%, 30%, 70%, 100%).

4-Level Vibration

4-Level Vibration 4-Level Vibration 4-Level Vibration 4-Level Vibration



Image: A graphic demonstrating the four adjustable vibration levels (0%, 30%, 70%, 100%) of the AceGamer Wireless Controller, with visual cues of increasing intensity.

4. Screenshot Function

Press the **Capture button** (located near the + button) to take a screenshot of your current game screen.

Maintenance

1. Cleaning

To clean your controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.

2. Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller.

3. Battery Care

The controller contains a built-in rechargeable battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the controller regularly, even if not in use for extended periods.
- Do not expose the controller to high temperatures.

Troubleshooting

- **Controller will not connect/pair:**
 - Ensure the controller is charged.
 - Make sure the console is on and in 'Change Grip/Order' mode.
 - Try resetting the controller by inserting a thin pin into the small reset hole on the back of the controller.
 - Move closer to the console to rule out interference.
- **Buttons are unresponsive or delayed:**
 - Check battery level and charge if low.
 - Ensure there are no obstructions between the controller and the console.
 - Reset the controller.
- **Vibration not working:**
 - Check the vibration intensity settings (refer to 'Vibration Adjustment' section).
 - Ensure the game supports vibration feedback.
- **Controller disconnects frequently:**
 - Ensure the controller is fully charged.
 - Reduce distance between controller and console.
 - Avoid strong electromagnetic interference sources.

Specifications

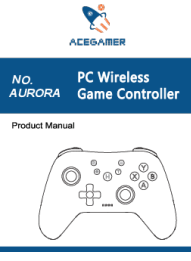





Brand	AceGamer
Model	Wireless Controller
Compatibility	Nintendo Switch, Switch Lite, Switch OLED, Switch 2, Windows PC, Android Phone
Connectivity	Wireless (Bluetooth), USB-C (for PC)
Special Features	6-axis Gyro Sensor, Dual Vibration, Turbo Function, Ergonomic Design, One-click Wake-up
Battery	Rechargeable (1 AAA batteries required, included - <i>Note: This typically refers to internal rechargeable battery, not removable AAA cells.</i>)
Wireless Range	8-10 meters (approx. 26-33 feet)
Dimensions	6.65 x 5.59 x 4.57 inches (Package)
Weight	1.17 pounds (Item)

Warranty and Support

AceGamer products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your purchase or contact AceGamer customer support. If you

encounter any issues not covered in this manual, please reach out to the retailer or manufacturer for assistance.

Related Documents - Wireless Controller

 <p>ACEGAMER No. AURORA PC Wireless Game Controller Product Manual</p>	<p>AceGamer Aurora PC Wireless Game Controller Product Manual</p> <p>User manual for the AceGamer Aurora PC Wireless Game Controller, covering product description, key features, connectivity options (wired, Bluetooth, receiver), functional adjustments, calibration, macro programming, light effects, power management, security, and reset procedures.</p>
 <p>ACEGAMER Wireless Gaming Controller DuoShadow User Manual -1-</p>	<p>ACEGAMER DuoShadow Wireless Gaming Controller User Manual</p> <p>Comprehensive user manual for the ACEGAMER DuoShadow wireless gaming controller, detailing setup, features, calibration, programming, charging, and specifications for use with Nintendo Switch and PC.</p>
	<p>STK-7038 Wireless Controller User Manual</p> <p>Comprehensive user manual for the STK-7038 wireless controller, detailing setup, connection modes for Nintendo Switch, Android, and PC, button functions, vibration, turbo, macro features, and firmware updates.</p>
 <p>ACEGAMER Model No. Pocket Controller N-S/PC/iOS/Android Wireless Controller Product Manuals</p>	<p>AceGamer Pocket Controller User Manual for N-S, PC, iOS, Android</p> <p>Comprehensive user manual for the AceGamer Pocket Controller, detailing features, connectivity options for N-S, PC, iOS, and Android, turbo functions, calibration, and app integration. Includes product parameters and security instructions.</p>
	<p>Wireless Controller User Manual - STK-7052P</p> <p>Comprehensive user manual for the STK-7052P Wireless Controller, detailing setup, connection guides for Switch, PC, Android/iOS, advanced features like Rapid Fire and Macro, calibration, and precautions.</p>
	<p>XB-003 Wireless Controller User Manual for N-Switch and PC</p> <p>Discover the XB-003 Wireless Controller, compatible with N-Switch Console and Windows PC (360 mode). This user manual provides detailed instructions on connecting, calibrating sensors, charging, and understanding key functions, ensuring an optimal gaming experience with gyroscope axis and dual motor vibration.</p>



[\[pdf\]](#) User Manual

PS4 p4 2 Administrator User Manual AceGamer Upgraded Version Wireless Controller for Game
Compatible with Pro PC Motion Motors and Audio Function Mini LED Indicator USB Cable Anti Slip Starry
Sky Video Games C1xSHejxY8L m media amazon images I |||

Wireless Controller For P4 Drahtloser Controller fr P4 Manette Sans Fil Pour P4
Mando Inalmbrico Para P4 Controller Wireless Per P4 P4 ...

lang: **score:17** filesize: 4.4 M page_count: 30 document date: 2023-08-08