

Heated Steering Wheel Cover 12243

Heated Steering Wheel Cover User Manual

Model: Heated Steering Wheel Cover 12243

1. INTRODUCTION

Thank you for choosing the Generic Heated Steering Wheel Cover. This product is designed to provide a warm and comfortable driving experience, especially during colder weather. Crafted from soft velvet chenille fabric, it offers enhanced grip and comfort while driving. The integrated 12V heating element quickly warms the cover, ensuring your hands stay toasty.

This manual provides essential information for the safe and effective use, installation, and maintenance of your new heated steering wheel cover. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to the product or vehicle.

- Ensure the steering wheel cover is securely installed and does not interfere with the safe operation of the vehicle's steering, airbags, or other controls.
- Only connect the product to a 12V DC power outlet (cigarette lighter socket) in your vehicle. Do not attempt to connect to other power sources.
- Do not use the product if the power cord or plug is damaged.
- Do not leave the product plugged in when the vehicle is unattended for extended periods.
- Keep the power cord away from hot surfaces, sharp edges, and moving parts.
- Do not immerse the product in water or other liquids.
- This product is designed for automotive use only. Do not use it for any other purpose.
- If you notice any smoke, unusual odors, or excessive heat, immediately unplug the device and consult a qualified technician.

- Keep out of reach of children.

3. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Heated Steering Wheel Cover
- 12V DC Car Adapter (Cigarette Lighter Plug)
- Connection Cable (Coiled Cord)



Image: Components of the Heated Steering Wheel Cover, including the soft material cover, the heating plug, and the 12V DC car plug.

4. SPECIFICATIONS

Feature	Specification
Model	Heated Steering Wheel Cover 12243
Power Source	12V DC (Vehicle Cigarette Lighter Socket)
Material	Velvet Chenille Fabric
Compatibility	Universal Fit for 14.5-15.5 inch (approx. 37-39 cm) steering wheels
Item Weight	Approx. 1.2 pounds (0.54 kg)
Dimensions (Cover)	Approx. 15 x 15 x 2 inches (38 x 38 x 5 cm)
Heating Time	Up to 1 minute for initial heat
Temperature Control	Automatic regulation

UNIVERSAL SIZE

Fits Most Vehicles Wheels

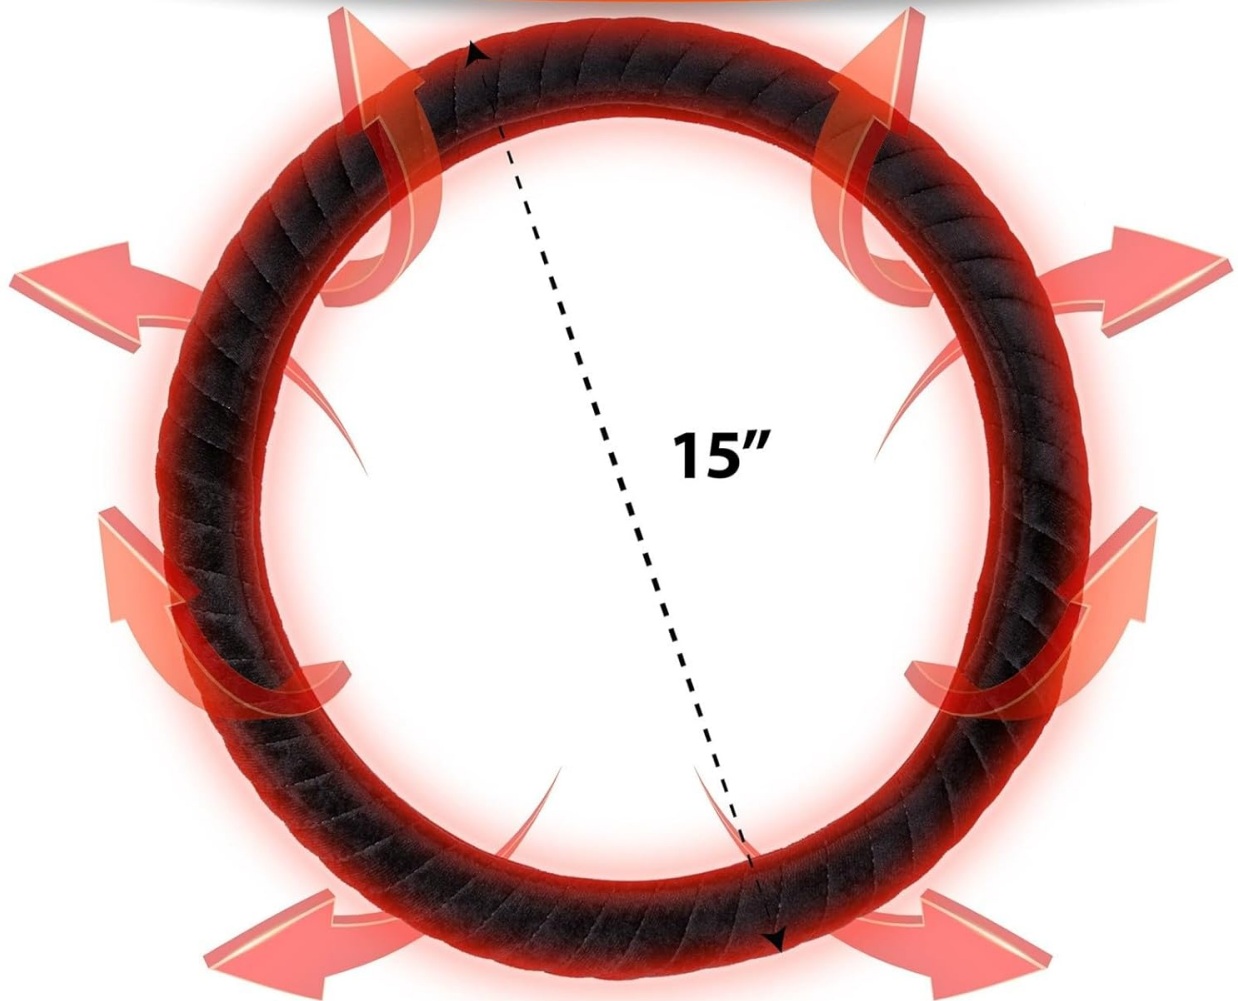


Image: Universal size compatibility, indicating a 15-inch diameter for the steering wheel cover.

38cm/14.96inch



5cm/1.97inch

38cm/14.96inch

Image: Detailed dimensions of the heated steering wheel cover, showing its diameter and width.

5. SETUP AND INSTALLATION

The Heated Steering Wheel Cover is designed for easy, tool-free installation. Follow these steps for proper setup:

1. **Prepare the Steering Wheel:** Ensure your vehicle's steering wheel is clean and dry before installation.
2. **Position the Cover:** Start by placing the top edge of the heated steering wheel cover over the top of your vehicle's steering wheel.
3. **Stretch and Fit:** Gradually work the cover down and around the sides of the steering wheel, stretching it firmly to ensure a snug fit. Continue until the entire steering wheel is covered.
4. **Connect Power:** Locate your vehicle's 12V DC power outlet (cigarette lighter socket). Insert the 12V DC car adapter plug firmly into the socket. Ensure the connection cable (coiled cord) is routed safely and does not interfere with driving controls.

EASY TO INSTALL

3 Steps Process Which
Takes 1-2 Minutes

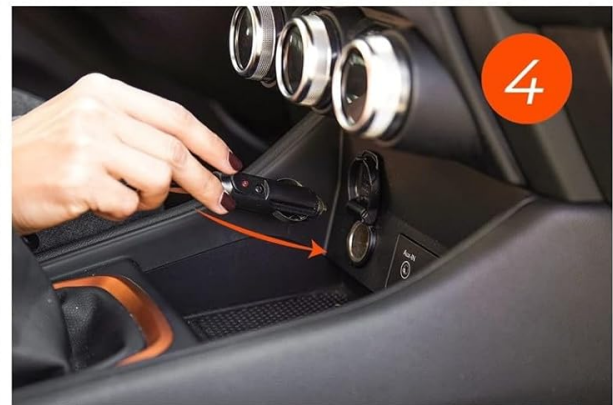


Image: Easy 3-step installation process, showing how to fit the cover onto the steering wheel and plug it into the car's power outlet.

6. OPERATING INSTRUCTIONS

Once installed, operating your heated steering wheel cover is straightforward:

1. **Start Your Vehicle:** Ensure your vehicle's engine is running or the ignition is in the "ACC" or "ON" position to provide power to the 12V DC outlet.
2. **Activate Heating:** The heating element will begin to warm up automatically once plugged in. There is no separate on/off switch on the cover itself.
3. **Enjoy the Warmth:** The cover will typically reach a comfortable temperature within approximately one minute. The system features automatic temperature regulation to maintain a steady, comfortable warmth.
4. **Deactivate Heating:** To turn off the heating function, simply unplug the 12V DC car adapter from your vehicle's power outlet.

RELAXING WARM

Constant Temperature &
Voltage Protection



Image: A driver enjoying the relaxing warmth provided by the heated steering wheel cover during a drive.

EASY TO INSTALL

3 Steps Process Which
Takes 1-2 Minutes



Image: Key operational features including quick heating, automatic temperature control, and the comfortable grip provided by the material.

7. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your heated steering wheel cover, follow these care instructions:

- **Cleaning:** Disconnect the cover from the power source before cleaning. Wipe the surface with a soft, damp cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the cover in water.
- **Storage:** When not in use, unplug the cover and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid folding or creasing the cover excessively, as this may damage the internal heating element.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage or wear. If any damage is found, discontinue use and replace the product.

8. TROUBLESHOOTING

If you encounter issues with your heated steering wheel cover, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cover is not heating.	<ul style="list-style-type: none">◦ Not properly plugged in.◦ Vehicle's 12V outlet is not receiving power (e.g., vehicle off, blown fuse).◦ Damaged power cord or plug.	<ul style="list-style-type: none">◦ Ensure the 12V DC plug is fully inserted into the outlet.◦ Start the vehicle or turn the ignition to "ACC" or "ON". Check your vehicle's fuse box for a blown fuse related to the 12V outlet.◦ Inspect the cord and plug for visible damage. If damaged, discontinue use and replace the product.
Cover heats up but then cools down quickly.	Automatic temperature regulation is functioning.	This is normal operation. The cover is designed to maintain a steady, comfortable temperature and will cycle on/off as needed.
Cover feels too hot.	Possible malfunction or prolonged use.	Immediately unplug the device. If the issue persists after cooling down and replugging, discontinue use.

9. WARRANTY AND SUPPORT

This product is manufactured by Generic. For any questions, concerns, or support needs regarding your Heated Steering Wheel Cover, please refer to the retailer or platform from which you purchased the product for their specific return, warranty, and customer service policies.

Please retain your proof of purchase for any warranty claims.