

Tomado TSC3501B

Tomado TSC3501B Slow Cooker Instruction Manual

MODEL: TSC3501B

Introduction

Thank you for choosing the Tomado TSC3501B Slow Cooker. This appliance is designed to simplify your cooking process, allowing you to prepare delicious meals with minimal effort. Its 3.5-liter capacity and variable temperature control make it suitable for a wide range of dishes, from stews and soups to desserts. Please read this manual carefully before using your slow cooker to ensure safe and efficient operation.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control

to 'OFF', then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Avoid sudden temperature changes to the ceramic inner pan, such as adding cold food to a hot pan or placing a hot pan on a cold surface.
- The ceramic inner pan is fragile and can crack if dropped or hit. Inspect before each use.

Parts Description

Familiarize yourself with the components of your Tomado Slow Cooker.



Figure 1: Components of the Tomado TSC3501B Slow Cooker. This image displays the main outer unit, the removable ceramic inner pan, and the glass lid, illustrating how the appliance is assembled.

1. **Outer Unit:** The main housing containing the heating element and control knob.
2. **Ceramic Inner Pan:** The removable cooking vessel where food is placed.
3. **Glass Lid:** Transparent lid for monitoring cooking progress without releasing heat.
4. **Control Knob:** Used to select heat settings (OFF, LOW, HIGH, WARM).
5. **Indicator Light:** Illuminates when the slow cooker is operating.

Before First Use

Before using your slow cooker for the first time, follow these steps:

1. Unpack the slow cooker and remove all packaging materials.
2. Wash the ceramic inner pan and glass lid in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the outer unit with a damp cloth. Do not immerse the outer unit in water.
4. Ensure all parts are dry before assembly and use.

Setup

Proper setup ensures safe and effective operation of your slow cooker.

1. Place the outer unit on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
2. Carefully place the clean ceramic inner pan into the outer unit.
3. Add your ingredients to the ceramic inner pan. Do not overfill; leave at least 2-3 cm of space from the rim.
4. Place the glass lid securely on top of the ceramic inner pan.
5. Plug the power cord into a suitable electrical outlet.

Operating Instructions

The Tomado TSC3501B Slow Cooker features a simple rotary knob for selecting cooking settings.



Figure 2: The Tomado Slow Cooker in operation, displaying the control knob and indicator light. The knob allows selection between OFF, LOW, HIGH, and WARM settings.

Heat Settings:

- **OFF:** Turns the slow cooker off.
- **LOW:** For gentle, long cooking times. Ideal for tenderizing meats and developing rich flavors.
- **HIGH:** For faster cooking. Use when you need to cook a dish in a shorter amount of time.
- **WARM:** Maintains the temperature of cooked food at a safe serving temperature without further cooking. Do not use the WARM setting for cooking raw food.

Cooking Process:

1. Prepare your ingredients and place them into the ceramic inner pan.
2. Cover with the glass lid.
3. Turn the control knob to your desired setting (LOW or HIGH). The indicator light will illuminate.
4. Allow the food to cook for the recommended time. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
5. Once cooking is complete, you can switch the setting to WARM to keep the food at serving temperature.
6. To turn off the appliance, turn the control knob to OFF and unplug from the wall outlet.



Figure 3: The ceramic inner pan filled with ingredients, demonstrating readiness for slow cooking. The glass lid is not shown in this view.

Maintenance and Cleaning

Regular cleaning will help maintain the performance and longevity of your slow cooker.

1. Always unplug the slow cooker and allow it to cool completely before cleaning.
2. **Ceramic Inner Pan and Glass Lid:** These parts are dishwasher safe or can be washed by hand in warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the surface.
3. **Outer Unit:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the outer unit in water or any other liquid.
4. Ensure all parts are thoroughly dry before storing or reassembling.

Troubleshooting

If you encounter any issues with your slow cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Not plugged in; power outlet not working; control knob not set.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. Turn the control knob to LOW, HIGH, or WARM.

Problem	Possible Cause	Solution
Food is not cooking properly.	Lid not sealed properly; too much liquid; incorrect heat setting; frequent lid lifting.	Ensure the lid is seated correctly. Reduce liquid if necessary. Use the appropriate heat setting for your recipe. Avoid lifting the lid during cooking.
Food is burning on the bottom.	Too little liquid; cooking on HIGH for too long; food stuck to bottom.	Ensure adequate liquid is used. Consider using the LOW setting for longer cooking times. Stir ingredients if possible (though generally not recommended for slow cooking).

Specifications

Technical details for the Tomado TSC3501B Slow Cooker.



Figure 4: Product label displaying model number, electrical ratings, and manufacturer information for the Tomado TSC3501B Slow Cooker.

Feature	Specification
Model Number	TSC3501B
Capacity	3.5 Liters
Power Source	Corded Electric
Power Consumption	170W
Voltage	220-240V ~ 50-60Hz
Material (Inner Pan)	Ceramic
Item Weight	3.19 kg (approx. 3195 Grams)
Special Features	Variable Temperature Control (Low, High, Warm)

Warranty and Support

Your Tomado TSC3501B Slow Cooker comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare

parts, or service inquiries, please contact your retailer or visit the official Tomado website for customer service information.

© 2025 Tomado. All rights reserved.