

ALLIMITY RC933-FUB1

ALLIMITY RC933 FUB1 Voice Remote Control User Manual

For TCL QD-Mini LED TVs

1. INTRODUCTION

This manual provides instructions for the ALLIMITY RC933 FUB1 Voice Remote Control. This remote is designed to be fully functional with various TCL QD-Mini LED TV models, offering an ergonomic design and stable remote control performance.

Compatible TCL TV Models:

- 115X955 MAX
- 85Q10BX1
- 55C855, 65C855, 65C89B, 75C855, 75C89B, 85C855, 85C89B
- 85X955, 98C89B, 98X955
- Q10B, X955





Image 1.1: Front view of the ALLIMITY RC933 FUB1 Voice Remote Control. This image displays the full layout of the remote's buttons, including power, volume, channel, navigation, and dedicated app buttons.

2. SETUP AND PAIRING

The ALLIMITY RC933 FUB1 remote control is designed for ease of use, requiring no complex programming or installation. It connects to your compatible TCL TV via Bluetooth.

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.

3. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2.2. Initial Pairing (Bluetooth)

While the remote often connects automatically, if it does not, follow these steps to pair it with your TCL TV:

1. Ensure your TCL TV is powered on.
2. Point the remote control towards the TV.
3. Press and hold the **OK** button (center of the navigation pad) and the **Home** button (house icon) simultaneously for a few seconds.
4. A pairing message should appear on your TV screen. Follow any on-screen prompts to complete the pairing process.

Once paired, the remote control will function wirelessly via Bluetooth.

3. OPERATING THE REMOTE CONTROL

The remote control features a comprehensive set of buttons for navigating your TCL TV and accessing various functions.

3.1. Button Functions Overview



Image 3.1: Side and front view of the remote control, illustrating its ergonomic design and dimensions (approximately 17 cm / 6.69 in length and 4 cm / 1.57 in width).

- **Power Button** (circle with vertical line): Turns the TV on or off.

- **Mute Button** (speaker with cross-out): Mutes or unmutes the TV audio.
- **Volume Up/Down** (-/+): Adjusts the TV volume.
- **Number Pad / Input Button** (123 icon): Accesses the number pad for direct channel input or switches input sources.
- **Voice Control Button** (microphone icon): Activates the voice assistant for commands and search.
- **Back Button** (curved arrow): Returns to the previous screen or menu.
- **Home Button** (house icon): Navigates to the TV's home screen.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and select items.
- **Channel Up/Down** (CH +/-): Changes TV channels.
- **Menu Button** (three horizontal lines): Opens the main menu or context menu.
- **Settings Button** (gear icon): Accesses TV settings.
- **Info Button** (letter 'i' in a circle): Displays information about the current program or content.
- **TV Button** (TV screen icon): Switches to live TV.
- **List Button**: Accesses channel lists or other content lists.
- **Dedicated App Buttons** (NETFLIX, Prime Video, YouTube, T-CHANNEL): Provides quick access to these streaming services.

3.2. Voice Control Functionality





Image 3.2: The remote control with a magnified microphone icon, indicating the voice control feature. This button activates the TV's voice assistant for hands-free commands.

The ALLIMITY RC933 FUB1 remote includes a voice control feature for convenient operation. To use voice control:

1. Press the **Voice Control Button** (microphone icon).
2. Speak clearly into the microphone located on the remote control.
3. You can issue commands such as "Open Netflix," "Search for action movies," "Change channel to 5," or "What's the weather?"
4. The TV will process your command and respond accordingly.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

4.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2. Battery Replacement

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA).

- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote not responding:**

- Check if the batteries are inserted correctly and have sufficient charge. Replace them if necessary.
- Ensure there are no obstructions between the remote and the TV's infrared receiver (if using IR mode).
- Re-pair the remote control with the TV (refer to Section 2.2).

- **Voice control not working:**

- Ensure the remote is properly paired via Bluetooth.
- Check your TV's settings to confirm voice control is enabled.
- Speak clearly and close to the microphone.

- **Buttons are sticky or unresponsive:**

- Clean the remote control as described in Section 4.1.

6. SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Name	RC933
Model Number	RC933-FUB1
Connectivity Technology	Infrared, Bluetooth (for voice control and pairing)
Special Feature	Ergonomic design, Voice Control
Compatible Devices	TCL QD-Mini LED TVs (115X955 MAX, 85Q10BX1, 55C855, 65C855, 65C89B, 75C855, 75C89B, 85C855, 85C89B, 85X955, 98C89B, 98X955, Q10B, X955)
Maximum Range	10 Meters
Number of Buttons	25
Item Weight	59 Grams
Country of Origin	China

7. WARRANTY AND SUPPORT

Information regarding specific warranty details or direct support contacts for the ALLIMITY RC933 FUB1 remote control is not available in the provided product data. Please refer to the seller or your purchase documentation for warranty information and customer support.