



Manuals.plus /

› AGLUCKY /

› AGLUCKY Nugget Ice Maker User Manual

## AGLUCKY Z5815SNH-BK-New

# AGLUCKY Nugget Ice Maker User Manual

MODEL: Z5815SNH-BK-NEW

## INTRODUCTION

---

Thank you for choosing the AGLUCKY Nugget Ice Maker. This portable countertop appliance is designed to provide you with soft, chewable nugget ice quickly and efficiently. With its user-friendly features like one-click operation and self-cleaning function, enjoying fresh ice has never been easier. Please read this manual thoroughly before operation to ensure proper use, maintenance, and longevity of your ice maker.

## SAFETY INSTRUCTIONS

---

To prevent injury to yourself and others or damage to the appliance, please observe the following safety precautions:

- Always plug the ice maker into a grounded electrical outlet.
- Do not immerse the power cord, plug, or any part of the appliance in water or other liquids.
- Unplug the ice maker before cleaning or when not in use.
- Do not operate the appliance with a damaged cord or plug.
- Keep the ice maker away from heat sources and direct sunlight.
- Ensure proper ventilation around the unit. Maintain at least 6 inches of clearance from walls and other objects.
- Do not place hands or objects into the ice maker while it is operating.
- This appliance is for household use only.
- Supervise children when they are near the appliance.

## WHAT'S IN THE BOX

---

Upon unpacking your AGLUCKY Nugget Ice Maker, please ensure all components are present:

- AGLUCKY Nugget Ice Maker Unit
- Ice Scoop
- Ice Basket
- User Manual (this document)



Image: The AGLUCKY Nugget Ice Maker shown with its included ice scoop and ice basket, ready for use.

## SETUP

---

1. **Unpack:** Carefully remove the ice maker from its packaging. Remove all packing materials, tapes, and labels.
2. **Placement:** Place the ice maker on a flat, stable, and level surface, away from direct sunlight and heat sources. Ensure there is at least 6 inches of space around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance and Cleaning" section for detailed instructions.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Add Water:** Open the top cover and fill the water reservoir with clean, potable water up to the "MAX" fill line.

Do not overfill. The water tank capacity is 1.1 liters.

## OPERATING INSTRUCTIONS

Your AGLUCKY Nugget Ice Maker is designed for simple, one-click operation.



Image: The intelligent control panel of the AGLUCKY ice maker, highlighting the "Ice Full", "Add Water", and "Ice/Clean" indicators and button for easy operation.

1. **Power On:** After adding water, press the "Ice/Clean" button once to turn on the ice maker. The machine will begin the ice-making cycle.
2. **Ice Production:** The ice maker will continuously produce soft, chewable nugget ice. The maximum ice capacity is 35 lbs per 24 hours.
3. **Monitoring Ice:** The large viewing window allows you to monitor the ice-making process directly.
4. **Indicators:**
  - **"ICE FULL" Indicator:** When the ice basket is full, the "ICE FULL" indicator light will illuminate, and the machine will automatically stop ice production. Remove ice from the basket to resume operation.

- **"ADD WATER" Indicator:** When the water level in the reservoir is low, the "ADD WATER" indicator light will illuminate, and the machine will stop. Add more water to the reservoir to continue ice making.

5. **Power Off:** To turn off the ice maker, press the "Ice/Clean" button again.

## Soft & Chewable Nugget Ice



Better for mixed drinks



Smaller & crunchy ice cubes



Retains the flavor



Quick cooling



Image: A refreshing drink filled with soft, chewable nugget ice, demonstrating the ideal texture for beverages. The unique soft pellet ice is designed to cool drinks quickly while retaining their flavor, providing a satisfyingly crunchy and chewable experience.

### MAINTENANCE AND CLEANING

---

Regular cleaning ensures fresh ice and extends the lifespan of your ice maker.

# Convenient Self-Cleaning Function



Press "Ice/Clean" for **5 S**



Self-cleaning for **15 Mins**



Ensure Fresh Ice



Image: A visual representation of the convenient self-cleaning function, showing water circulating within the unit.

## Self-Cleaning Function:

1. Ensure the water reservoir is filled with clean water.
2. Press and hold the "Ice/Clean" button for 5 seconds. The self-cleaning cycle will begin.
3. The self-cleaning process takes approximately 15 minutes. During this time, water will circulate through the internal components to clean them.
4. Once the cycle is complete, drain the water from the reservoir.

## Manual Cleaning:

- Unplug the ice maker from the power outlet.
- Remove the ice basket.
- Drain any remaining water from the reservoir.
- Wipe the interior and exterior surfaces with a soft cloth dampened with mild detergent and water.
- For thorough cleaning, the top cover can be easily lifted to access all nooks and crannies.

- Rinse thoroughly with clean water and dry completely before reassembling and using.
- Clean the ice scoop and ice basket with warm, soapy water and rinse well.

## TROUBLESHOOTING

If you encounter issues with your ice maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice maker not turning on	Not plugged in; Power outage; Faulty outlet.	Ensure the power cord is securely plugged into a working, grounded outlet. Check your circuit breaker.
"ADD WATER" indicator is on	Water reservoir is empty or low.	Add clean, potable water to the reservoir up to the MAX fill line.
"ICE FULL" indicator is on	Ice basket is full.	Remove ice from the basket. The machine will resume operation automatically.
No ice production or very little ice	Insufficient water; Ambient temperature too high; Air vents blocked.	Ensure sufficient water. Place the unit in a cooler environment. Ensure proper ventilation around the unit.
Ice tastes strange or smells bad	Unit needs cleaning; Stale water.	Perform a self-cleaning cycle and/or manual cleaning. Use fresh, clean water.
Unit is too loud	Normal operating noise; Unit not level; Fan obstruction.	Some noise during operation is normal. Ensure the unit is on a level surface. Check for any obstructions around the fan vents.

## SPECIFICATIONS

Feature	Specification
Model Name	Z5815SNH-BK-New
Brand	AGLUCKY
Product Dimensions (D x W x H)	11.22"D x 8.66"W x 12.6"H
Ice Production Capacity	Up to 35 lbs per 24 hours
Water Tank Capacity	1.1 Liters
Refrigerant	R600a
ASIN	B0DRD33RVP

# Compact & Lightweight



Image: The compact dimensions of the AGLUCKY ice maker (11.22"D x 8.66"W x 12.6"H) are shown, illustrating its portable and space-saving design.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official AGLUCKY website. You can also contact AGLUCKY customer service directly for assistance with product inquiries, troubleshooting, or parts replacement.

**Manufacturer:** AGLUCKY