

VEGA VHTH-37

Vega OG 15 in 1 All Rounder Grooming Set User Manual

Model: VHTH-37

INTRODUCTION

Welcome to the user manual for your new Vega OG 15 in 1 All Rounder Grooming Set. This comprehensive guide provides detailed instructions on how to set up, operate, maintain, and troubleshoot your grooming device. Please read this manual carefully before first use to ensure safe and optimal performance of your product. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, injury, or damage to the appliance, always follow these basic safety precautions.

- Keep out of reach of children.
- Do not immerse the appliance in water.
- Ensure the appliance is fully charged before first use.
- Use only the provided Type-C USB cable for charging.
- Do not use the appliance if it is damaged or malfunctioning.
- Avoid inserting the nose trimmer more than 6mm into your nostril or ear.
- Always turn off the appliance before cleaning or attaching/detaching accessories.

PRODUCT OVERVIEW

Components and Features

The Vega OG 15 in 1 All Rounder Grooming Set is designed for versatile grooming needs, featuring a robust set of attachments and advanced functionalities.

- **Skin-Friendly & Washable Blades:** Ceramic blade and unique curved stainless-steel blade for comfortable trimming. All blades are washable for hygiene.
- **Ideal for All Hair Lengths:** Dual-sided body shaver blades effectively trim hair of all lengths and textures.

- **7 Blade Attachments and 8 Combs:** A wide range of attachments for various grooming needs, including facial hair, nose, body, and intimate parts.
- **Multiple Length Settings:** Rotary knob for 40 length settings (0.5mm-20mm) and a dial comb for 6 length settings.
- **180 Mins Runtime & Type-C Charging:** Offers 180 minutes of cordless operation with 180 minutes of charging time via Type-C USB.
- **Travel Lock:** Prevents accidental activation during travel.



Figure 1: The Vega OG 15 in 1 All Rounder Grooming Set, showcasing the main trimmer unit and its comprehensive array of 7 blade attachments and 8 comb guides for various grooming applications.

Face & Body Attachments & Application



Face trimming & styling

Precision Trimmer for moustache



Face Shaver



Nose & Ear Hair Trimmer



Trimmer Comb 01-10 mm



Trimmer Comb 11-20 mm



Body grooming

Body Grommer for body hair



Ball Trimmer



U Blade for regular usage



T Blade for edges



Ball Trimmer Comb



Figure 2: Detailed diagram illustrating the various face and body grooming attachments, including precision trimmer for moustache, face shaver, nose & ear hair trimmer, body grommer, ball trimmer, U blade, T blade, and their corresponding comb guides.

Blade Attachments & Application



Beard Trimmer



Mustache Trimmer



Ear Trimmer



Ball Trimmer



Body Trimmer



Nose Trimmer

Figure 3: Visual examples demonstrating the application of different blade attachments for beard trimming, mustache trimming, ear trimming, ball trimming, body trimming, and nose trimming.

40 Length Settings

Rotary knob for precise length control for customized grooming



Figure 4: Close-up view of the rotary knob, highlighting the 40 precise length settings available for customized grooming.

SETUP

Initial Charging

Before using your Vega OG Grooming Set for the first time, ensure it is fully charged. Connect the provided Type-C USB cable to the trimmer and a suitable power source. The charging time is approximately 180 minutes for a full charge, providing up to 180 minutes of runtime.



Long-Lasting Battery



Figure 5: Illustration showing the 180 minutes runtime and 180 minutes charging time of the long-lasting Li-ion battery.

Attaching Blades and Combs

To attach a blade or comb, align it with the trimmer head and gently press until it clicks into place. To remove, gently pull the attachment away from the trimmer head. Ensure the trimmer is switched off before changing attachments.

OPERATING INSTRUCTIONS

General Operation

To turn the trimmer ON or OFF, press the power button located on the front of the device. The trimmer also features a travel lock to prevent accidental activation. Consult the device for specific travel lock activation/deactivation methods.

Trimming Beard/Moustache

1. Ensure the trimmer is fully charged.
2. Rotate the knob to set the desired comb height (0.5mm-20mm).
3. Press the switch ON.

4. Place the flat top of the trimmer comb against the skin and move it against the direction of hair growth.
5. For defined beard/moustache lines, hold the personal groomer with the precision trimmer blade facing you. Start at the edge of the beard or moustache line and gently lower the trimmer blade onto your skin.

Using the Body Shaver Blade

1. Attach the body shaver head onto the trimmer.
2. Shave comfortably below the neck. The unique skin protector system guards sensitive body areas, allowing for a closeness of 0.5mm.
3. **Tip:** Use one hand to stretch the skin while the other operates the shaver. This facilitates easier hair trimming.

Using Nose/Ear Hair Trimmer

1. Attach the nose trimmer attachment.
2. Gently insert the groomer into the nostril or ear.
3. **Tip:** Avoid inserting the unit more than 6mm into your nostril or ear. Gently move the groomer around the nostril or ear to trim hair.

Using the Face Shaver Blade

1. Attach the face shaver attachment onto the trimmer.
2. Shave comfortably on the face. The skin protector system guards sensitive facial areas, allowing for a closeness of 0.5mm.

Using the Ball Trimmer Blade

1. Attach the ball trimmer attachment onto the trimmer.
2. This trimmer features ceramic & stainless-steel blades with 1 adjustable comb (1mm, 2mm, 3mm, 4mm, 5mm, 6mm) for trimming intimate parts.

Trimming Tips

- If you are trimming for the first time, use the comb at the maximum trimming length setting to prevent inaccurate trimming.
- Since hair does not grow in the same direction, try different trimming positions (upwards, downwards, or across) for optimum results.
- Be very careful when trimming without a comb.
- Use the trimmer without a comb for a fine trim look.
- Use the 1mm-10mm comb for a 3-day stubble look.
- Use the 11mm-20mm comb for a medium/long beard.

MAINTENANCE

Cleaning the Blades

All blades of the Vega OG Grooming Set are washable. After each use, detach the blade head and rinse

it under running water to remove hair and debris. Ensure the trimmer unit itself does not get wet unless specified as waterproof. Allow the blades to air dry completely before reattaching or storing.

Oiling Blades

To maintain optimal performance and extend blade life, it is recommended to periodically apply a small drop of lubricating oil (not included, typically light machine oil) to the blades after cleaning and drying. Turn the trimmer on for a few seconds to distribute the oil evenly.



Figure 6: Illustration highlighting washable blades and the importance of oiling blades to maintain blade life.

Storage

Store the grooming set and all its attachments in a cool, dry place, away from direct sunlight and moisture. Keep all components together to prevent loss.

TROUBLESHOOTING

If you encounter any issues with your Vega OG Grooming Set, please refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted. Travel lock is activated.	Charge the trimmer fully. Deactivate the travel lock.
Trimmer pulls hair or cuts unevenly.	Blades are dull or dirty. Attachment is not properly secured. Hair is too long.	Clean and oil the blades. Ensure the attachment is securely clicked into place. Trim longer hair with a higher comb setting first.
Charging indicator light is not working.	Charging cable or adapter issue.	Ensure the Type-C USB cable is properly connected to both the trimmer and the power source. Try a different compatible adapter.
Excessive noise during operation.	Blades require lubrication. Debris caught in the blade mechanism.	Clean and oil the blades. Remove any trapped hair or debris.

SPECIFICATIONS

Feature	Detail
Model Number	VHTH-37
Power Source	Battery Powered (Li-ion)
Runtime	180 minutes
Charging Time	180 minutes
Blade Material	Ceramic and Stainless Steel
Length Settings	40 (Rotary Knob) + 6 (Dial Comb)
Dimensions (L x W x H)	16.6 x 4.2 x 4.2 cm
Item Weight	179 g
Country of Origin	China
Special Features	Detachable, Self-Cleaning, Travel Size, Charge Indicator Light, Multigroomer

WARRANTY AND SUPPORT

Your Vega OG 15 in 1 All Rounder Grooming Set comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt as proof of warranty. For any product-related queries, technical support, or warranty claims, please contact Vega Customer Care:

Customer Care: +91 08069496949

Importer: IMPORTED BY VEGA INDUSTRIES PRIVATE LIMITED, PLOT NO. 31, SECTOR-155, NOIDA-201310, U.P. (INDIA)

For more information, you may also visit the official VEGA store online.

© 2025 VEGA. All rights reserved.