

## This Hill TE19-00002OR-000

# This Hill Cordless Pressure Washer TE19-00002OR-000-L Instruction Manual

Model: TE19-00002OR-000 | Brand: This Hill

## 1. SAFETY INSTRUCTIONS

---

Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

### 1.1 General Safety

- Always wear appropriate personal protective equipment, including eye protection, gloves, and hearing protection.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### 1.2 Electrical Safety

- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Use only the charger specified by the manufacturer for recharging. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

### 1.3 Product Specific Safety

- Never point the spray gun at people, animals, or electrical equipment. High-pressure spray can cause serious injury.
- Ensure all connections are secure before operation to prevent leaks and loss of pressure.
- Do not use the pressure washer with water temperatures above 104°F (40°C).
- Always disconnect the battery pack before performing any adjustments, changing accessories, or storing the pressure washer.

## 2. PRODUCT OVERVIEW

---

The This Hill Cordless Pressure Washer is designed for portable and efficient cleaning tasks. It features a powerful brushless motor, a long-lasting battery, and a versatile nozzle system.

### 2.1 Key Features

- **Powerful Brushless Motor:** Delivers up to 1060 PSI with a 2.8 GPM water flow rate for effective cleaning.
- **Long-Lasting 5.0Ah Battery:** Provides over 40 minutes of continuous cleaning on a single charge.
- **Smart LCD Display:** Shows real-time battery life and allows adjustment between 4 cleaning modes.
- **Versatile 6-in-1 Nozzle:** Offers 0°, 15°, 25°, 40°, fan, and shower modes for various cleaning needs. Includes a foam cannon for detergent application.
- **Flexible Water Source Compatibility:** Can draw water from buckets, pools, rivers, or garden faucets using its 19.7ft hose with a built-in filter basket.

### 2.2 What's in the Box

The package includes the following components:

# WHAT'S IN THE BOX?



Storage Case



19.7FT Extended Extra-strong Hose



Lithium Battery



Fast Charger Adapter & Cable



Foam Pot



Water Pipe Clamp



Faucet Connection



Stop Valve



Optimized Water Filter

Image: All components included in the This Hill Cordless Pressure Washer package, such as the main unit, battery, charger, hose, nozzles, and foam pot.

- Cordless Pressure Washer Unit
- 5.0Ah Lithium Battery
- Fast Charger Adapter & Cable
- 19.7FT Extended Extra-strong Hose
- 6-in-1 Multifunctional Nozzle
- Foam Pot
- Water Pipe Clamp
- Faucet Connection
- Stop Valve
- Optimized Water Filter
- Storage Case

### 3. SETUP

Follow these steps to assemble and prepare your pressure washer for use.

#### 3.1 Connecting the Water Source



Image: The pressure washer can draw water from a tap, bucket, or swimming pool. The image shows the hose connected to a tap, a bucket, and a foam pot.

1. **Attach the Water Hose:** Connect one end of the 19.7ft hose to the quick connector on the pressure washer unit. Ensure it is firmly inserted and the cap is tightened to prevent detachment.
2. **Select Water Source:**
  - For a water tap: Use the included Faucet Connector to attach the hose to a standard garden faucet.
  - For buckets, pools, or rivers: Attach the optimized water filter to the other end of the hose and submerge it in the water source.
3. **Open Water Flow:** Turn on the water shut-off switch on the quick connector. The vertical position is open, horizontal is closed.

Your browser does not support the video tag.

Video: This official seller video demonstrates the step-by-step installation process for the This Hill Cordless Pressure Washer, including connecting the water hose and attachments.

### **3.2 Installing the Battery**

1. Ensure the battery is fully charged using the provided Fast Charger Adapter & Cable.
2. Slide the 5.0Ah Lithium Battery into the battery slot at the base of the pressure washer handle until it clicks securely into place.

### **3.3 Attaching the Nozzle**

1. Align the protrusion on the 6-in-1 multifunctional nozzle with the groove in the water gun's opening.
2. Forcefully insert the nozzle into the water gun.
3. Rotate the nozzle until the protrusion locks into the water gun's opening, securing it in place.
4. If using the extension rod, attach it between the water gun and the nozzle using the same alignment and rotation method.

## **4. OPERATING INSTRUCTIONS**

---

Learn how to effectively use your cordless pressure washer for various cleaning tasks.

### **4.1 Powering On and Adjusting Speed**

## POWER DISPLAY & 4 POWER LEVEL ADJUSTABLE



Image: The intuitive LCD screen on the pressure washer handle shows the current battery level and selected power mode, indicated by numbers 0-3.

1. Press the power button on the LCD screen to turn on the unit. The screen will display the current battery life and default to speed setting 1.
2. Press the power button repeatedly to cycle through the 4 cleaning modes (speed settings 1, 2, 3, and -1). Speed setting 3 is the strongest, while -1 is the weakest.
3. To power off, press and hold the power button until the screen turns off.

### 4.2 Using the 6-in-1 Nozzle

# 6 IN 1 MULTIFUNCTIONAL NOZZLE



Image: The 6-in-1 nozzle features adjustable settings for various spray patterns, including 0°, 15°, 25°, 40°, water column, and showering mode.

1. Rotate the nozzle head to select the desired spray pattern: 0° (direct jet), 15° (narrow fan), 25° (medium fan), 40° (wide fan), fan mode, or shower mode.
2. Pull the trigger on the pressure washer handle to begin spraying. Release the trigger to stop.

## 4.3 Using the Foam Pot

1. Fill the foam pot with appropriate detergent or car wash soap.
2. Remove the 6-in-1 nozzle and attach the foam pot to the pressure washer unit.
3. Pull the trigger to apply foam to the surface.
4. After applying foam, remove the foam pot and reattach the 6-in-1 nozzle to rinse the surface.

Your browser does not support the video tag.

Video: This official seller video provides a general overview of the This Hill Cordless Pressure Washer in action, demonstrating its portability and various cleaning applications.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your pressure washer.

### 5.1 Cleaning the Unit

- After each use, disconnect the battery and water supply.
- Rinse the hose, nozzles, and foam pot with clean water to remove any detergent residue or debris.
- Wipe down the main unit with a damp cloth. Do not immerse the unit in water.

### 5.2 Water Filter Maintenance

- Regularly inspect the optimized water filter for debris.
- Clean the filter by rinsing it under running water. Replace if damaged.

### 5.3 Battery Care and Storage

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery to approximately 50% capacity.
- Do not store the battery connected to the pressure washer unit.

### 5.4 Storage of the Pressure Washer

- Drain all water from the unit, hose, and accessories before storing to prevent freezing damage.
- Store the pressure washer and its accessories in the provided storage case in a dry, protected area.

## 6. TROUBLESHOOTING

---

If you encounter issues with your pressure washer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	Battery not charged or improperly installed.	Ensure battery is fully charged and correctly inserted.
Low water pressure	Water filter clogged; insufficient water supply; air in the system.	Clean water filter; ensure adequate water source; prime the pump by running water through the unit without the nozzle until a steady stream emerges.
Water leaks from connections	Loose connections; worn O-rings.	Tighten all connections; inspect and replace O-rings if necessary.
Motor runs but no water sprays	Nozzle clogged; water supply off; air in the system.	Clear nozzle obstruction; ensure water supply is on; prime the pump.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the This Hill Cordless Pressure Washer.

- **Brand:** This Hill
- **Model Number:** TE19-00002OR-000
- **Power Source:** Battery Powered
- **Maximum Pressure:** 1060 PSI (Pound per Square Inch)
- **Maximum Flow Rate:** 2.8 GPM (Gallons Per Minute)
- **Battery Capacity:** 5.0Ah (5000mAh) Lithium 21 Volt
- **Hose Length:** 19.7 Feet
- **Item Weight:** 5.05 Kilograms
- **Product Dimensions (L x W x H):** 18.8" x 14.5" x 17.7"
- **Motor Type:** Brushless
- **Nozzle Type:** 6-in-1 Multifunctional (0°, 15°, 25°, 40°, fan, shower)

## 8. WARRANTY AND SUPPORT

---

For warranty information, technical support, or to purchase replacement parts, please contact This Hill customer service through the retailer where the product was purchased or visit the official This Hill website. Keep your purchase receipt as proof of purchase.