

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [KARACA](#) /

> [KARACA Fancy Ceramic Cookware Set \(Model 1000156175001\) - User Manual](#)

KARACA 1000156175001

KARACA Fancy Ceramic Cookware Set (Model 1000156175001) - User Manual

Your guide to using and maintaining your KARACA Fancy Cookware Set.

1. PRODUCT OVERVIEW

The KARACA Fancy Ceramic Cookware Set is designed for versatile and healthy cooking. This 7-piece set features a durable Swiss Crystal Ceramic non-stick coating, suitable for various stovetops including induction, and is dishwasher safe for easy cleanup.



Image 1.1: Overview of the KARACA Fancy Ceramic Cookware Set.

Set Components:

- 16cm (6.3") Saucepan with Lid
- 20cm (7.9") Stockpot with Lid
- 24cm (9.4") Stockpot with Lid
- 25cm (9.8") Frying Pan



Image 1.2: Detailed size chart for each piece in the cookware set, showing dimensions and capacities.

2. SETUP AND FIRST USE

Unboxing:

Carefully remove all items from the packaging. Inspect each piece for any damage. Retain packaging for future storage or transport if needed.

Your browser does not support the video tag.

Video 2.1: An unboxing demonstration of the KARACA Fancy Ceramic Cookware Set, showing the individual pieces and their packaging.

Initial Cleaning:

1. Wash all cookware pieces and lids with warm, soapy water using a soft sponge.
2. Rinse thoroughly and dry completely with a soft cloth.
3. Before first use, lightly condition the non-stick surface by rubbing a small amount of cooking oil over the interior

with a paper towel. Wipe off any excess.

3. OPERATING INSTRUCTIONS

Cooking with Non-Stick:

- The Swiss Crystal Ceramic coating provides excellent non-stick properties, allowing for cooking with minimal or no oil.
- Use low to medium heat settings for most cooking tasks. High heat can damage the non-stick coating over time and is generally not necessary due to efficient heat distribution.
- Always use wooden, silicone, or plastic utensils to protect the non-stick surface. Avoid metal utensils.
- The frying pan features a pour spout design for easy draining of liquids.



Image 3.1: Demonstrates cooking on the non-stick surface, highlighting the ability to cook with minimal oil.



POUR SPOUT DESIGN

This cookware set features integrated side spouts that make it easy to pour sauces, stews, and gravy.

Image 3.2: Close-up of the frying pan, showcasing its integrated pour spout for convenient liquid transfer.

Compatible Stovetops:

This cookware set is designed for efficient heat distribution across all common stovetop types:

- Induction
- Gas
- Electric
- Ceramic



Image 3.3: Illustrates the cookware set's compatibility with different heat sources, including induction, gas, electric, and ceramic hobs.

4. MAINTENANCE AND CARE

Cleaning:

- Allow cookware to cool completely before washing to prevent warping.
- The cookware set is dishwasher safe. For best results and to prolong the life of the non-stick coating, handwashing with warm, soapy water and a soft sponge is recommended.
- Avoid abrasive cleaners, steel wool, or scouring pads, as these can damage the non-stick surface.
- For stubborn food residue, soak the pan in warm, soapy water for a few minutes before cleaning.



Image 4.1: Shows the cookware set being placed into a dishwasher, demonstrating its dishwasher-safe feature.

Storage:

When stacking cookware, place a soft cloth or pan protector between each piece to prevent scratching the non-stick surface.

5. TROUBLESHOOTING

Food Sticking:

- **Issue:** Food begins to stick to the non-stick surface.
- **Solution:** Ensure the pan is properly preheated before adding food. While the coating is designed for minimal oil, a small amount of oil or butter can improve non-stick performance, especially for certain foods. Avoid using cooking sprays, which can leave a residue that causes sticking over time.

Uneven Heating:

- **Issue:** Food cooks unevenly in the pan.
- **Solution:** Ensure the cookware is centered on the heat source. For gas stoves, adjust the flame so it does not extend beyond the base of the pan. Allow sufficient time for the pan to heat evenly before adding ingredients.

Handles Becoming Loose:

- **Issue:** Handles feel loose or wobbly.
- **Solution:** Periodically check the screws that attach the handles. If accessible, tighten them gently with a screwdriver. Do not overtighten.

6. SPECIFICATIONS

Feature	Detail
Brand	KARACA
Model Number	1000156175001
Material	Ceramic (Swiss Crystal Coating)
Color	Black
Number of Pieces	7
Handle Material	Plastic
Dishwasher Safe	Yes
Oven Safe	No
Induction Compatible	Yes
Total Item Volume	11.4 Liters (combined)
Item Weight	5.53 Kilograms (12.17 pounds)
Package Dimensions	20.87 x 12.99 x 5.71 inches

7. WARRANTY AND SUPPORT

Warranty Information:

KARACA products are manufactured with high-quality standards. For specific warranty details regarding your Fancy

Ceramic Cookware Set, please refer to the warranty certificate included in your product packaging or visit the official KARACA website.

Customer Support:

If you have any questions, concerns, or require assistance with your KARACA Fancy Ceramic Cookware Set, please contact KARACA customer support through their official channels. You can find contact information on the KARACA website or within your product documentation.

For more information about KARACA products, visit the [KARACA Store on Amazon](#).

