



Manuals.plus /

› **Outsunny** /

› Outsunny 10' x 10' Gazebo Replacement Canopy Cover Instruction Manual

Outsunny 84C-542V00CW

Outsunny 10' x 10' Gazebo Replacement Canopy Cover Instruction Manual

Model: 84C-542V00CW

INTRODUCTION

This manual provides detailed instructions for the installation, care, and maintenance of your Outsunny 10' x 10' Gazebo Replacement Canopy Cover. This canopy is designed to provide a new top for compatible 10' x 10' (3 x 3 m) gazebo frames, specifically Outsunny SKUs 100110-076 and 01-0153. It features a durable 600D 370 g/m² Oxford cloth with a water-resistant PVC coating, offering UPF30+ protection and includes water drainage holes for rain.



Image: A 10' x 10' gazebo with the cream replacement canopy cover installed, providing shade over an outdoor seating area.

SAFETY INFORMATION

- Always ensure the gazebo frame is stable and securely anchored before installing the canopy.
- Do not use the canopy in extreme weather conditions, such as strong winds, heavy rain, or snow. Remove the canopy during such conditions to prevent damage to the canopy and frame.
- Keep the canopy away from open flames and heat sources.
- Ensure all fasteners are properly secured during installation to prevent the canopy from dislodging.

PARTS LIST

The Outsunny 10' x 10' Gazebo Replacement Canopy Cover package includes the following components:

- 1 x Large Two-Tier Gazebo Canopy Top (Main Cover)

- 1 x Small Two-Tier Gazebo Canopy Top (Upper Vent Cover)



Image: A cardboard box labeled "Outsunny" with "1x PACKAGE" indicating the single package containing the canopy.

SETUP AND ASSEMBLY

Before assembly, ensure your gazebo frame is clean and free of debris. It is recommended that two people perform the installation for ease and safety.

1. **Measure Your Gazebo Frame:** Before installing, verify that your gazebo frame dimensions match the canopy's specifications (10' x 10' or 300 x 300 cm). Refer to the dimensional image for guidance on measuring.

How to measure your gazebo?

1. Measure the length of the gazebo frame
2. Measure the width of the gazebo frame
3. Measure the length of the beveled edge of the large canopy

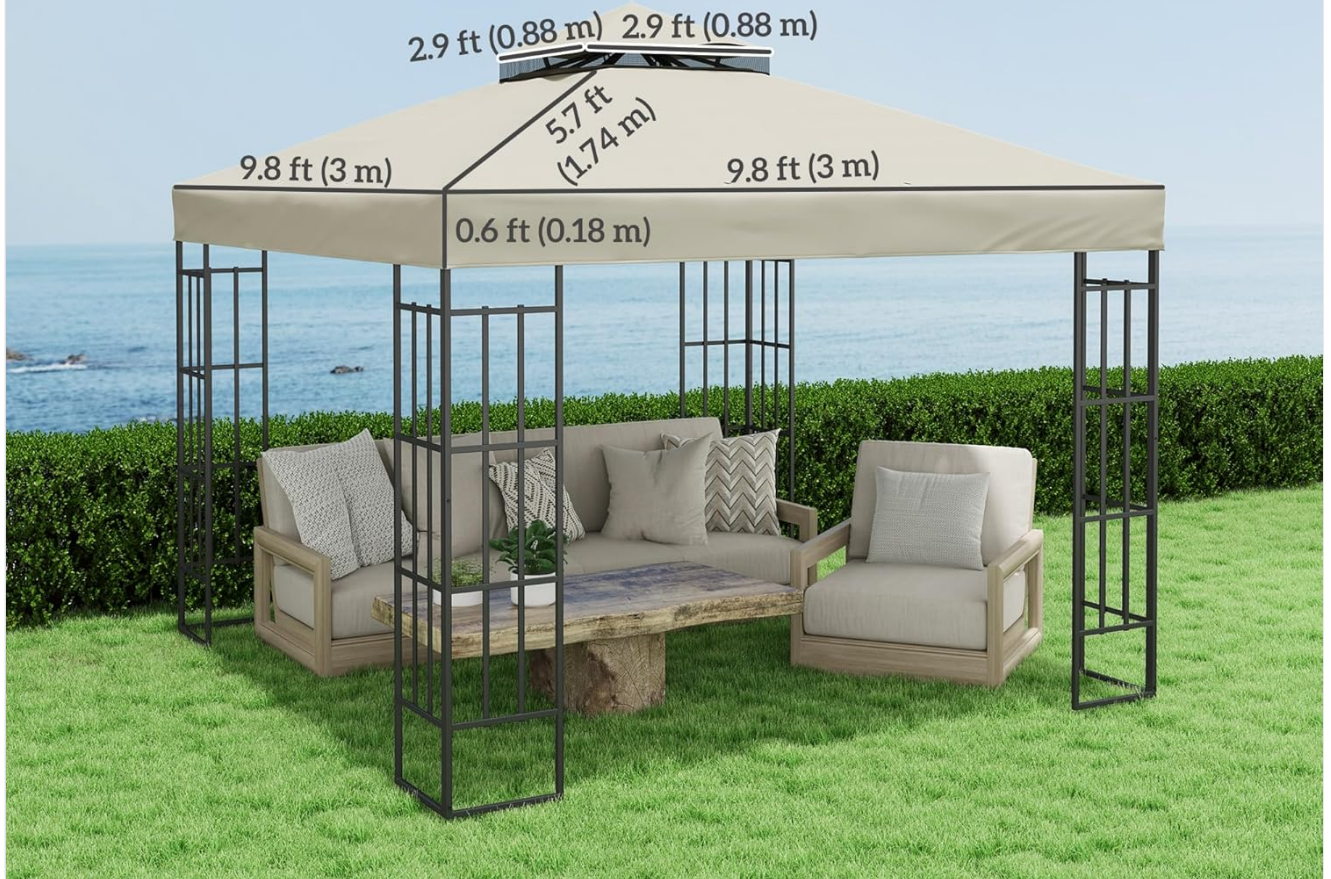
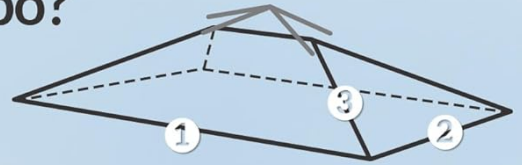


Image: A diagram illustrating how to measure the length and width of the gazebo frame, and the beveled edge of the large canopy, with dimensions provided in feet and meters.

2. **Install the Small Top:** Take the smaller canopy top. Secure it to the upper tier of your gazebo frame by inserting the frame poles into the corner pockets of the small canopy.



Image: A close-up view demonstrating the installation of the small canopy top, highlighting the corner pockets that slide over the frame.

- 3. Install the Large Top:** Carefully drape the large canopy top over the main frame of the gazebo. Align the corners and edges with the frame.
- 4. Secure the Large Top:** Once aligned, secure the large canopy to the frame using the integrated hook and loop fasteners. Ensure all fasteners are tightly secured around the frame poles to prevent movement.

The two-tier design allows for better airflow and reduces wind stress on the canopy, enhancing stability.



Image: An interior view of the gazebo canopy, showcasing the two-tier roof structure with mesh vents for ventilation and small holes for water drainage.

OPERATING (USAGE GUIDELINES)

This canopy is designed to provide shade and protection from light rain and sun. Its UPF30+ coating helps to block harmful UV rays, keeping the area underneath cooler.

600D OXFORD CLOTH WITH COATING

Provide UPF30+ protection and keep you cool in summer



Image: A group of people gathered under a gazebo with the cream canopy, illustrating the shade and protection provided by the 600D Oxford cloth with coating.

The integrated water drainage holes are designed to prevent water accumulation on the canopy surface during light rainfall, reducing stress on the fabric and frame.

MAINTENANCE

- **Cleaning:** Clean the canopy regularly with a soft brush or cloth and mild soap and water. Rinse thoroughly with clean water and allow it to air dry completely before storage or re-installation. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods or during off-season, remove the canopy from the frame. Fold it neatly and store it in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Inspection:** Periodically inspect the canopy for any signs of wear, tear, or damage. Address minor issues promptly to prevent further deterioration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy does not fit the frame.	Incorrect gazebo frame size or model.	Ensure your gazebo frame is 10' x 10' (3 x 3 m) and matches Outsunny SKUs 100110-076 or 01-0153. Measure your frame carefully as shown in the "Setup and Assembly" section.
Water pooling on the canopy.	Drainage holes are blocked or heavy rainfall exceeding drainage capacity.	Clear any debris from the drainage holes. If rainfall is very heavy, consider temporarily removing the canopy to prevent damage.
Canopy is loose or flapping in wind.	Hook and loop fasteners are not securely attached.	Re-secure all hook and loop fasteners firmly around the gazebo frame. Ensure the frame itself is stable and properly anchored.

SPECIFICATIONS

Model Number: 84C-542V00CW

Overall Dimensions: 118.1" L x 118.1" W (300 x 300 cm)

Material: 600D Oxford Cloth with PVC Coating (Polyester)

Weight: 4.99 kg (11 lbs)

UV Protection: UPF30+

Features: Two-tier roof, water drainage holes, hook and loop fasteners

Compatible Gazebo SKUs: Outsunny 100110-076, 01-0153