

Kumtel KMTL

Kumtel KMTL 2000W Fan Heater User Manual

MODEL: KMTL

1. Important Safety Instructions

Please read all instructions carefully before using this fan heater and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage rating of the heater matches your power supply. Do not overload electrical circuits. Avoid using extension cords unless absolutely necessary and ensure they are rated for the heater's power.
- **Placement:** Position the heater on a stable, level surface or securely wall-mount it. Maintain a minimum distance of 3 feet (0.9 meters) from combustible materials such as furniture, curtains, bedding, paper, clothes, and other flammable objects.
- **Ventilation:** Do not block air inlets or outlets. Ensure proper airflow around the heater to prevent overheating.
- **Moisture:** Do not use the heater in wet or damp locations, such as bathrooms or laundry areas, or near water sources. This heater is designed for indoor use only.
- **Children and Pets:** Keep the heater out of reach of children and pets. Do not leave the heater unattended when in use.
- **Overheat Protection:** This heater is equipped with an overheat protection system that will automatically shut off the unit if it becomes too hot. If this occurs, unplug the heater, allow it to cool down, and then check for any obstructions before restarting.
- **Maintenance:** Always unplug the heater before cleaning or performing any maintenance.
- **Damage:** Do not operate the heater with a damaged cord or plug, or if the heater has malfunctioned or been dropped. Contact qualified service personnel for repair.

2. Product Overview

The Kumtel KMTL 2000W Fan Heater is a versatile appliance designed to provide both heating and cooling airflow

for indoor spaces. It features multiple power settings, overheat protection, and a flame-retardant casing for enhanced safety. Its compact design allows for flexible placement, including wall mounting.



Figure 2.1: Front view of the Kumtel KMTL 2000W Fan Heater.

3. Setup

3.1 Unpacking

- Carefully remove the heater from its packaging.
- Inspect the heater for any signs of damage. If damaged, do not use and contact customer support.
- Retain the packaging for storage or future transport.

3.2 Placement Options

The Kumtel KMTL fan heater can be used as a freestanding unit or mounted on a wall.

Freestanding Placement:

- Place the heater on a firm, level, and stable surface.
- Ensure there is at least 3 feet (0.9 meters) of clear space around the front, sides, and top of the heater to allow for proper air circulation.
- Do not place the heater directly under a power outlet.

Wall Mounting:

For wall mounting, follow these steps:

1. Choose a suitable wall location, ensuring it is away from curtains, drapes, and other flammable materials. The wall must be capable of supporting the heater's weight.
2. Mark the desired mounting points on the wall using the provided template or by measuring the mounting holes on the back of the heater.
3. Drill pilot holes at the marked locations. Use appropriate wall anchors if drilling into drywall.
4. Secure the mounting bracket (if included) or screws into the wall, leaving a small gap for the heater to hook onto.
5. Carefully hang the heater onto the secured screws/bracket, ensuring it is stable and level.

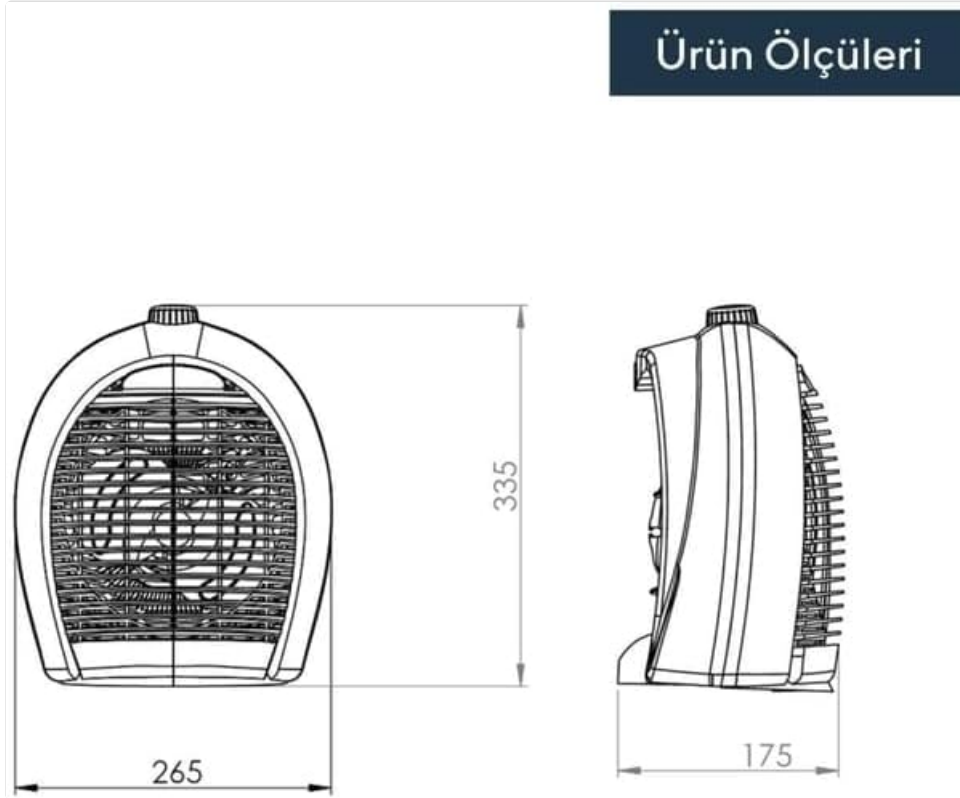


Figure 3.1: Dimensions of the Kumtel KMTL 2000W Fan Heater (Width: 265mm, Height: 335mm, Depth: 175mm).

4. Operating Instructions

4.1 Powering On/Off

- Plug the heater into a standard 120V AC electrical outlet.
- Turn the main power switch or knob to the 'ON' position.
- To turn off, rotate the control knob to the 'OFF' position and unplug the unit from the wall outlet.

4.2 Mode Selection

The heater features a multi-stage control knob to select different operating modes:

- **Fan Only (Cold Air):** Select this mode for circulating cool air without heating. This can be used for ventilation or to provide a cooling breeze during warmer periods.
- **Heat Setting 1 (Low Heat):** Provides a lower level of heat output, suitable for maintaining warmth or for smaller spaces.
- **Heat Setting 2 (Medium Heat):** Offers a moderate heat output for general warming.
- **Heat Setting 3 (High Heat):** Delivers the maximum 2000W heating power for rapid warming of larger spaces or colder environments.

Rotate the control knob to the desired setting. The indicator light (if present) will illuminate when the heater is operating.

4.3 Thermostat Control (if applicable)

If your model includes a thermostat, rotate the thermostat knob to your desired room temperature. The heater will cycle on and off to maintain the set temperature. For continuous heating, set the thermostat to its maximum position.

5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your heater.

5.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents, as these may damage the finish.
- Use a vacuum cleaner with a brush attachment to remove dust from the air inlets and outlets. Do not insert any objects into the openings.
- Ensure the heater is completely dry before plugging it back in and operating.

5.2 Storage

- When not in use, store the heater in a cool, dry place.
- It is recommended to store the heater in its original packaging to protect it from dust and damage.

6. Troubleshooting

If you experience issues with your Kumtel KMTL fan heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Power switch off; Overheat protection activated.	Check if plugged in securely; Ensure power switch is ON; Unplug, allow to cool, check for obstructions, then restart.
No heat output.	Fan-only mode selected; Thermostat set too low.	Select a heat setting (Heat 1, 2, or 3); Adjust thermostat to a higher setting.
Heater shuts off unexpectedly.	Overheat protection activated; Tip-over switch activated (if applicable).	Unplug, allow to cool, check for obstructions; Ensure heater is on a stable, level surface.
Reduced airflow.	Dust or debris blocking air inlets/outlets.	Unplug and clean air inlets/outlets as per maintenance instructions.

If the problem persists after attempting these solutions, please contact customer support.

7. Specifications

Technical specifications for the Kumtel KMTL 2000W Fan Heater:

Feature	Detail
Model Number	KMTL
Power Output	2000W
Voltage	120 Volts
Amperage	8.3 Amps
Number of Heat Stages	3 (Low, Medium, High) + Fan Only
Special Features	Flame Retardant, Hot/Cold Blowing, Overheating Protection, Wall Mountable
Color	Grey
Form Factor	Compact
Indoor/Outdoor Usage	Indoor
Product Dimensions (D x W x H)	8" x 10" x 12" (20.3cm x 25.4cm x 30.5cm)
Item Weight	3.5 pounds (1.59 kg)
Heating Coverage	Up to 200 Square Feet
Min Temperature Setting	18 Degrees Celsius
Max Temperature Setting	95 Degrees Celsius

8. Warranty and Support

This Kumtel KMTL Fan Heater comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance beyond what is provided in this manual, or warranty claims, please contact the retailer or the manufacturer's customer service department. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question