

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Furby](#) /

› [Furby Fur MINIS Electronic Pet Instruction Manual \(Model G0457\)](#)

Furby G0457

Furby Fur MINIS Electronic Pet Instruction Manual

Model: G0457

Brand: Furby

ABOUT YOUR FURBY FUR MINIS

Welcome to the world of Furby Fur MINIS! These adorably fuzzy, talkative, and curious electronic pets are designed to bring joy and imaginative play. Each Furby Fur MINIS is packed with personality and interactive features, encouraging engagement and bringing smiles to users.

The Furby Fur MINIS are part of a new generation of interactive companions, offering a unique blend of vibrant design and playful sounds. They are perfect for collecting and interacting with, providing endless entertainment.

WHAT'S IN THE BOX

- 1 x Electronic Pet (Furby Fur MINIS)

SETUP

1. **Battery Installation:** Your Furby Fur MINIS requires AAA batteries. Locate the battery compartment on the underside of the toy. Using a small screwdriver (not included), open the compartment, insert the required AAA batteries, ensuring correct polarity (+/-), and securely close the compartment.
2. **Activation:** To activate your Furby Fur MINIS, press the button located on its head. The ears will pop open, and it will begin to make sounds.

OPERATING INSTRUCTIONS

Your Furby Fur MINIS is designed for interactive play. Here's how to engage with your new companion:

- **Press the Head Button:** Pressing the button on its head will cause its ears to pop open and activate

various sounds, songs, and phrases. There are over 45 unique sounds, songs, and noises to discover.

- **Press the Beak:** Gently press the beak to hear additional sounds and reactions.
- **Press the Heart Gem:** Press the heart-shaped gem on its forehead for more musical interactions.
- **Close the Ears:** To put your Furby Fur MINIS to sleep or to store it, gently push its ears back down. It may make a sleepy sound.
- **Interacting with Multiple Furby Fur MINIS:** When two or more Furby Fur MINIS are near each other and activated, they can interact and sing together, creating a unique chorus.
- **Portability:** Each Furby Fur MINIS comes with a convenient keychain clip, allowing you to attach it to bags, backpacks, or belt loops for on-the-go fun.

PRODUCT IMAGES



A vibrant collection of Furby Fur MINIS, showcasing their diverse colors and designs, arranged on a clean white surface.



Two Furby Fur MINIS held between fingers, highlighting their compact size of approximately 1 inch (2.5 cm).



Two distinct Furby Fur MINIS: one featuring a pink donut-inspired design with yellow hair, and another with a multi-colored pattern and pink hair.



Two Furby Fur MINIS, one in purple hues and another with a rainbow striped body, both displaying their characteristic long, colorful tails.



Two unique Furby Fur MINIS: one with a green tie-dye pattern and the other creatively designed to resemble a hamburger.



Two themed Furby Fur MINIS: one resembling an ice cream cone and another with a chocolate sprinkle design, both featuring bright hair.



A grid showcasing a wide variety of Furby Fur MINIS, highlighting the extensive range of collectible characters and their unique appearances.

OFFICIAL PRODUCT VIDEOS

Your browser does not support the video tag.

Video Description: An official product video from Hasbro Toys, showcasing the interactive features and playful nature of the Furby Furblets, including their sounds and movements.

MAINTENANCE

- **Cleaning:** To clean your Furby Fur MINIS, gently wipe the surface with a slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents.
- **Battery Replacement:** When the sounds become faint or the toy stops responding, it's time to replace the batteries. Follow the battery installation steps in the Setup section.
- **Storage:** Store your Furby Fur MINIS in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

- **No Sound/Response:**
 - Check if the batteries are correctly installed and not depleted. Replace if necessary.
 - Ensure the ears are fully open by pressing the head button.
- **Intermittent Sounds:**
 - This may indicate low battery power. Replace the batteries.

SPECIFICATIONS

Feature	Detail
Product Dimensions	1.5 x 5.37 x 6.37 inches
Item Weight	0.352 ounces
Item Model Number	G0457
Manufacturer Recommended Age	5 years and up
Batteries	AAA batteries required
Language	English
Manufacturer	Hasbro

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts may occur. Not suitable for children under 3 years.

Always supervise young children during play to prevent accidental ingestion of small parts. Keep batteries out of reach of children. Do not mix old and new batteries, or different types of batteries.

WARRANTY AND SUPPORT

For product support, troubleshooting assistance, or warranty information, please contact Hasbro customer service directly. Refer to the product packaging for specific contact details or visit the official Hasbro website.

© 2026 Furby. All rights reserved.