



[Manuals.plus](#) /

› [AGPTEK](#) /

› AGPTEK A65 MP3 Player User Manual

AGPTEK A65

AGPTEK A65 MP3 Player User Manual

Model: A65

1. INTRODUCTION

Thank you for purchasing the AGPTEK A65 MP3 Player. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper functionality and to maximize your user experience.



Figure 1: AGPTEK A65 MP3 Player, showcasing its compact design and clip.

2. PRODUCT FEATURES

- **Clip Design & Pedometer:** The mini clip enables AGPTEK mp3 to be firmly sandwiched in the sports apparel; After turn to Pedometer Mode, AGPTEK MP3 Player record the data when running. Small and portable at 2.36 inch long and a weight of just 1.06 oz, means you won't even notice it's there! Ideal for sport.
- **Bluetooth 5.3 Technology:** AGPTEK MP3 player adopts upgraded Bluetooth 5.3 has better compatibility, stable signal and reduces the power consumption of the music player. You can pair the Bluetooth MP3 Player with your Bluetooth wireless headphones (Tips:Unable to connect to cellphone and car via Bluetooth,you could use Audio Line to connect)
- **64GB Large Memory & Up To 128GB Expansion:** 64GB large internal memory, store more lossless music. Can even be used as a U disk. If you are still afraid of not enough memory, you can also use a maximum 128GB TF card for expansion. Tip: The file size of a single transfer should not exceed 3GB to ensure the transfer speed and stability.

- **Hi-Fi Lossless Sound Quality:** With a professional digital noise reduction chip, AGPTEK Bluetooth MP3 player can reduce noises to give you the most original sound quality and ensure a high-quality audio experience. earphones supports the music format MP3, WMA, APE, FLAC, WAV, DRM, ACELP, Bluetooth Supports the music format MP3, WMA, WAVE, FLAC, APE, M4A, AAC.
- **Multi-function MP3 player:** AGPTEK Multifunctional MP3 player with music play, video play, voice record, FM radio, Pedometer Mode, photo Browsing, E-book(Support TXT Format Only) A-B repeat, alarm clock, calendar, file folders, built-in speaker, time screen-saver etc. It's a great gift for children, old people or your friends!



Figure 2: Overview of the multi-functional capabilities of the A65 MP3 Player.

3. PACKAGE CONTENTS

The AGPTEK A65 MP3 Player package includes:

- AGPTEK A65 MP3 Player (Blue, 64GB)
- Clip
- USB Cable
- User Manual (this document)
- Earphones

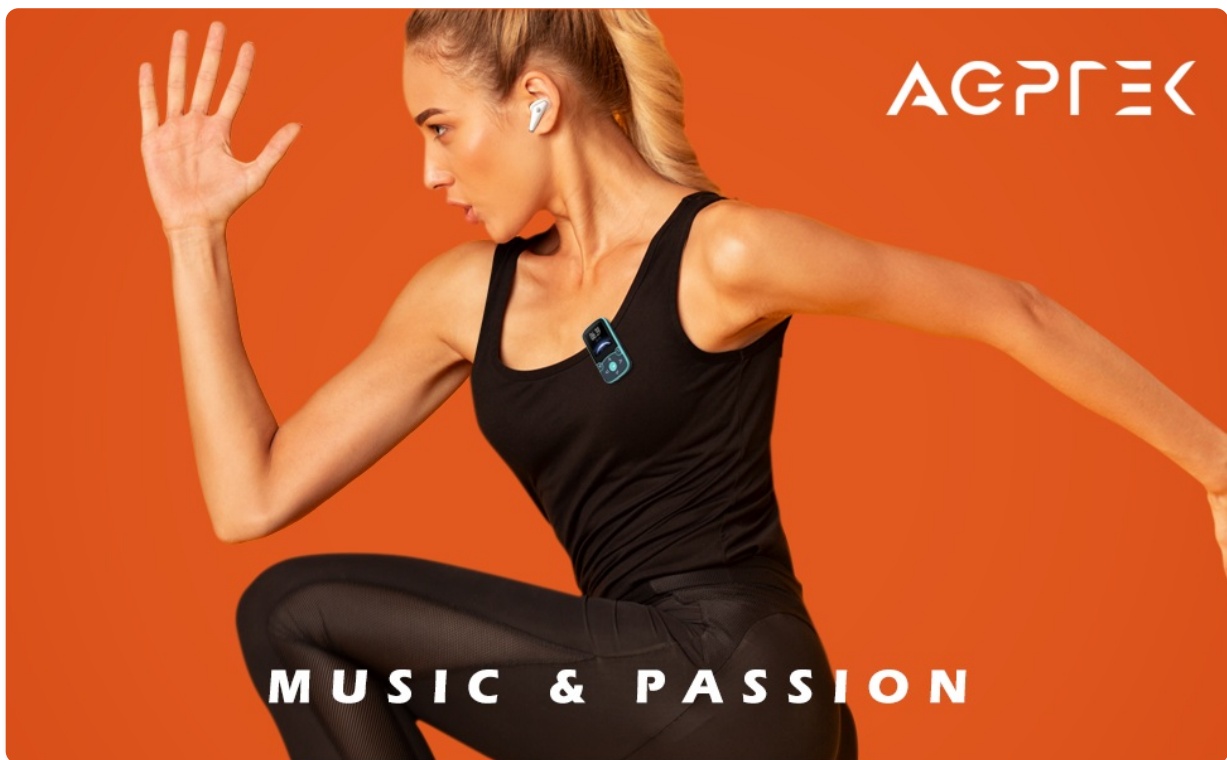 


Figure 3: Items included in the AGPTEK A65 MP3 Player retail box.

4. SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to the device or personal injury:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided or approved accessories.
- Dispose of the device and its battery responsibly according to local regulations.

5. SETUP

5.1 Charging the Device

Before first use, fully charge your AGPTEK A65 MP3 Player. Connect the included USB cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.



Figure 4: Charging the MP3 Player via USB connection.

5.2 Transferring Music Files

To transfer music files from your computer to the MP3 player:

1. Connect the MP3 player to your computer using the provided USB cable.
2. On the MP3 player screen, select "Charge & Transfer" when prompted.
3. Your computer should recognize the device as a removable disk.
4. Manually create a folder named "Music" (or similar) on the MP3 player's drive if one does not exist.
5. Copy your desired music files (MP3, WMA, APE, FLAC, WAV, DRM, ACELP, M4A, AAC) from your computer and paste them into the "Music" folder on the MP3 player.
6. Once transfer is complete, safely eject the MP3 player from your computer before disconnecting the USB cable.
7. On the MP3 player, navigate to the "Music" menu and select "Update Playlist" to scan for newly added songs.

Your browser does not support the video tag.

Video 1: Instructions on how to transfer files from a PC to the AGPTEK MP3 Player.

For optimal sorting, it is recommended to rename your music files with sequential numbers (e.g., 0001-SongTitle.mp3) or alphabetical prefixes (e.g., A-SongTitle.mp3) before transferring.

5.3 Inserting a TF Card (Optional)

If you wish to expand the storage, insert a TF (microSD) card into the designated slot on the side of the player. Ensure the card is inserted correctly until it clicks into place.

BLUETOOTH 5.3

Wireless Connectivity



Figure 5: Location of the TF card slot on the MP3 Player.

6. OPERATING INSTRUCTIONS

6.1 Basic Navigation

The AGPTEK A65 features physical buttons for easy navigation:

- **Power Button:** Located on the top/side, press and hold to turn on/off.
- **Menu Button:** Access the main menu or go back.
- **Navigation Buttons (Up/Down/Left/Right):** Move through menu options or control playback.
- **Play/Pause Button:** Start or pause playback, confirm selections.
- **Volume Buttons:** Adjust audio volume.



Figure 6: Front view of the MP3 Player with button layout.

6.2 Music Playback

1. From the main menu, select "Music".
2. Choose from "All songs", "Artists", "Albums", "Genres", or "Playlists".
3. Select a song to begin playback.
4. Use the navigation buttons to skip tracks (left/right) or adjust volume (up/down).
5. Press the Play/Pause button to pause or resume.

6.3 Bluetooth Connectivity

To connect to Bluetooth headphones or speakers:

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the MP3 player, navigate to the main menu and select "Bluetooth".
3. Turn Bluetooth "On" and select "Search for Device".

4. Choose your device from the list to pair.
5. Once connected, audio will stream wirelessly to your paired device.

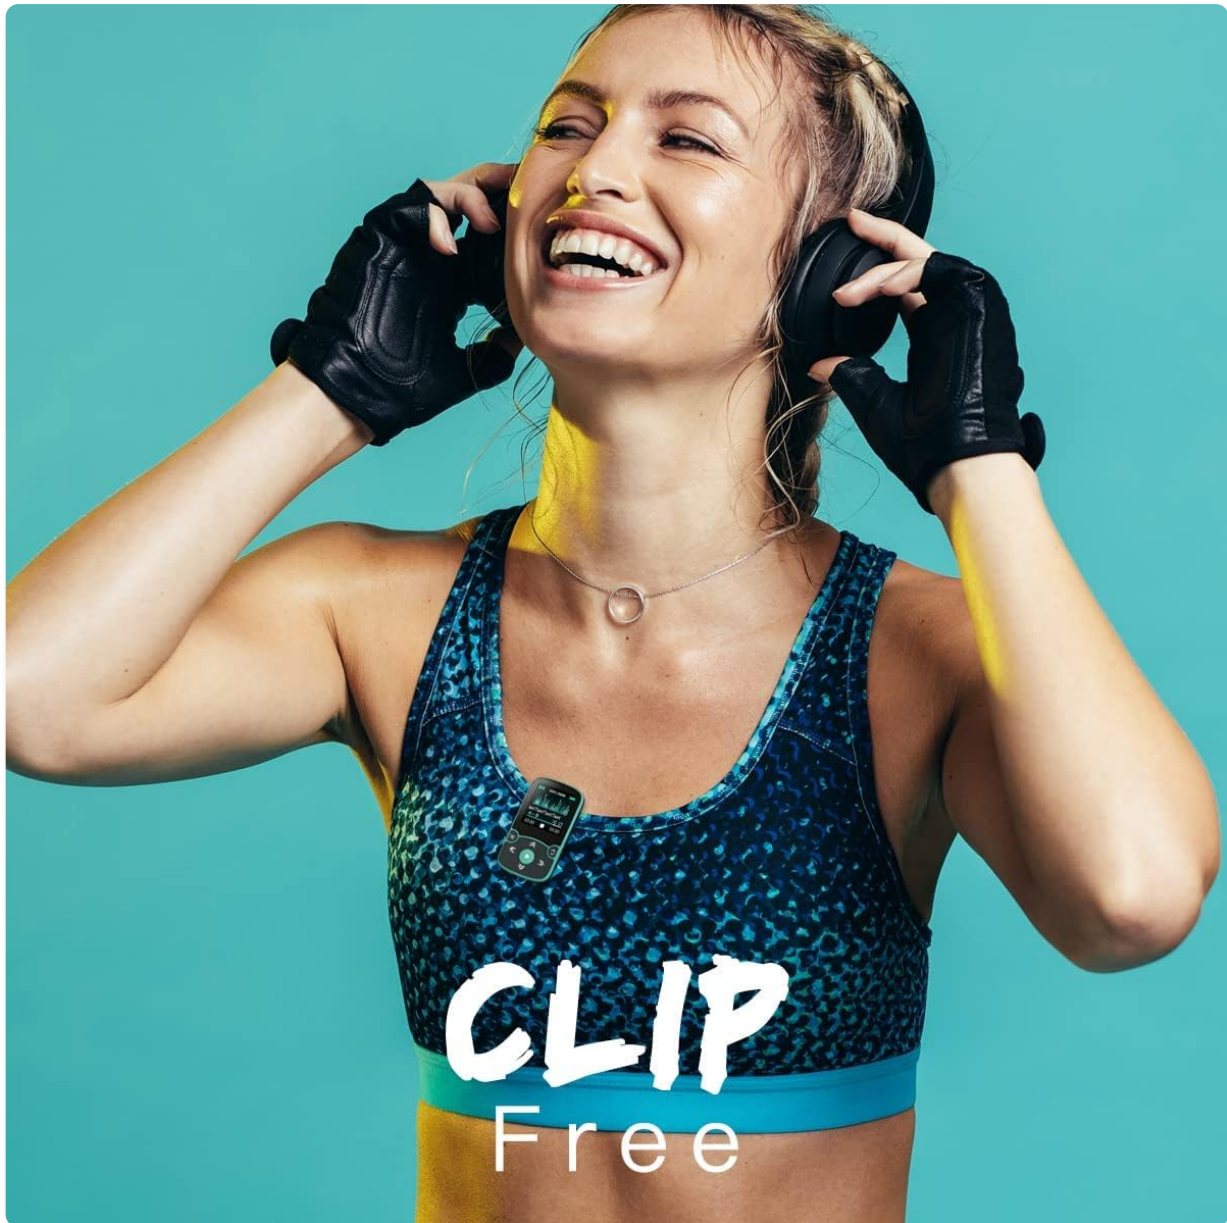 


Figure 7: Bluetooth 5.3 connectivity for wireless audio.

6.4 Pedometer Function

To use the pedometer:

1. From the main menu, select "Pedometer Mode".
2. Start your activity (running, walking). The device will record steps, distance, calories, and velocity.
3. The clip design allows for easy attachment to clothing during exercise.

PEDOMETER FUNCTION

Steps Distance Calories Velocity

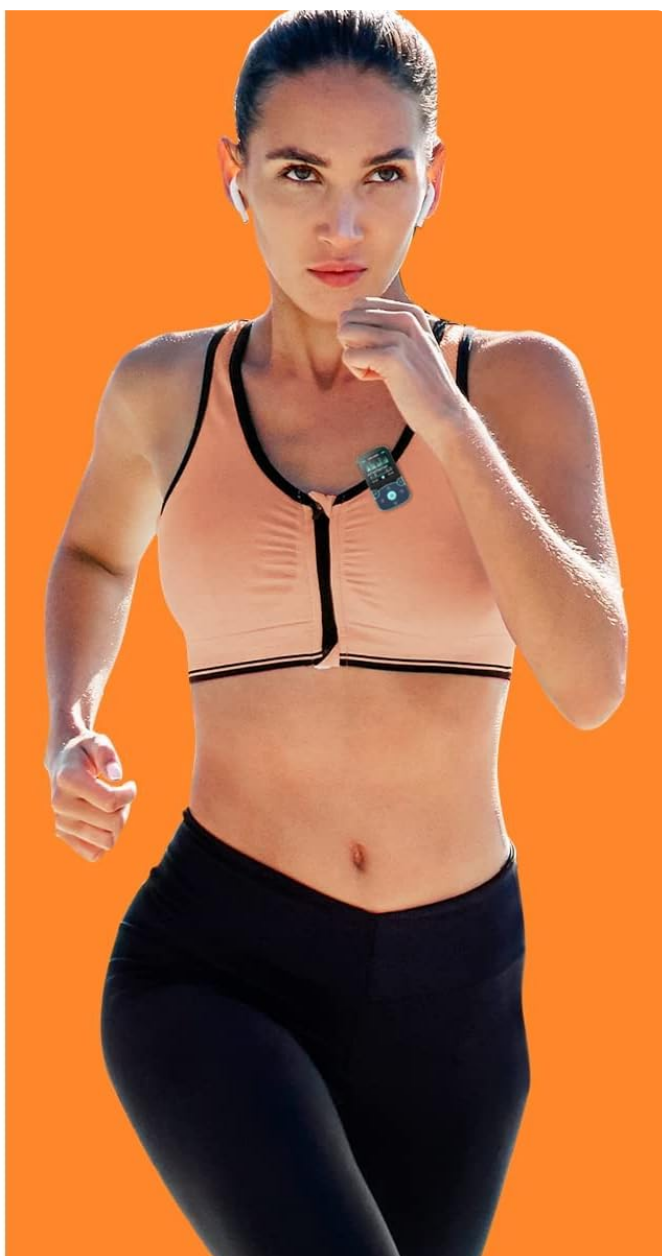 


Figure 8: Utilizing the Pedometer Function during physical activity.

7. MAINTENANCE

To ensure the longevity and optimal performance of your AGPTEK A65 MP3 Player:

- Clean the device regularly with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Keep the device away from dust, dirt, and moisture.
- Store the device in a cool, dry place when not in use.
- Avoid overcharging the battery. Disconnect the charger once the device is fully charged.
- Periodically back up your music and data to a computer to prevent loss.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; device frozen.	Charge the device for at least 10 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Cannot transfer files.	Incorrect USB connection mode; faulty cable; driver issue.	Ensure "Charge & Transfer" mode is selected on the player. Try a different USB port or cable. Restart your computer.
No sound during playback.	Volume too low; headphones not connected; incompatible file format; Bluetooth not paired.	Increase volume. Check headphone connection. Ensure music file format is supported. Re-pair Bluetooth device.
Bluetooth connection unstable.	Interference; distance from paired device.	Move closer to the paired device. Avoid obstacles. Turn off other Bluetooth devices nearby.
Songs not appearing in music list.	Playlist not updated; files in wrong folder.	Go to "Music" menu and select "Update Playlist". Ensure files are in the designated music folder.

9. SPECIFICATIONS

- **Model:** A65
- **Brand:** AGPTEK
- **Memory Storage Capacity:** 64 GB (expandable up to 128GB via TF card)
- **Connectivity Technology:** Aux, Bluetooth 5.3
- **Supported Audio Formats:** MP3, WMA, APE, FLAC, WAV, DRM, ACELP (earphones); MP3, WMA, WAVE, FLAC, APE, M4A, AAC (Bluetooth)
- **Display Technology:** LCD
- **Special Features:** E-Book (TXT), FM Radio, Video Playback, Voice Recorder, Pedometer
- **Item Weight:** Approximately 1.06 ounces (30 grams)
- **Dimensions:** Approximately 2.36 inches (length)
- **Battery:** 1 9V battery required (included)

10. WARRANTY AND SUPPORT

AGPTEK products are designed for reliability and performance. For warranty information and technical support, please refer to the official AGPTEK website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may visit the [AGPTEK Store on Amazon](#).

