



Manuals.plus /

› VBGK /

› VBGK 2 Burner Electric Cooktop User Manual

VBGK Infrared Cooktop

VBGK 2 Burner Electric Cooktop User Manual

Model: Infrared Cooktop

Brand: VBGK

1. INTRODUCTION

Thank you for choosing the VBGK 2 Burner Electric Cooktop. This appliance is designed for efficient and convenient cooking, featuring dual heating zones, precise temperature control, and multiple safety functions. Please read this manual thoroughly before operation to ensure safe and optimal use of your new cooktop.

2. SAFETY INFORMATION

To prevent injury or damage, always observe basic safety precautions when using electrical appliances. This cooktop incorporates several safety features:

- **Overheat Protection:** The cooktop will automatically shut off if it detects excessive temperatures.
- **Residual Heat Indication:** An indicator will alert you if the cooking surface is still hot after use.
- **Automatic Safety Shutoff:** The appliance is designed to shut off automatically under certain conditions for safety.
- **Child Safety Lock Function:** This feature prevents accidental operation by children.
- **Anti-slip Feet:** Ensures stability during use.

Always ensure proper ventilation and keep flammable materials away from the cooktop during operation. Do not touch the hot surface immediately after cooking.

3. PRODUCT FEATURES

- **Dual Heating Burners:** Two independent heating zones (1200W + 1200W) for simultaneous cooking. Operates on standard 110-120 Volts.
- **Precise Temperature Control:** Sensor touch controls with 9 power levels and a wide temperature range (176°F-518°F).
- **Versatile Installation:** Can be used as a built-in unit or a countertop appliance.
- **Durable Surface:** Made of black ceramic glass, which is scratch-resistant, wear-resistant, and easy to clean.

- **Integrated Timer:** Adjustable timer from 1 to 240 minutes for precise cooking duration.
- **Universal Cookware Compatibility:** Suitable for all types of flat-bottom cookware, including iron, aluminum, ceramics, stainless steel, copper, and heat-resistant glass.

CHILD SAFETY LOCK

240 Minutes Timer



Image: The VB GK 2400W Dual Electric Cooktop, highlighting its 110V plug-in capability.

Place on the Table or Embedded



Built-in Design



Countertop



Image: Demonstrates the cooktop's versatility for both countertop and built-in installation.

VBGK

2 BURNER ELECTRIC COOKTOP

Best choice for home kitchen



Image: Illustrates the wide range of flat-bottom cookware compatible with the cooktop, including pans, barbecues, casseroles, stir-fry pans, glass, saucepans, stainless steel, and enamel.

4. SETUP

4.1 Unpacking

Carefully remove the cooktop from its packaging. Inspect the appliance for any signs of damage. Retain the packaging for future transport or storage.

4.2 Placement

The VBGK Electric Cooktop can be placed directly on a countertop or integrated into a kitchen counter as a built-in unit. Ensure the surface is flat, stable, and heat-resistant. Allow adequate clearance around the cooktop for ventilation.

4.3 Power Connection

Connect the cooktop to a standard 110-120V electrical outlet. The appliance comes with a plug for convenience. Ensure

the electrical supply matches the requirements of the cooktop.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The cooktop features a touch control panel with an LED display for easy operation. Each burner has its own set of controls.

COMPATIBLE ALL COOKWARES

Any pot / pans with flat bottoms are suitable



Pan



Barbecue



Casserole



Stir-fry Pan



Glass



Saucepan



Stainless Steel



Enamel

Image: Detailed view of the touch control panel, showing buttons for Lock, Timer, Down, Up, Function, and ON/OFF.

5.2 Basic Operation

1. Place appropriate cookware on the desired heating zone. Ensure the cookware has a flat bottom and is centered on the alignment circle.
2. Press the **ON/OFF** button to power on the cooktop.
3. Select the desired heating zone.
4. Adjust the power level using the **Up (+)** or **Down (-)** buttons. There are 9 power levels available.
5. The temperature can be adjusted within a range of 176°F to 518°F.

5.3 Timer Function

The cooktop features a timer function, allowing you to set a cooking duration from 1 to 240 minutes. To activate:

1. With the cooktop on and a heating zone selected, press the **Timer** button.
2. Use the **Up (+)** or **Down (-)** buttons to set the desired cooking time.
3. The cooktop will automatically shut off once the timer expires.

5.4 Child Safety Lock

To prevent accidental changes to settings or unintended operation, activate the child safety lock:

1. Press the **Lock** button. The display will show "LOC".
2. To deactivate, press and hold the **Lock** button again until "LOC" disappears.

Your browser does not support the video tag.

Video: Demonstrates the features and operation of the VBGK Electric Cooktop, including power level settings, timer, and child lock function.

6. MAINTENANCE

The ceramic glass surface of the VBGK Electric Cooktop is designed for easy cleaning.

- Always ensure the cooktop is cool before cleaning.
- Wipe the surface with a soft cloth and mild detergent.
- Do not use abrasive cleaners, scouring pads, or sharp objects (like iron scrapers) as they can damage the glass surface.
- For stubborn stains, a specialized ceramic cooktop cleaner can be used.

Touch Control

Quick and Easy Use



Sensor Touch



240 Mins Timer



Overheat Protection



Child Lock Function



Image: Shows the easy maintenance of the black ceramic glass plate, emphasizing not to use iron scraping tools.

7. TROUBLESHOOTING

If you encounter issues with your VBGK Electric Cooktop, please refer to the following common troubleshooting steps:

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Cooktop does not power on. | Not plugged in; power outage; circuit breaker tripped. | Ensure the cooktop is securely plugged into a working outlet. Check your home's circuit breaker. |
| No heat from burner. | Incorrect cookware; child lock activated; overheat protection. | Use flat-bottomed, compatible cookware. Deactivate child lock. Allow cooktop to cool if overheat protection was triggered. |
| Display shows "LOC". | Child safety lock is active. | Press and hold the Lock button to deactivate. |
| Cooktop shuts off unexpectedly. | Overheat protection activated; timer expired. | Allow the unit to cool down. Check if the timer was set and has completed its cycle. |

If the problem persists after attempting these solutions, please contact VBGK customer support.

8. SPECIFICATIONS

| | |
|---------------------------|--|
| Brand | VBGK |
| Model Number | Infrared Cooktop |
| Color | Black |
| Material | Tempered Glass |
| Heating Elements | 2 |
| Product Dimensions | 14.17"D x 23.62"W x 3.15"H |
| Wattage | 2400 watts (1200W + 1200W) |
| Voltage | 110 Volts |
| Controls Type | Touch |
| Burner Type | Electric |
| Item Weight | 12.76 pounds (5.8 Kilograms) |
| Special Features | Automatic Shut-Off, LCD Display, Temperature Control, Timer, Child Safety Lock |

9. WARRANTY AND SUPPORT

The VBGK 2 Burner Electric Cooktop comes with a one-year warranty. For any questions, technical assistance, or warranty claims, please contact VBGK customer service. Refer to your purchase documentation for specific contact details or visit the official VBGK website.