

STRICH SPT-10X

STRICH Wireless Page Turner Pedal SPT-10X Instruction Manual

Model: SPT-10X

1. OVERVIEW

The STRICH SPT-10X Wireless Page Turner Pedal provides hands-free control for musicians, presenters, and anyone needing to navigate digital content seamlessly. This device allows you to turn pages, scroll documents, or trigger actions on compatible devices using foot pedals, enhancing focus and performance.



Image: A musician playing a digital piano with the STRICH Wireless Page Turner Pedal positioned on the floor, demonstrating hands-free page turning.

STRICH SPT-10X WIRELESS PAGE TURNING PEDAL

It applies to various terminal devices and scenarios



Image: The STRICH Wireless Page Turner Pedal is shown in multiple usage scenarios, including a musician playing guitar, a person reading on a tablet, and a presenter using it for slides.

2. WHAT'S IN THE BOX

- SPT-10X wireless page turner pedal x 1
- USB Type-C Cable x 1
- User Manual x 1

3. PRODUCT FEATURES

- **Stable Wireless Connection:** Achieves a stable connection through wireless technology with a range of up to 10 meters (about 33 feet), freeing your hands for other tasks.
- **Easy to Carry:** Features an integrated carrying handle made of flexible silicone material, making it portable.
- **Five Page Turning Modes:** Offers versatile control with modes for up/down page-turning, left/right arrow keys, up/down arrow keys, left/right mouse clicks, and spacebar/enter key functions.
- **Repeat Function:** When the REPEAT switch is turned on, you can quickly and continuously scroll through pages.
- **Versatile Compatibility:** Compatible with various applications and operating systems, including iOS, Android, HarmonyOS, and Windows. Supported apps include ForScore, YIBook, MusicStand, NextPage, Musicreader4, DD GigBook, Teleprompt, and Paperless Music.
- **Power Indicator Lights:** LED indicators show remaining battery power (Green: $\geq 60\%$, Blue: $\geq 30\%$, Red: $< 20\%$) and wireless pairing status.
- **Super Long Endurance:** Provides 60+ hours of battery life on a full charge, which takes approximately 4 hours using the included Type-C charging cable.
- **Anti-Slip Design:** Equipped with anti-slip rubber on the pedals and base for stability during use.



Image: Close-up of the STRICH Wireless Page Turner Pedal highlighting its anti-slip surface and ergonomic design.



Image: The STRICH Wireless Page Turner Pedal is shown with its integrated orange carrying handle, emphasizing its portability.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the SPT-10X pedal. Connect the included USB Type-C cable to the charging port on the pedal and to a compatible USB power source. A full charge takes approximately 4 hours. The LED indicator lights will show the battery status:


- Green: Battery \geq 60%
- Blue: Battery \geq 30%
- Red: Battery $<$ 20% (low battery warning)

4.2 Bluetooth Pairing

1. Turn on the pedal using the 'Power' switch. The LED indicator light will begin to flash, indicating it's in pairing mode or attempting to reconnect.
2. On your device (iPad, tablet, phone, or computer), go to the Bluetooth settings.
3. Look for a device named "Wireless Music Pedal" or similar (e.g., "SPT-10X").
4. Select the device to connect. Once successfully paired, the LED indicator will show a steady light or a specific flashing pattern depending on the mode.

SUPER STABLE WIRELESS SIGNAL CONNECTION

Wirelessly connects devices easily, freeing hands

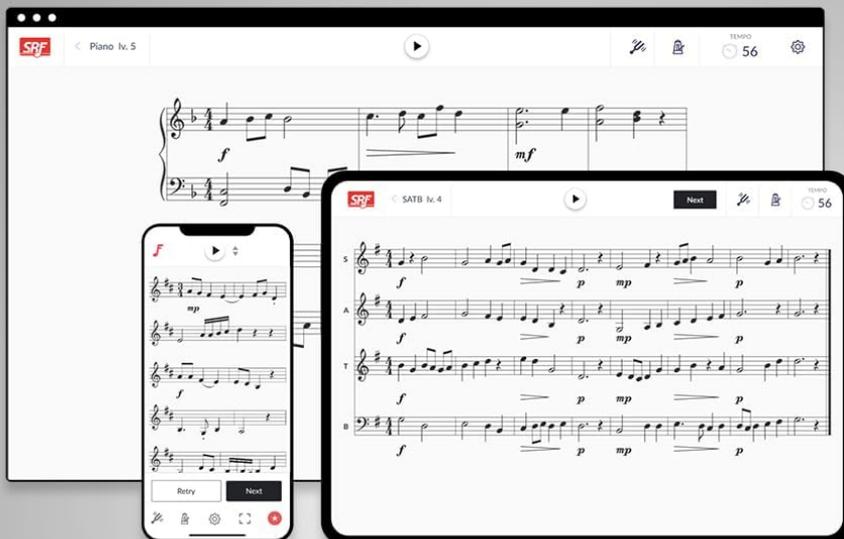

iPhone



PC



iPad



Image: The STRICH Wireless Page Turner Pedal is shown wirelessly connected to an iPhone, PC, and iPad, illustrating its stable signal connection.

5. OPERATING MODES

The SPT-10X pedal features five distinct page-turning modes, selectable via the 'Mode' button. Each mode sends different commands to your connected device, offering flexibility for various applications and content types. The 'Repeat' switch enables continuous action for certain modes.

1. **Mode 1 (Page Up/Down):** Ideal for standard document navigation.
2. **Mode 2 (Left/Right Arrow Key):** Useful for horizontal scrolling or navigating between items.
3. **Mode 3 (Up/Down Arrow Key):** Suitable for vertical scrolling within a document or application.
4. **Mode 4 (Left/Right Mouse Click):** Functions as left and right mouse clicks, useful for interactive

applications.

5. **Mode 5 (Spacebar/Enter Key):** Mimics spacebar and enter key presses, commonly used for starting/stopping media or confirming actions.

To switch between modes, press the 'Mode' button. The corresponding indicator light (1-5) will illuminate. To activate continuous page turning, slide the 'Repeat' switch to 'ON'.



Image: A detailed diagram illustrating the five different operating modes of the STRICH Wireless Page Turner Pedal, showing the corresponding pedal functions.

Video: This video demonstrates the various page-turning modes of the pedal, including page up/down, left/right arrow, and up/down arrow functions, showcasing its responsiveness with digital sheet music.

6. COMPATIBILITY

The SPT-10X Wireless Page Turner Pedal offers broad compatibility with various operating systems and applications, making it a versatile tool for different users.

6.1 Supported Operating Systems

- iOS
- Android
- HarmonyOS
- Windows

6.2 Compatible Applications

- ForScore
- YIBook
- MusicStand
- NextPage
- Musicreader4
- DD GigBook
- Teleprompt
- Paperless Music

MULTI-DEVICE COMPATIBILITY

Adapt to various OS, devices & apps



Image: The STRICH Wireless Page Turner Pedal is depicted with various device icons (iOS, Android, Windows, Phone, iPad, Mac/PC) and app logos, illustrating its wide compatibility.

7. BATTERY & CHARGING

The SPT-10X is equipped with a long-lasting rechargeable battery, providing extended usage time for your convenience.

- **Battery Life:** Up to 60+ hours of continuous use on a single charge.
- **Charging Time:** Approximately 4 hours for a full charge using the provided USB Type-C cable.
- **Battery Indicator:** LED lights on the pedal indicate the remaining battery level: Green ($\geq 60\%$), Blue ($\geq 30\%$), Red ($< 20\%$).

SUPER- STRONG ENDURANCE

60+ hours working time, fully charged in 4 hours



Image: A graphic illustrating the "Super-Strong Endurance" of the STRICH Wireless Page Turner Pedal, showing 60+ hours of working time and battery indicator colors (Green, Blue, Red).

8. MAINTENANCE

To ensure the longevity and optimal performance of your STRICH SPT-10X pedal, follow these maintenance guidelines:

- Keep the device away from moisture and high-temperature environments.
- Clean the pedal surfaces with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the pedal in a cool, dry place when not in use.

9. TROUBLESHOOTING

If you encounter issues with your SPT-10X pedal, refer to the following common troubleshooting tips:

- **Not Connecting via Bluetooth:** Ensure the pedal is powered on and its LED indicator is flashing. Check your device's Bluetooth settings to confirm it's discoverable and try re-pairing.
- **Page Turning Not Working:** Verify that the pedal is successfully paired and that you have selected the correct operating mode (1-5) for your application. Some applications may require specific mode settings.
- **Virtual Keyboard Disappears on iPad/Tablet:** When the pedal is connected as a keyboard input, some operating systems (like iOS) may disable the virtual keyboard. This is expected behavior for certain configurations and not a defect of the pedal.
- **Pedal Slides on Floor:** Ensure the anti-slip rubber pads on the bottom of the pedal are clean and intact. Place the pedal on a suitable surface for optimal grip.
- **Battery Drains Quickly:** Ensure the pedal is fully charged (4 hours). If the issue persists, contact customer support.

10. SPECIFICATIONS

Brand	STRICH
Model Name	SPT-10X
Color	Orange
Item Dimensions (L x W x H)	10.98 x 1.73 x 5.2 inches (27.90 x 13.20 x 4.40 cm)
Power Source	Battery Powered
Connectivity Technology	Wireless Connection
Special Features	Wireless Connection Page Turning, Multiple Control Modes, Wide Compatibility
Supported Software	ForScore, YIBook, MusicStand, NextPage, Musicreader4, DD GigBook, Teleprompt, Paperless Music



Image: The STRICH Wireless Page Turner Pedal is shown with its dimensions (25 cm / 9.84 in length, 3 cm / 1.18 in height) highlighted.

11. WARRANTY & SUPPORT

- **Warranty:** The STRICH SPT-10X pedal comes with a one-year warranty.
- **Customer Care:** For any inquiries or support needs, contact STRICH customer care. Expect a prompt response via email chat assistant within 24 hours.
- **Return Policy:** Enjoy a 30-day free return policy.

CUSTOMER CARE



Prompt Response

E-mail chat assistant response
within 24 hours



Warranty Services

Up to 12-month warranty



Return Policy

30-day free return

Image: An illustration detailing STRICH customer care services, including prompt response, warranty services, and return policy.