



Manuals.plus /

- › viqee /
- › viqee 5G Android 14 Smartphone Model I24 Ultra User Manual

viqee I24 Ultra

viqee 5G Android 14 Smartphone User Manual

MODEL: I24 ULTRA

Introduction

This manual provides essential instructions for setting up, operating, and maintaining your viqee I24 Ultra 5G Android 14 Smartphone. Please read this manual carefully to ensure proper use and to maximize the device's capabilities. Keep this manual for future reference.



Image: viquee I24 Ultra 5G Android 14 Smartphone, shown in blue with a stylus.

1. Getting Started

1.1 Package Contents

Verify that all items are present in the package:

- viquee I24 Ultra Smartphone
- Protective Case
- USB-C Data Cable
- Earphones
- User Manual (this document)
- SIM Tray Ejector Pin

PACKING LIST



Smart phone



Phone case




USB-C cable




Screen protector



User manual

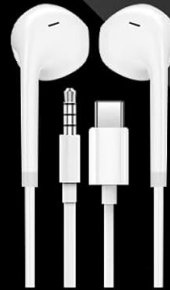

Headphone

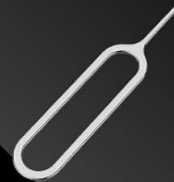

SIM Tray Ejector

Image: Visual representation of the items included in the product package, such as the smartphone, case, cable, earphones, user manual, and SIM ejector tool.

1.2 SIM and SD Card Installation

The device supports dual SIM cards and a TF (microSD) card for expandable storage. The SIM/TF slot is shared.

1. Locate the SIM tray on the side of the phone.
2. Insert the SIM tray ejector pin into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM cards and/or TF card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the phone until it clicks into place.

Dual-SIM & Speicherkarte



Image: Illustration showing the dual SIM card and microSD card slots on the phone's tray.

1.3 Initial Power On

Press and hold the Power button (usually on the right side) until the viquee logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account login.

1.4 Security Setup (Fingerprint & Face ID)

To protect your privacy, set up fingerprint and face recognition unlocking:

1. Navigate to **Settings > Security > Fingerprint Unlock or Face Unlock**.
2. Follow the on-screen instructions to register your fingerprint(s) or face.
3. It is recommended to also set up a PIN, pattern, or password as a backup unlock method.

2. Basic Operation

2.1 Navigation

Your viquee I24 Ultra runs on Android 14. Navigate the interface using touch gestures:

- **Tap:** Select an item or open an app.

- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

6,8-Zoll-HD-LCD

Größerer Bildschirm Für bessere Bildqualität



6,8 zoll **8+256GB** **95 %
Seitenverhältnis**

Image: The 6.8-inch HD display of the viquee I24 Ultra smartphone, showcasing its large screen for clear visuals.

2.2 Camera Usage

The viquee I24 Ultra features a powerful camera system with 50MP and 108MP rear cameras. To take photos or videos:

1. Open the Camera app.
2. Select your desired mode (Photo, Video, Portrait, etc.).
3. Tap the shutter button to capture.

108 million HD rear cameras

Our smartphones are equipped with dual core sensors and artificial intelligence. After fast dualcamera, combined with Rubik's Cube technology, it interacts with AI scene cameras, AI backlit photographyAI portrait composition and other functions, making your phone your professional photography partner.

The advertisement features a central image of a gold smartphone with its rear camera module highlighted. To the left, a detailed view of the camera lenses is shown. Below the smartphone, three small inset images demonstrate AI portrait capabilities: a woman in a field, a man by a window, and a woman in a black blazer. At the bottom left, three icons represent 'Thin face', 'Beauty', and 'Whitening' features.

Image: Close-up of the smartphone's rear camera module, highlighting the 108MP sensor and AI scene detection capabilities.

50 million HD rear cameras



Image: Another view of the smartphone's rear camera, emphasizing the 50MP sensor for high-resolution photography.

2.3 Battery Management

The device is equipped with a large 6800mAh battery. To optimize battery life:

- Adjust screen brightness.
- Close unused apps running in the background.
- Enable Battery Saver mode when needed (**Settings > Battery > Battery Saver**).
- Avoid extreme temperatures.

6800mAh

Ultralange Akkulaufzeit

Superlange Akkulaufzeit dank 6800 mAh-Akku mit hoher Kapazität und Energiespartechnologie



Image: The smartphone connected to a charger, illustrating its 6800mAh battery capacity and long-lasting power.

2.4 Connectivity

The vique I24 Ultra supports various connectivity options:

- **5G Cellular:** For fast mobile data. Ensure your SIM card supports 5G and you are in a 5G coverage area.
- **Wi-Fi:** Connect to wireless networks for internet access. Go to **Settings > Network & internet > Wi-Fi**.
- **Bluetooth:** Pair with wireless headphones, speakers, or other devices. Go to **Settings > Connected devices > Bluetooth**.
- **GPS:** For location services and navigation.
- **FM Radio:** Use the included earphones as an antenna for FM radio.

5G Bands Global Version

With 5G connectivity, download speeds are faster, latency is lower, and the overall experience is more seamless.



Image: A visual representation of 5G network capabilities, indicating fast download speeds and low latency for the smartphone.

2.5 Educational App

The smartphone includes a pre-installed educational app designed to enhance hand-eye coordination, color and shape recognition, fine motor skills, and memory. Explore activities such as drawing, cartoon animals, and alphabet learning within the app.



Image: Icons representing drawing, notes, and precision, suggesting features related to the educational app or stylus functionality.

3. Care and Maintenance

3.1 Charging

Use only the provided USB-C data cable and a compatible charger to charge your device. Avoid using damaged cables or chargers. Do not expose the phone to extreme heat or cold during charging.

3.2 Cleaning

To clean your phone, gently wipe it with a soft, lint-free cloth. Avoid using harsh chemicals, abrasive materials, or excessive moisture, as these can damage the screen or internal components.

3.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

4. Troubleshooting

If you encounter issues with your device, try the following common troubleshooting steps:

- **Device not powering on:** Ensure the battery is charged. Connect the phone to a charger for at least

15 minutes, then try powering it on again.

- **Apps crashing or freezing:** Close the problematic app and reopen it. If the issue persists, restart the phone.
- **Poor network signal:** Check if your SIM card is properly inserted. Move to an area with better network coverage. Restart the phone.
- **Touchscreen unresponsive:** Restart the phone by holding down the Power button for about 10-15 seconds.
- **Battery draining quickly:** Review battery usage in **Settings > Battery** to identify power-hungry apps. Adjust screen brightness and disable unnecessary features like GPS or Bluetooth when not in use.

For more complex issues, refer to the manufacturer's support website or contact customer service.

5. Technical Specifications

Feature	Specification
Model Name	I24 Ultra
Operating System	Android 14
Screen Size	6.8 Inches HD Display
Memory Storage Capacity	256 GB
RAM	8 GB (implied from 8+256GB)
Battery Capacity	6800 mAh
Rear Camera	50MP + 108MP
Cellular Technology	5G
CPU Model	MTK 8121
CPU Speed	2 GHz
Connectivity Technologies	Ethernet, Wireless (Wi-Fi, Bluetooth, GPS, FM)
Dual SIM	Yes (Dual SIM Dual Standby)
Security Features	Fingerprint Unlock, Face ID
Item Weight	3.52 ounces

6. Warranty and Support

Warranty information for your viquee I24 Ultra Smartphone is typically provided in a separate warranty card included with your product or can be found on the official viquee website. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or to inquire about warranty services, please visit the official viquee brand store or contact their customer service department. You can find more information at the [viquee Store on Amazon](#).

