

[Manuals.plus](#) /

> [Asrcs](#) /

> Asrcs X13 Dog Training Collar User Manual

Asrcs X13

Asrcs X13 Dog Training Collar User Manual

Model: X13

1. INTRODUCTION

Thank you for choosing the Asrcs X13 Dog Training Collar. This device is designed to assist in training your dog through various humane and effective modes. It features a remote control, an IPX7 waterproof receiver collar, and four distinct training modes: beep, vibration, adjustable shock, and a flashlight. This manual provides essential information for safe and effective use, ensuring a positive training experience for both you and your dog.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the training collar. Improper use can lead to physical or psychological harm to your dog.

- **Not for Aggressive Dogs:** Do not use this product on aggressive dogs. If your dog is aggressive, consult a professional dog trainer.
- **Skin Irritation:** Avoid leaving the collar on the dog for more than 12 hours per day. Prolonged wear or improper fit can cause skin irritation or pressure necrosis. Regularly check the contact area for signs of redness or sores.
- **Proper Fit:** The collar should fit snugly but not too tightly. You should be able to fit two fingers comfortably between the collar and your dog's neck.
- **Supervision:** Always supervise your dog during training sessions.
- **Age and Health:** This collar is suitable for dogs weighing 8-150 lbs. Do not use on puppies under 6 months old or dogs with health issues. Consult a veterinarian if unsure.
- **Humane Use:** The shock mode should be used as a last resort and at the lowest effective level. Prioritize beep and vibration modes for training.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Handheld Remote
- 1 x Receiver Collar
- 1 x Adjustable Collar Strap

- 1 x Test Light Tool
- 1 x 2-in-1 USB Charging Cable
- 1 x Wrist Strap
- 1 x User Manual (this document)
- 1 x USB C to USB Adapter
- 2 x Long Contact Points
- 2 x Short Contact Points
- 4 x Conductive Silicone Caps

4. PRODUCT OVERVIEW

4.1 Components

The Asrcs X13 Dog Training Collar system consists of a remote transmitter and a receiver collar.



Image: The Asrcs X13 remote control and receiver collar. The remote features a digital display and control buttons, while the receiver is a compact unit attached to an adjustable collar strap.

4.2 Training Modes

The system offers four distinct training modes to address various behavioral needs:

- **Beep Mode:** Emits an audible tone.
- **Vibration Mode:** Provides a tactile vibration (0-9 adjustable levels).
- **Shock Mode:** Delivers a static stimulation (0-99 adjustable levels).
- **Flashlight:** Built-in light for visibility in low-light conditions.

Professional Dog Trainer Debugging Products

(Adjustable Collar Fits 8lbs-150lbs Dogs)

4 Training Modes



Beep Mode



Vibrate Mode
(0-9 levels)



Shock Mode
(0-99 levels)



Flashlight



Image: A person training a German Shepherd, illustrating the four available training modes: Beep, Vibrate (0-9 levels), Shock (0-99 levels), and Flashlight.

5. SETUP

5.1 Charging the Devices

Before initial use, fully charge both the remote and the receiver collar.

1. Connect the 2-in-1 USB charging cable to both the remote and the receiver collar.
2. Plug the USB cable into a standard USB power adapter (not included), power bank, or computer USB port.
3. Charging typically takes approximately 2 hours. The indicator lights will change to show a full charge.

Battery Life: The remote offers up to 180 days of standby time, and the receiver collar offers up to 35 days of standby time on a single charge.

Long Lasting Battery Life

Up to 180 days standby time

(Only needs to be charged for 2 hours)

Remote: Up to
180 Days
Standby time



Receiver: Up to
35 Days
Standby time



USB Charging Cable

Easily Charge Via Phone Charger, Power bank, pc



Image: Visual representation of the remote and receiver charging via USB, highlighting the long standby times (180 days for remote, 35 days for receiver) and the 2-hour fast charging capability.

5.2 Attaching Contact Points and Silicone Caps

Select the appropriate contact points (long for thick-coated dogs, short for thin-coated dogs) and attach the conductive silicone caps for comfort and safety.

5.3 Fitting the Receiver Collar

Proper fit is crucial for the effectiveness of the collar and your dog's comfort.

1. Place the receiver collar around your dog's neck, ensuring the contact points are positioned underneath, touching the skin.
2. Adjust the strap so it is snug but not tight. You should be able to fit two fingers comfortably between the collar and your dog's neck.
3. Trim any excess strap if necessary, ensuring the cut end is sealed to prevent fraying.

The adjustable collar strap fits dogs from 8 lbs to 150 lbs, with a neck circumference range of 6 to 28.5 inches.

Adjustable Collar Fits All Sizes Dogs

8LBS-150LBS



Adjustable Collar (6-28.5inches)



Adjustable Collar for 8 lbs-150 lbs dogs

Image: A visual guide demonstrating the adjustable nature of the collar, suitable for a wide range of dog sizes from 8 lbs to 150 lbs, with a collar length of 6-28.5 inches.

5.4 Pairing the Remote and Receiver

The remote and receiver are typically pre-paired. If re-pairing is needed:

1. Turn on the remote and the receiver collar.
2. Press and hold the power button on the receiver collar until the indicator light flashes rapidly.
3. Within 10 seconds, press a mode button (Beep, Vibration, or Shock) on the remote. The receiver light will stop flashing, indicating successful pairing.

4. If training multiple dogs, repeat the process for each additional receiver, selecting a different channel (A, B, C, D) on the remote for each dog. The remote supports up to four dogs.

6. OPERATING THE DEVICE

6.1 Remote Control Functions

The remote control allows you to activate the training modes from a distance.

- **Mode Buttons:** Dedicated buttons for Beep, Vibration, and Shock modes.
- **Level Adjustment:** Use the up/down buttons to adjust vibration (0-9) and shock (0-99) levels.
- **Channel Selection:** Switch between channels (A, B, C, D) to control multiple receiver collars.
- **Flashlight Button:** Activates the built-in flashlight.
- **Keypad Lock:** A one-key locking feature prevents accidental activation of modes.

The remote has an effective range of up to 2000 feet (approximately 600 meters) in open areas.

2000 FT

REMOTE RANGE

Easy for outdoors



One-Key Locking, (Prevent incorrect operation)



Image: The remote control in use, demonstrating its 2000ft range for outdoor training and the one-key locking mechanism to prevent unintended operations.

6.2 Waterproof Receiver

The receiver collar is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes. This allows your dog to play in the rain, splash, or even swim without damaging the device.

100% WATERPROOF RECEIVER

Let your dog play freely in the water



Image: A dog swimming with the waterproof receiver collar, illustrating its IPX7 rating. Below, a dog wearing the collar is shown with the remote's flashlight function activated in the dark.

7. MAINTENANCE

Proper maintenance ensures the longevity and performance of your training collar.

- **Cleaning:** Clean the receiver collar and remote with a damp cloth. The manufacturer specifies 'Clean with water' for the

collar. Ensure contact points are free of dirt and debris.

- **Storage:** Store the device in a cool, dry place when not in use.
- **Battery Care:** Recharge the batteries regularly, even if not in frequent use, to maintain battery health.
- **Inspect for Wear:** Periodically check the collar strap and contact points for any signs of wear or damage. Replace components if necessary.

8. TROUBLESHOOTING

If you encounter issues with your Asrcs X13 Dog Training Collar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Collar not working/no response	Low battery; Not paired; Out of range; Incorrect mode/level selected.	Charge both devices; Re-pair remote and receiver; Move closer to the dog; Check mode and adjust levels.
Dog not responding to stimulation	Collar too loose; Contact points not touching skin; Dog's coat too thick; Level too low.	Adjust collar for snug fit; Ensure contact points are making contact; Use longer contact points; Increase stimulation level gradually.
Remote display is blank	Low battery; Remote is off.	Charge the remote; Turn on the remote.
Accidental activation of modes	Keypad not locked.	Utilize the one-key locking feature on the remote.

If the problem persists after attempting these solutions, please contact Asrcs customer support for further assistance.

9. SPECIFICATIONS

Feature	Detail
Model Number	X13
Item Weight	8.4 ounces
Item Dimensions (LxWxH)	3.8 x 2 x 1 inches (Remote)
Batteries	2 Lithium Polymer batteries (included)
Material	Plastic
Waterproof Rating	IPX7 (Receiver Collar)
Remote Range	Up to 2000 feet
Training Modes	Beep, Vibration (0-9 levels), Shock (0-99 levels), Flashlight
Adjustable Collar Size	6-28.5 inches

Feature	Detail
Suitable Dog Weight	8-150 lbs
Manufacturer	Asrcs
Specific Uses	Dog training, correcting barking, chewing, biting, general obedience.

10. CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your Asrcs X13 Dog Training Collar, please refer to the contact information provided with your purchase or visit the official Asrcs website. Our customer support team is available to help you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question