

Asrcs X13

Asrcs Dog Training Collar X13 User Manual

Model: X13 | Brand: Asrcs

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Asrcs Dog Training Collar Model X13. This system is designed to assist in training dogs from 8 to 150 lbs, offering a range of humane and effective correction modes. Please read this manual thoroughly before operating the device to ensure proper usage and the well-being of your pet.

The Asrcs Dog Training Collar features a remote control with an impressive 2000FT range, allowing for greater freedom during training sessions. It includes four distinct training modes: beep, vibration (adjustable 0-9 levels), static shock (adjustable 0-99 levels), and a flashlight. The receiver collar is IPX7 waterproof, making it suitable for various outdoor conditions. Both the remote and receiver boast long-lasting battery life with quick charging capabilities.

2. PACKAGE CONTENTS

- 1 x Handheld Remote
- 1 x Receiver Collar
- 1 x Adjustable Collar Strap
- 1 x Test Light Tool
- 1 x 2-in-1 USB Charging Cable
- 1 x Wrist Strap
- 1 x User Manual (this document)
- 1 x USB C to USB Adapter
- 2 x Long Contact Points
- 2 x Short Contact Points
- 4 x Conductive Silicone Caps

3. PRODUCT OVERVIEW

The Asrcs Dog Training Collar system consists of a remote transmitter and a receiver collar. The remote allows you to control the training modes and intensity levels, while the receiver collar delivers the chosen correction to your dog.



Figure 1: Asrcs Dog Training Collar Remote and Receiver

3.1 Key Features

- **Four Training Modes:** Beep, Vibration (0-9 levels), Static Shock (0-99 levels), and Flashlight.
- **Extended Remote Range:** Up to 2000 feet for flexible training.
- **IPX7 Waterproof Receiver:** Ensures durability in wet conditions.
- **Long-Lasting Battery:** Remote standby up to 180 days, receiver standby up to 35 days, with 2-hour fast charging.
- **Adjustable Collar:** Suitable for dogs weighing 8-150 lbs, with an adjustable strap length of 6-28.5 inches.
- **Dual Channel Support:** Capable of training up to four dogs simultaneously with one remote.

4. SETUP GUIDE

4.1 Charging the Devices

Before first use, fully charge both the remote and the receiver collar. Use the provided 2-in-1 USB charging cable. The charging port on the receiver is located on the side, and on the remote, it's typically at the bottom. A full charge usually takes approximately 2 hours.

Long Lasting Battery Life

Up to 180 days standby time

(Only needs to be charged for 2 hours)

Remote:Up to
180Days
Standby time



Receiver:Up to
35 Days
Standby time



USB Charging Cable

Easily Charge Via Phone Charger,Power bank ,pc



Figure 2: Charging the Remote and Receiver

4.2 Attaching Contact Points

Select the appropriate contact points (short or long) based on your dog's coat length. For dogs with shorter coats, use the short contact points. For dogs with longer or thicker coats, use the long contact points to ensure proper contact with the skin. Screw the chosen contact points into the receiver collar. For added comfort and to prevent skin irritation, place the conductive silicone caps over the metal contact points.

Adjustable Collar Fits All Sizes Dogs

8LBS-150LBS



Adjustable Collar (6-28.5inches)



Adjustable Collar for 8 lbs-150 lbs dogs

Figure 3: Adjustable Collar and Contact Points

4.3 Fitting the Collar

The collar should fit snugly but not too tightly. You should be able to fit two fingers comfortably between the collar strap and your dog's neck. Ensure the contact points touch your dog's skin. A loose fit may cause inconsistent corrections and

potential skin irritation due to rubbing. The adjustable strap accommodates neck sizes from 6 to 28.5 inches, suitable for dogs from 8 to 150 lbs.

4.4 Pairing the Remote and Receiver

Typically, the remote and receiver come pre-paired. If re-pairing is necessary:

1. Turn on the receiver collar by pressing and holding its power button until the indicator light illuminates.
2. Turn on the remote by pressing any button.
3. Press and hold the power button on the receiver collar again for about 3 seconds until the indicator light flashes rapidly.
4. Within 10 seconds, press the 'Y' (Vibration) button on the remote. The receiver's indicator light will stop flashing and remain solid, indicating successful pairing.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

- **Receiver Collar:** Press and hold the power button on the receiver until the indicator light turns on. To turn off, press and hold the power button until the light turns off.
- **Remote:** The remote typically activates when any button is pressed. It may enter a sleep mode to conserve battery and wake up with a button press.

5.2 Training Modes

The remote offers four training modes:

Professional Dog Trainer Debugging Products

(Adjustable Collar Fits 8lbs-150lbs Dogs)

4 Training Modes



Beep Mode



Vibrate Mode
(0-9 levels)



Shock Mode
(0-99 levels)



Flashlight



Figure 4: Training Modes Overview

- **Beep Mode:** Delivers an audible tone. Often used as a warning or a positive reinforcement signal.
- **Vibration Mode:** Delivers a non-harmful vibration. Adjustable from 0-9 levels.
- **Static Shock Mode:** Delivers a static correction. Adjustable from 0-99 levels. Use with caution and always start at the lowest effective level.
- **Flashlight:** The remote includes a built-in flashlight for visibility in low-light conditions.

5.3 Adjusting Levels

Use the '+' and '-' buttons on the side of the remote to adjust the intensity levels for Vibration (0-9) and Static Shock (0-99). The current level will be displayed on the remote's screen.

5.4 Flashlight Function

To activate the emergency flashlight on the remote, press and hold the designated flashlight button for 3 seconds. Repeat to turn off.

100% WATERPROOF RECEIVER
Let your dog play freely in the water

Splash Rain Bathing

Emergency Light

The image is a composite advertisement. The top half features a dog swimming underwater, holding a yellow duck. Overlaid on this is a circular inset showing a black waterproof receiver collar. Below the dog are three circular icons: a splash for 'Splash', a cloud with rain for 'Rain', and a shower head for 'Bathing'. The bottom half shows a hand holding a black remote control, which has a small screen displaying various icons. A bright beam of light from the remote's flashlight function is directed at a dog sitting in the dark. A flashlight icon and the text 'Emergency Light' are positioned below the beam.

Figure 5: IPX7 Waterproof Receiver and Flashlight

5.5 Multi-Dog Training (Dual Channel)

The remote supports training up to four dogs. Use the channel selection button (often labeled A/B/C/D or with dog icons) to switch between different receiver collars. Ensure each receiver is paired to a unique channel on the remote.

The image is a composite of three parts. The top part shows a small dog running in a grassy field, with a hand holding a black remote control. The remote has a blue screen displaying various icons and a blue light. A blue signal icon is shown between the dog and the remote. The middle part shows a dog jumping in a grassy field. The bottom part shows a close-up of the remote control's buttons, including a button labeled 'A=D' and a button with a dog icon.

2000 FT REMOTE RANGE
Easy for outdoors

One-Key Locking, (Prevent incorrect operation)

Figure 6: Remote Control Range and Multi-Dog Channels

6. MAINTENANCE

6.1 Cleaning

The receiver collar can be cleaned with water due to its IPX7 waterproof rating. Regularly wipe down the collar strap and receiver with a damp cloth. Ensure contact points are free of debris. For the remote, use a dry or slightly damp cloth to clean the surface.

6.2 Battery Care

To prolong battery life, avoid fully discharging the devices frequently. Charge them when the battery indicator shows low power. Store the devices in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your Asrcs Dog Training Collar, consider the following:

- **No response from receiver:** Check if both the remote and receiver are turned on and fully charged. Ensure they are properly paired. Verify the contact points are making proper contact with your dog's skin.
- **Correction seems too weak/strong:** Adjust the intensity level using the '+' and '-' buttons on the remote.
- **Remote not working:** Check battery level. Ensure no buttons are stuck.
- **Collar not holding charge:** Ensure the charging cable is securely connected. Try a different USB power source.

For persistent issues, refer to the full troubleshooting section in the comprehensive user manual or contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	X13
Brand	Asrcs
Item Weight	8.8 ounces
Item Dimensions (LxWxH)	3.8 x 2 x 1 inches
Batteries	2 Lithium Polymer batteries (included)
Waterproof Rating	IPX7 (Receiver)
Remote Range	Up to 2000 feet
Training Modes	Beep, Vibration (0-9 levels), Static Shock (0-99 levels), Flashlight
Adjustable Collar Size	6-28.5 inches
Recommended Dog Weight	8-150 lbs
Material	Plastic
Care Instructions	Clean with water

9. SAFETY INFORMATION

- This device is intended for dog training purposes only. Do not use it on aggressive dogs or for any other purpose.
- Do not leave the receiver collar on your dog for more than 12 hours per day. Prolonged wear can lead to skin irritation.
- Regularly check your dog's neck for any signs of skin irritation, redness, or sores. If irritation occurs, discontinue use and consult a veterinarian.
- Always start with the lowest effective correction level and gradually increase if necessary. The goal is to get your dog's attention, not to punish them.
- Ensure children do not play with or operate the training collar.
- Avoid using the static shock mode on puppies under 6 months old.
- Do not use this product if your dog has any open wounds or skin conditions on its neck.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question